


MODEL 22605x50E

REPAIR PARTS

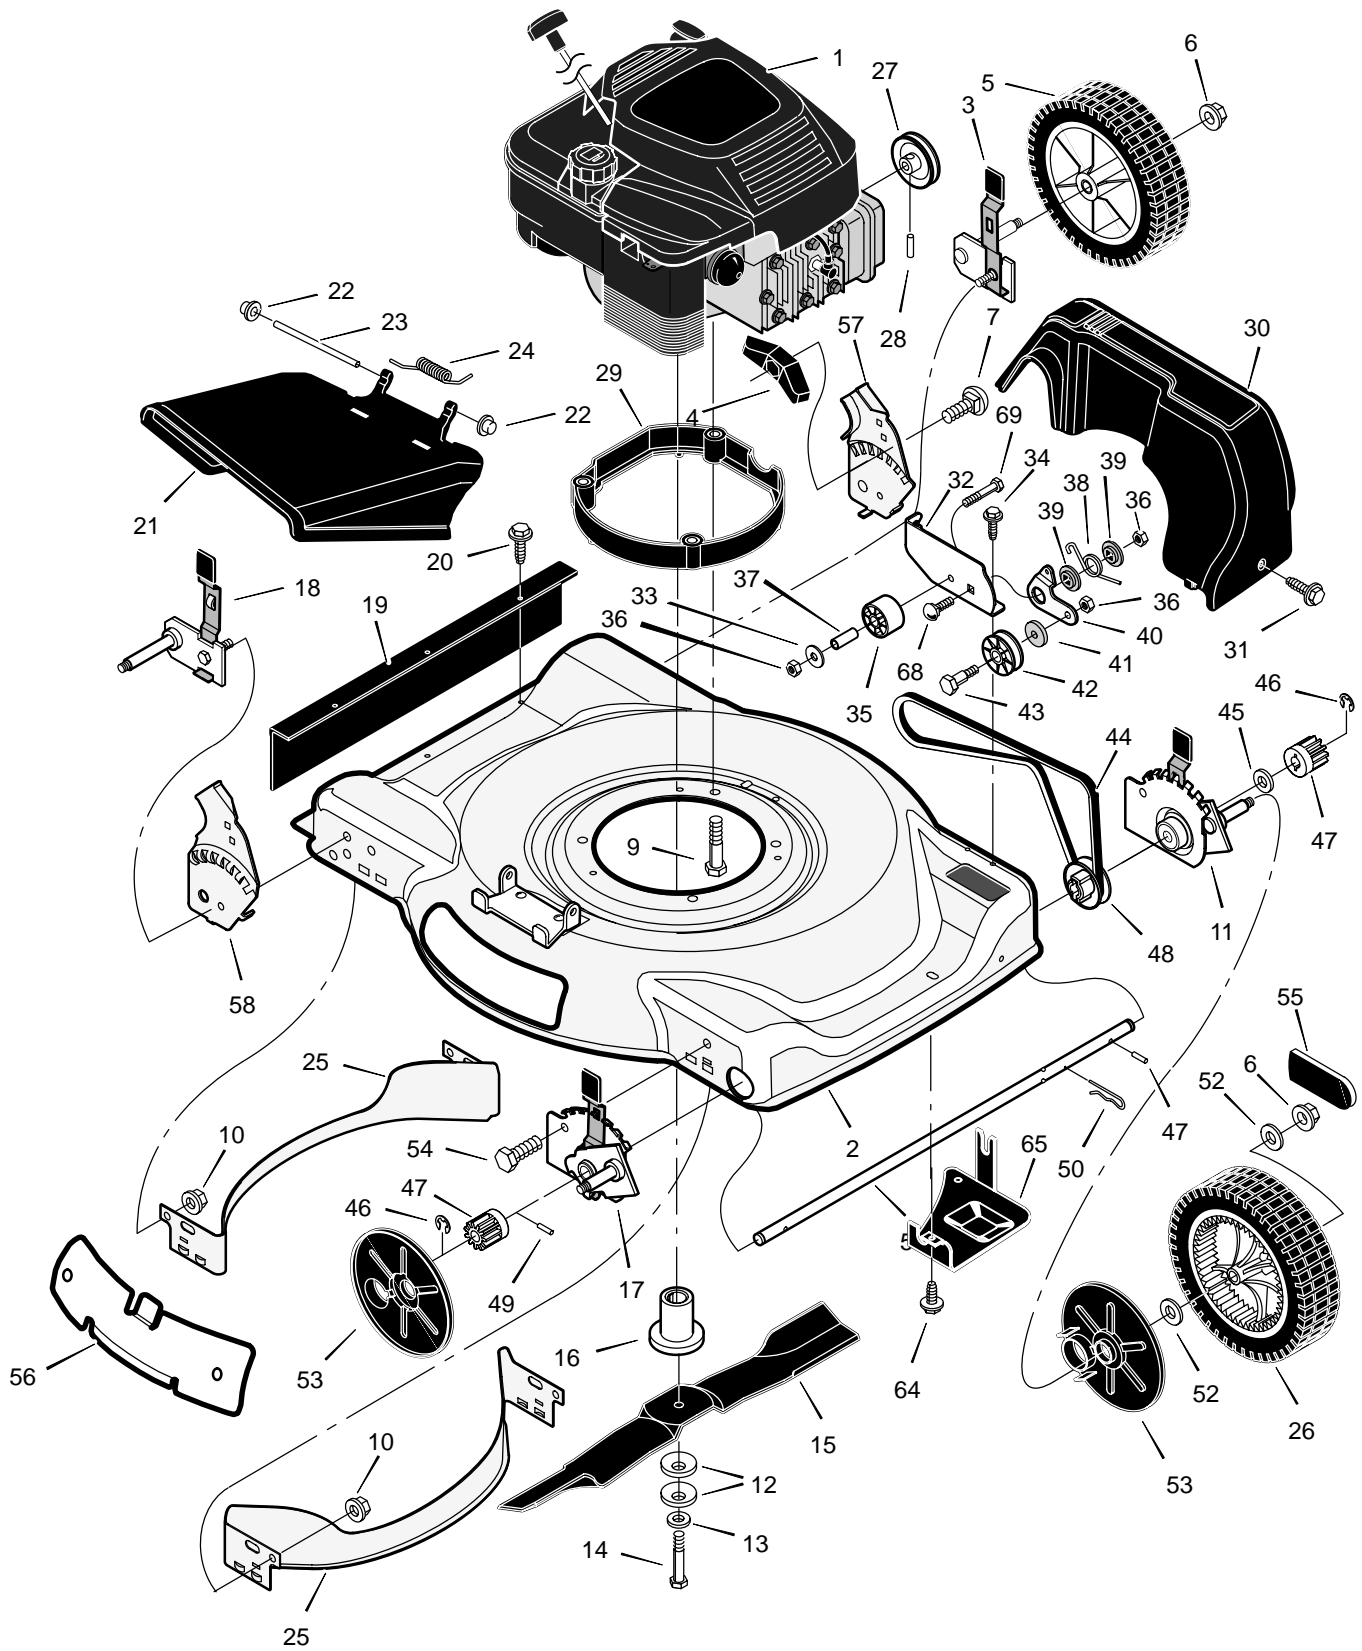


MODEL 22605x50E

REPAIR PARTS

1	Engine *	-----	35	Idler, Backside	71778
2	Housing	776023	36	Locknut	15x43
3	Height Adjuster, Left Rear	672641	37	Bearing	71793
4	Knob	71495	38	Spring	166x45
5	Wheel and Tire, Rear	71132	39	Spacer	71789
6	Locknut, Flange	15x84	40	Arm, Pivot	1101121 Z
7	Bolt, Carriage	2x81	41	Spacer	71788
9	Bolt, Engine	25x11	42	Pulley, Idler	71779
10	Nut	15x68	43	Bolt, Shoulder	9x50
11	Height Adjuster, Left Front	672643	44	Belt, Briggs	37x100
12	Washer, Belleville	17x137	45	Washer	17x186
13	Washer	17x124	46	Ring, Retainer	11x16
14	Bolt, Hex	1x153	47	Gear, Pinion	71792
15	Blade	1101120E701	48	Pulley	71791
16	Adapter, Blade	672503	49	Pin, Drive	43629
17	Height, Adjuster, Right Frt.	672642	50	Pin, Hair	31x9
18	Height, Adjuster, Right Rr.	672640	51	Axle	672508
19	Guard, Rear	672738	52	Washer	17x169
20	Screw	26x245	53	Cover, Dust	71780
21	Deflector, Chute	672421	54	Bolt	1x85
22	Push-On Cap	28x42	55	Hub Cap	43615
23	Pin, Pivot	215x11 Z	56	Plate, Mulch	672422 Z
24	Spring	166x5	57	Bracket, Left Handle	1101303E700
25	Baffle	672744E701	58	Bracket, Right Handle	1101302E700
26	Wheel and Tire, Drive	71133	59	Screw	26x289
27	Pulley	71434	60	Bolt	1x120
28	Pin, Spring	32x64	62	Washer	17x45
29	Base, Engine	672671	64	Screw	26x288
30	Cover, Belt (Black)	1101025	65	Shield, Debris	1101026E701
31	Screw	26x259	68	Bolt, Carriage	2x86
32	Bracket, Idler Support	1101240 Z	69	Bolt	1x81
33	Washer	17x45	-	Book, Instruction	F- 010476L
34	Screw	26x263			

MODEL 22605x50E

REPAIR PARTS

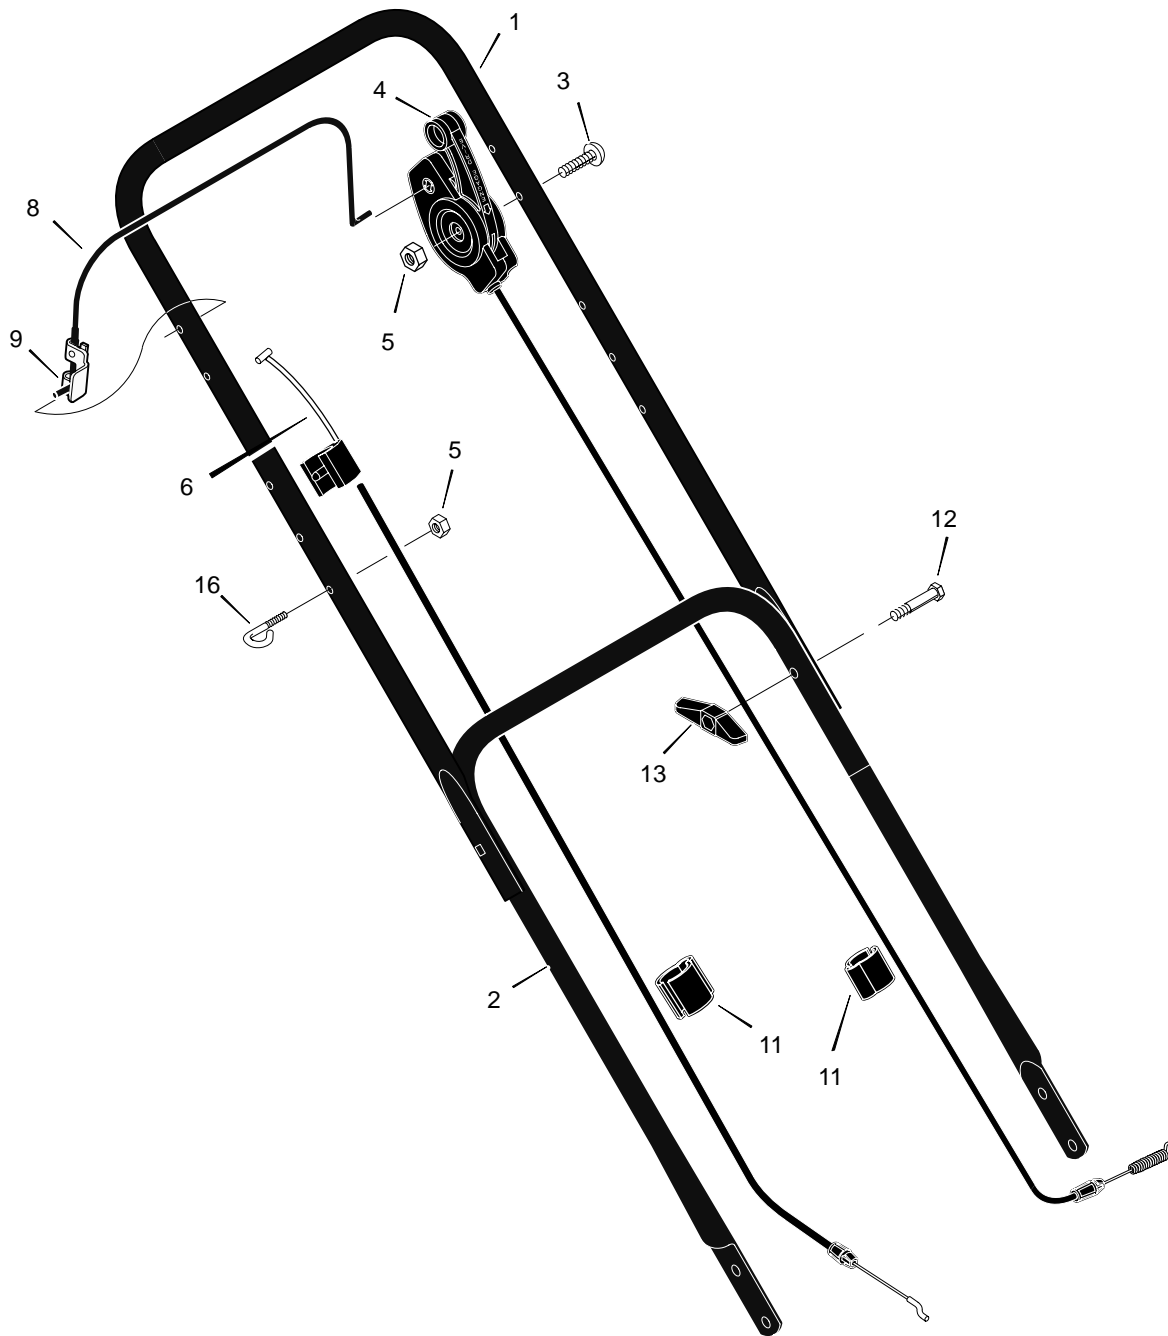

1	Handle, Upper (Black)	71581E724
2	Handle, Lower (Black)	71137E724
3	Bolt	25x14
4	Control, Drive	672877
5	Locknut	15x116
6	Cable, Stop	1101182

8	Lever, Stop	672879E701
9	Bracket, Stop Lever	43628 BC
11	Fastener, Cable	1101353
12	Bolt	2x77
13	Knob	71294
16	Guide, Rope	71530