



ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

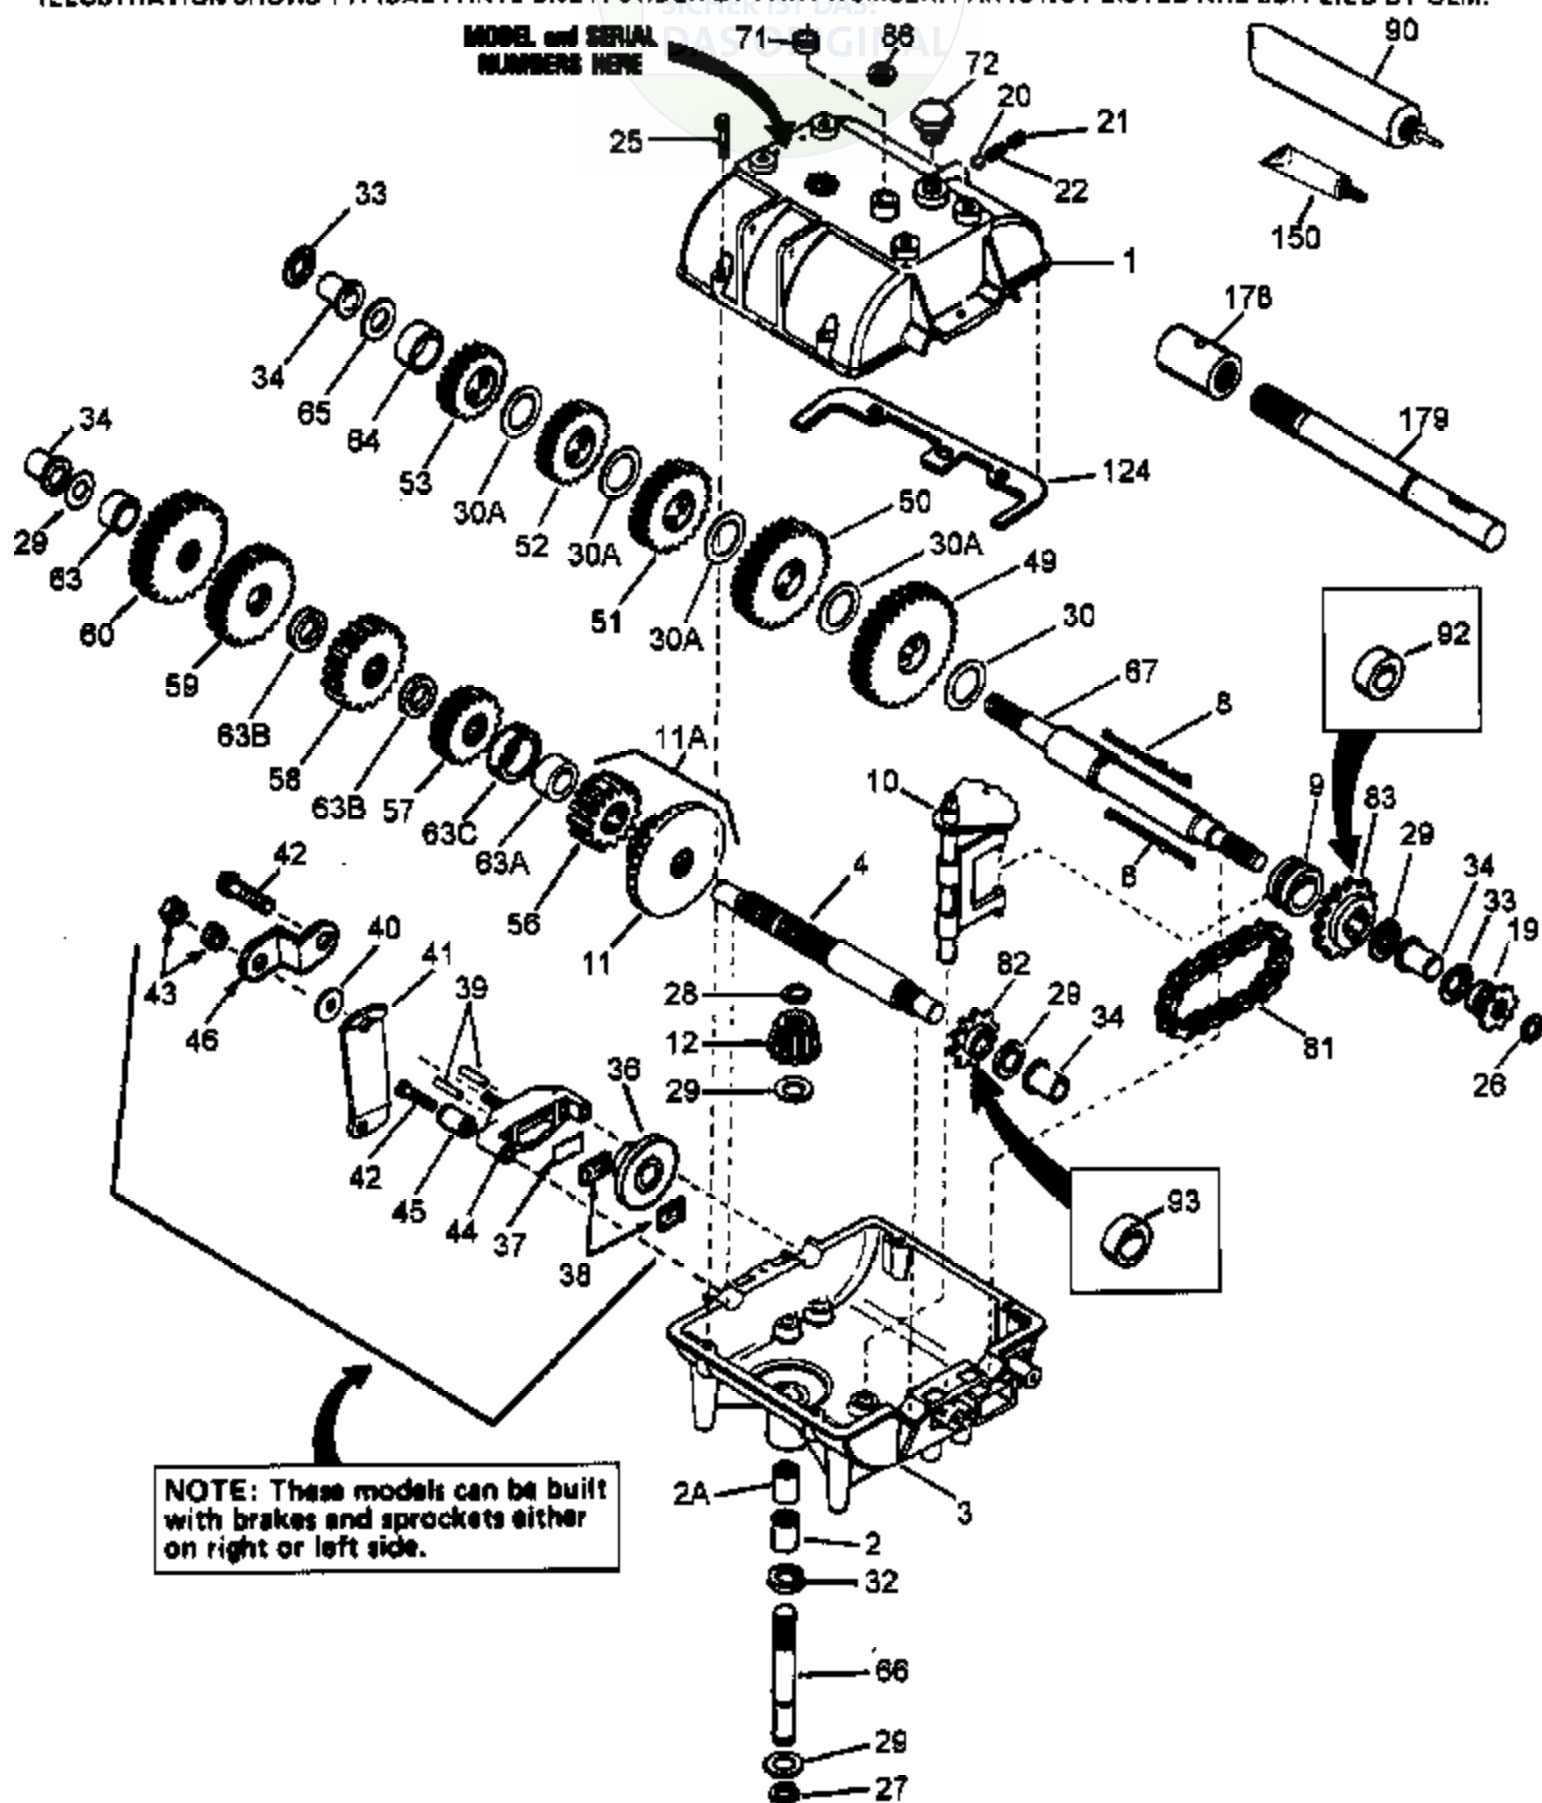

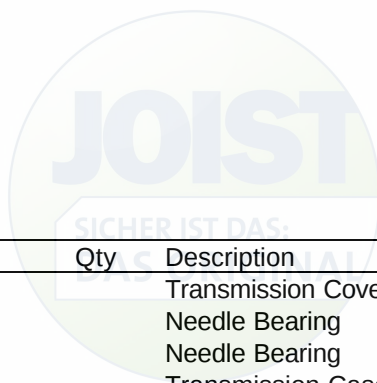

Ref #	Part Number	Qty	Description
1	772083A		Transmission Cover
2A	780086A		Needle Bearing
2	780086A		Needle Bearing
3	770061A		Transmission Case
4	776134		Countershaft
8	792089A		Key
9	784266		Collar
10	784270		Shift Rod & Fork
11	778154		Bevel Gear (42 teeth-steel)
12	778153		Input Bevel Pinion (steel)
19	786047		Sprocket (8 teeth)
20	792077A		Steel Ball, 5/16"
21	792078	700-796	Set Screw, 3/8-16 x 3/8"
22	792079	Peerless	Spring
25	792073A		Screw, 1/4-20 x 1-1/4"
26	792072		Retaining Ring
27	792035		Retaining Ring
28	788040		Retaining Ring
29	780072		Thrust Race
30A	780108		Thrust Washer (1/16" thick)
30	780108		Thrust Washer (1/16" thick)
32	792001		"O" Ring
34	780105A		Flange Bushing
49	778124A		Spur Gear (30 teeth)
50	778123A		Spur Gear (25 teeth)
51	778121A		Spur Gear (20 teeth)
56	778126A		Spur Gear (20 teeth)
57	778127A		Spur Gear (25 teeth)
58	778129A		Spur Gear (30 teeth)
63	786071		Spacer (3/4" ID x 1-1/8" OD x 3/8" thick)
63A	786071		Countershaft Spacer
63C	786088		Spacer (3/4" ID x 1-1/8" OD x 3/16" thick)
64	786072		Output Shaft Spacer
65	780109		Washer
66	776135		Input Shaft (3-11/16" long)
67	776242		Output & Brake Shaft (7-27/32" long) (Shaft has four keyways and replaces shafts with two keyways. Use four keys.)
71	788069		Square Cut Seal
86	792083		Washer (Use as required)
90	788067B		Grease (32 oz. bottle Bentonite grease)
92	786085		Output Shaft Spacer
93	786068		Countershaft Spacer
150	510334		Gasket Eliminator (Loctite No. 515)