 
 




Ausgabe Issue 2006- 1A		Bild Nr Picture No B119		HT 55 HECKENSCHERE CHASSIE		HT 55 HEDGE TRIMMER CHASSIS		Seite Page 90	
Pos. Fig.	Anzahl/Quantity			Artikel Nr. Part No	Bezeichnung	Description	Satz Kit	Anmerkung Notes	
	HT55								
1	1			1911-4407-01	Handgriff- rechts.....	Handgrip- RH .....			
2	1			1911-4406-01	Erdungskabel.....	Ground cable.....			
3	1			1911-4405-01	Kabel .....	Coil- switch cable .....			
4	1			1911-4408-01	Stoppeschalter .....	Stop switch .....			
5	1			1911-4402-01	Kabel .....	Wire .....			
6	1			1911-4400-01	Feder .....	Spring .....			
7	1			1911-4401-01	Gashebel.....	Throttle lever.....			
8	1			1911-4396-01	Feder .....	Spring .....			
9	1			1911-4397-01	Einstellhebel .....	Adjusting knob .....			
10	1			1911-4399-01	Haken .....	Hook .....			
11	1			1911-4398-01	Gashebellenk.....	Throttle rod .....			
12	1			1911-4403-01	Feder .....	Spring .....			
13	1			1911-4404-01	Sicherheitssperre.....	Safety lever .....			
14	1			1911-4409-01	Handgriff- links .....	Handgrip- LH.....			
15	1			1911-4394-01	Stütz- rechts .....	Support- RH .....			
16	1			1911-4357-01	Mutter.....	Nut .....			
17	1			1911-4379-01	Gehäuse.....	Case .....			
18	1			1911-4395-01	Stütz- links.....	Support- LH .....			
19	1			1911-4370-01	Scheibe.....	Washer.....			
20	1			1911-4367-01	Scheibe.....	Washer.....			
21	1			1911-4363-01	Schraube .....	Screw .....			
22	3			1911-4371-01	Scheibe.....	Washer.....			
23	3			1911-4368-01	Scheibe.....	Washer.....			
24	3			1911-4355-01	Schraube .....	Screw .....			
25	1			1911-4354-01	Kugellager .....	Ball bearing .....			
26	1			1911-4389-01	Ritzel .....	Pinion.....			
27	1			1911-4390-01	Zahnrad .....	Sprocket.....			
28	1			1911-4366-01	Ring.....	Ring .....			
29	1			1911-4391-01	Verbindungsstab .....	Connecting rod .....			
30	1			1911-4392-01	Verbindungsstab .....	Connecting rod .....			
31	1			1911-4324-01	Kugellager .....	Ball bearing .....			
32	1			1911-4383-01	Gleitblock.....	Glide shoe .....			
33	1			1911-4393-01	Gehäuse.....	Case .....			
X 34	6			1911-4425-01	Schraubensatz .....	Screw set .....			
35	1			1911-4423-01	Knopf.....	Button .....			
X 37	2			1911-4432-01	Schraube .....	Screw .....			
38	1			1911-4380-01	Halter.....	Plate.....			
X 39	2			1911-4431-01	Mutter.....	Nut .....			
40	1			1911-4385-01	Klinge- untere .....	Blade- bottom.....			
41	1			1911-4384-01	Klinge- obere .....	Blade- top .....			
42	1			1911-4382-01	Klingenführung.....	Blade holder .....			
43	1			1911-4381-01	Klingenschutz .....	Blade guard .....			
44	4			1911-4387-01	Schraube .....	Screw .....			
45	4			1911-4386-01	Scheibe.....	Washer.....			
X 46	4			1911-4426-01	Mutter.....	Nut .....			
47	1			1911-4410-01	Handgriff- vordere .....	Handle- front.....			
48	2			1911-4365-01	Schraube .....	Screw .....			
49	2			1911-4370-01	Scheibe.....	Washer.....			
50	2			1911-4367-01	Scheibe.....	Washer.....			
51	2			1911-4357-01	Mutter.....	Nut .....			
52	1			1911-4388-01	Klingenabdeckung .....	Blade cover .....			
53	5			1911-4364-01	Schraube .....	Screw .....			
54	1			1911-4370-01	Scheibe.....	Washer.....			
55	1			1911-4367-01	Scheibe.....	Washer.....			
56	1			1911-4362-01	Schraube .....	Screw .....			

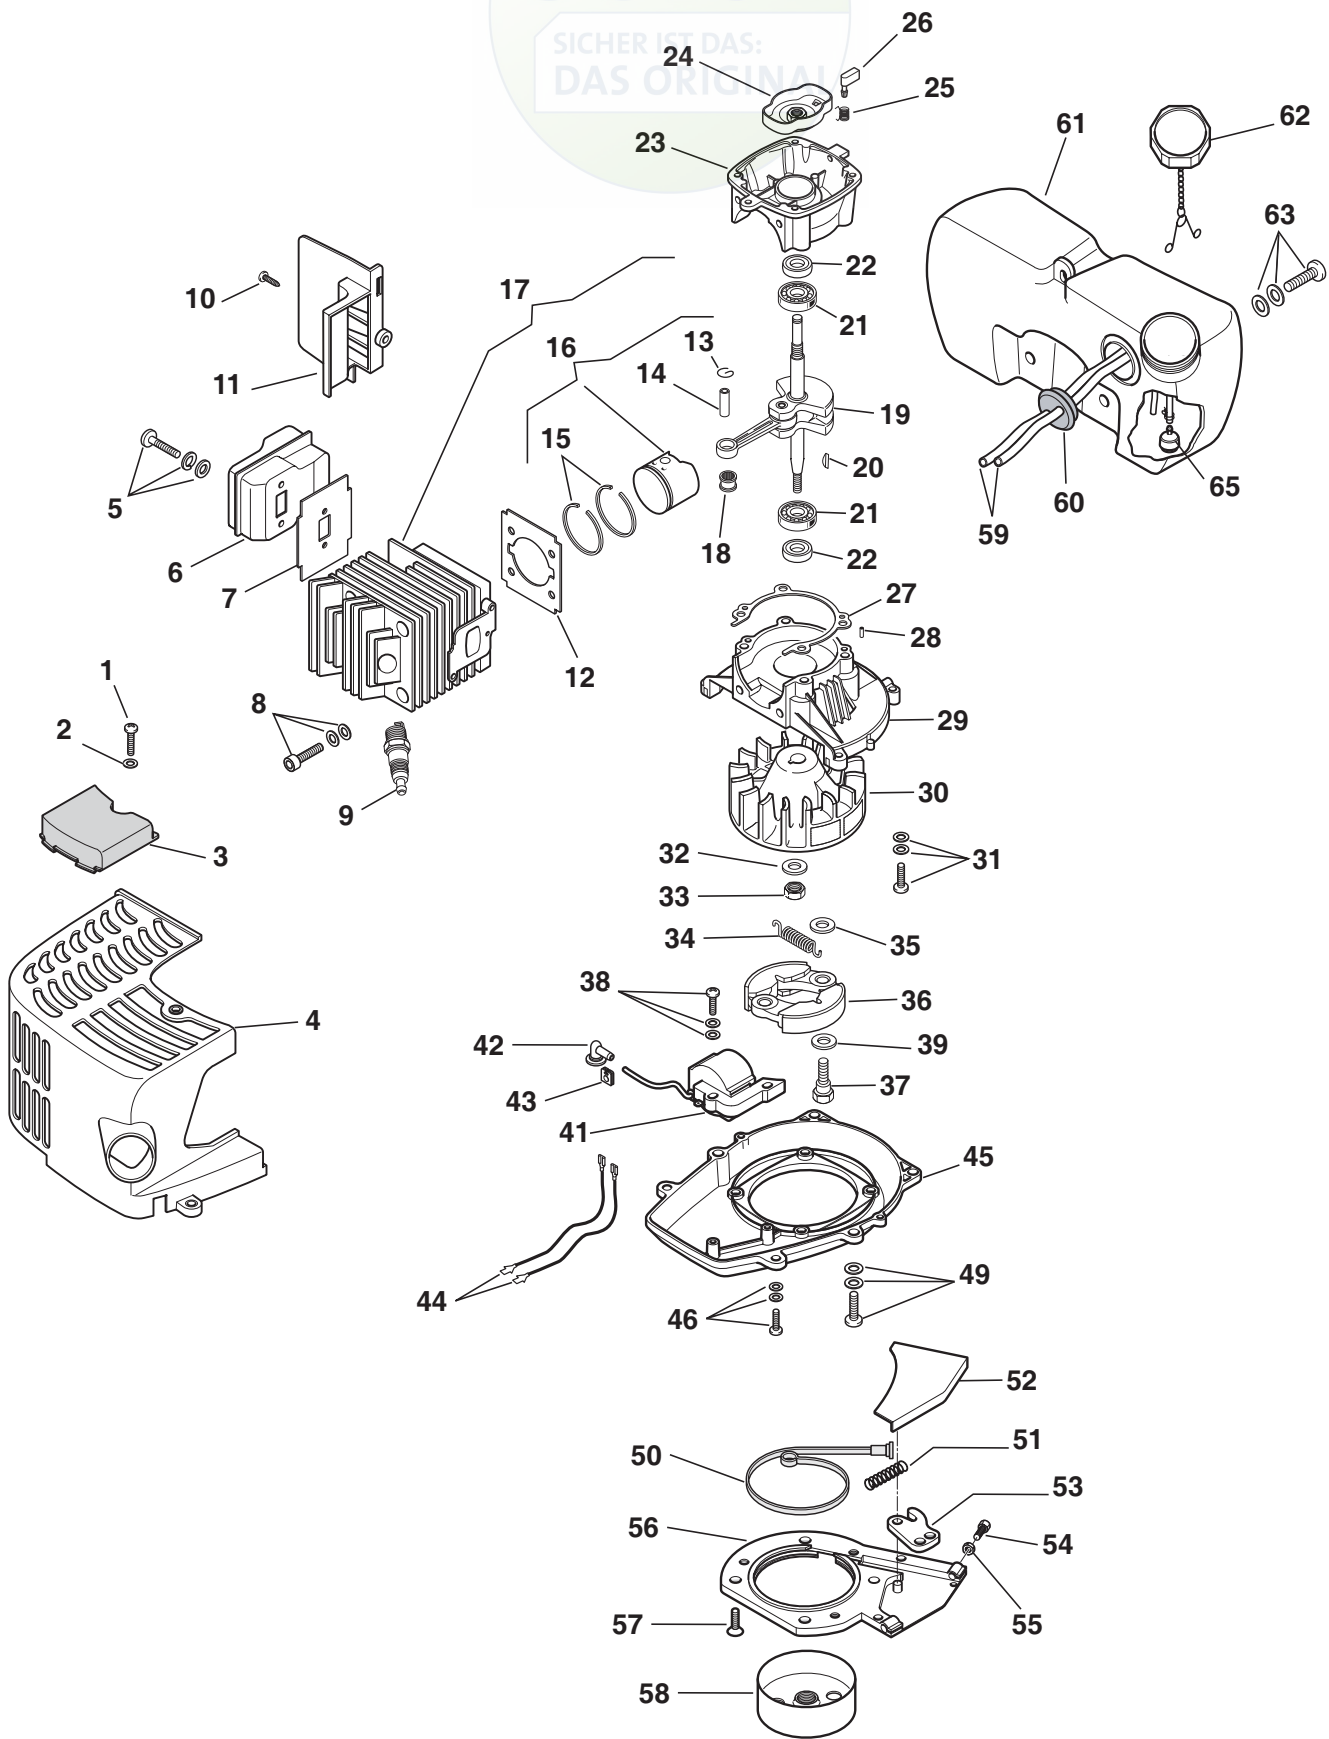

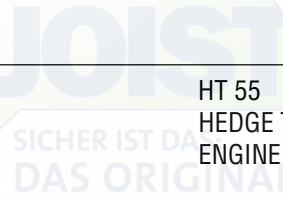

Ausgabe Issue 2006- 1A		Bild Nr Picture No B120		HT 55 HECKENSCHERE MOTOR		HT 55 HEDGE TRIMMER ENGINE		Seite Page 92	
Pos. Fig.	Anzahl/Quantity			Artikel Nr. Part No	Bezeichnung	Description	Satz Kit	Anmerkung Notes	
	HT55								
X	1	1		1911-4337-01	Schraubensatz .....	Screw set .....			
	2	1		1911-4369-01	Scheibe.....	Washer.....			
	3	1		1911-4373-01	Abweiser.....	Deflector .....			
	4	1		1911-4427-0	Motorhaube- rot.....	Engine cover- red .....			
	5	2		1911-4336-01	Schraubensatz .....	Screw set .....			
	6	1		1911-4374-01	Schalldämpfer .....	Muffler .....			
	7	1		1911-4316-01	Schalldämpferschutz .....	Muffler shield .....			
	8	4		1911-4334-01	Schraubensatz .....	Screw set .....			
	9	1		1911-4377-01	Zündkerzen.....	Spark plug.....			
	10	1		1911-4337-01	Schraubensatz .....	Screw set .....			
	11	1		1911-4318-01	Schutz .....	Guard .....			
	12	1		1911-4279-01	Zylinderdichtung.....	Cylinder gasket .....			
	13	2		1911-4290-01	•• Schließring.....	•• Lock ring .....			
	14	1		1911-4289-01	•• Kolbenbolzen .....	•• Piston pin .....			
	15	2		1911-4288-01	•• Kolbenring .....	•• Piston ring.....			
	16	1		1911-4287-01	• Kolben .....	• Piston .....		Inkl. pos 13 - 15	
	17	1		1911-4278-01	Zylinder- Kolben kpl.....	Cylinder- piston assy.....		Inkl. pos 16	
	18	1		1911-4292-01	Nadellager .....	Needle bearing .....			
	19	1		1911-4291-01	Kurbelwelle.....	Crankshaft.....			
	20	1		1911-4323-01	Keil .....	Key .....			
	21	2		1911-4324-01	Kugellager .....	Ball bearing .....			
	22	2		1911-4283-01	Dichtring.....	Seal ring .....			
	23	1		1911-4281-01	Kurbelgehäuse- hinten .....	Crankcase- rear .....			
	24	1		1911-4306-01	Startsperrgehäuse .....	Starter cup .....			
	25	1		1911-4345-01	Feder .....	Spring .....			
	26	1		1911-4305-01	Startsperre.....	Starter hook .....			
	27	1		1911-4282-01	Dichtung.....	Gasket .....			
	28	2		1911-4342-01	Zentrierstift.....	Centering pin.....			
	29	1		1911-4280-01	Kurbelgehäuse- vordere.....	Crankcase- front.....			
	30	1		1911-4277-01	Schwungrad .....	Flywheel .....			
	31	4		1911-4328-01	Schraubensatz .....	Screw set .....			
	32	1		1911-4343-01	Scheibe.....	Washer.....			
	33	1		1911-4358-01	Mutter.....	Nut .....			
	34	1		1911-4309-01	Feder .....	Spring .....			
X	35	2		1911-4430-01	Scheibe.....	Washer.....			
	36	2		1911-4307-01	Kupplung .....	Clutch unit.....			
	37	2		1911-4310-01	Schraube .....	Screw .....			
	38	2		1911-4337-01	Schraubensatz .....	Screw set .....			
	39	2		1911-4308-01	Scheibe.....	Washer.....			
	41	1		1911-4418-01	Elektronikspule .....	Electronic coil .....			
	42	1		1911-4298-01	Zündkerzenschutz.....	Spark plug cover .....			
	43	1		1911-4348-01	Kabelhalter.....	Cable retainer .....			
	44	2		1911-4297-01	Kabel .....	Switch wire .....			
	45	1		1911-4419-01	Stütz .....	Support.....			
	46	2		1911-4337-01	Schraubensatz .....	Screw set .....			
	49	4		1911-4339-01	Schraubensatz .....	Screw set .....			
	50	1		1911-4417-01	Bremsband .....	Brake band.....			
	51	1		1911-4416-01	Feder .....	Spring .....			
	52	1		1911-4412-01	Abdeckung.....	Cover .....			
	53	1		1911-4415-01	Hebel .....	Lever .....			
	54	1		1911-4414-01	Schraube .....	Screw .....			
	55	1		1911-4413-01	Mutter.....	Nut .....			
	56	1		1911-4411-01	Flansch .....	Flange .....			
	57	4		1911-4359-01	Schraube .....	Screw.....			
	58	1		1911-4378-01	Kupplungsglocke .....	Clutch drum .....			
	59	2		1911-4313-01	Benzinschlauch.....	Fuel hose.....			
	60	1		1911-4314-01	Gummiringe.....	Grommet.....			
	61	1		1911-4311-01	Benzintank kpl .....	Fuel tank assy .....			
X	62	1		1911-4424-01	Tankdeckel.....	Fuel tank cap.....			
	63	3		1911-4327-01	Schraubensatz .....	Screw set .....			
	65	1		1911-4255-01	Filter .....	Intake filter .....			

