


Key No.	Description	Part No.	Key No.	Description	Part No.	Key No.	Description	Part No.
1	Engine *	—	9	Washer, Belleville	17x137	17	Extension, Rear	71746E701
2	Housing	70120A	10	Washer	17x124	18	Deflector, Rear	71797
3	Bolt, Axle	9x10	11	Bolt, Hex	1x142	20	Pin	71800 Z
4	Wheel and Tire	20270	12	Adapter, Blade	71056	21	Screw	26x274
5	Washer	10851 Z	13	Deflector, Chute	42919	24	Bolt, Hex	1x85
6	Locknut, Flange	15x68	14	Push-On Cap	28x42	25	Washer	18x31
7	Bolt, Engine	25x6	15	Spring	166x5	26	Locknut, Flange	15x68
8	Blade	42785E701	16	Pin, Pivot	215x11 Z			

\* Parts are available from a Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the classified pages of the telephone directory

# MODEL 20221x51A

# REPAIR PARTS

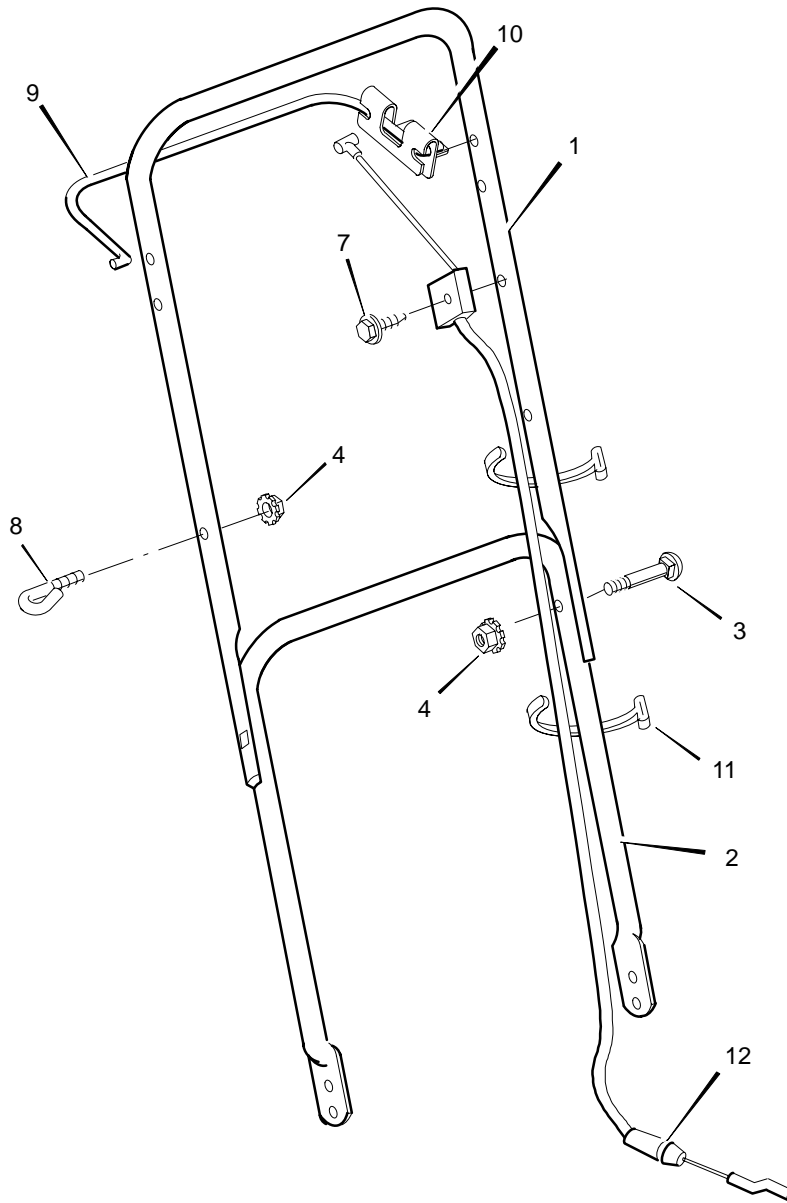

Key No.	Description	Part No.	Key No.	Description	Part No.	Key No.	Description	Part No.
1	Handle, Upper	43838E701	7	Screw	26x220	10	Bracket, Stop Lever	43628 BC
2	Handle, Lower	71151E701	8	Guide, Rope	43956	11	Fastener, Cable	71372
3	Screw	3x136	9	Lever, Engine Stop	43786E700	12	Engine Stop Cable	671947
4	Locknut	15x116						