



## Section: JB 90 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1121					
1	4	9997-0845-12	Screw			
2	4	9699-0028-02	Flat washer			
3	4	9683-0030-02	Lock washer			
4	4	9799-0831-02	Nut			
6	1	1482-0598-01	Belt tensioner assy			
7	1	1482-0289-01	.Sleeve			
9	1	1482-0602-01	Spring			
10	1	1482-0553-01	.Bushing			
11	1	1482-0552-01	.Bushing			
12	1	1482-0551-01	.Tension roller			
13	1	9683-0040-02	.Lock washer			
14	1	9997-1025-16	.Screw			
15	1	9898-0620-16	Screw			
16	1	9699-0028-02	Flat washer			
17	1	9683-0025-02	Lock washer			
18	1	9799-0631-02	Nut			
19	1	9699-0028-02	Flat washer			
20	1	1482-0601-01	Spacer			
21	1	1482-0545-01	Console			
22	1	9699-0028-02	Flat washer			
23	1	9683-0030-02	Lock washer			
24	1	1482-0604-01	Screw			
25	1	1482-0597-01	Belt guide			
26	1	9699-0028-02	Flat washer			
27	1	9683-0030-02	Lock washer			
28	1	9987-5119-16	Screw			
29	2	9915-0808-15	Set screw			
30	1	1482-0020-00	Pulley			
31	1	1482-0040-01	Key			
34	1	9997-0820-16	Screw			
52	1	1482-0603-01	Clutch cable-forwar			
54	1	1482-0572-01	Screw			
55	1	1482-0592-01	Change over lever			
56	1	9997-0645-12	Screw			
57	1	1482-0593-01	Clutch handle			
58	1	9997-0625-16	Screw			
59	1	9747-0631-02	Lock nut			
60	1	9747-0631-02	Lock nut			
61	1	1482-0572-01	Screw			
62	2	1482-0575-01	Handle grip			
63	2	1482-0571-01	Screw			
64	1	1482-0594-01	Front plater			
65	1	1482-0566-01	Screw			
66	1	1482-0595-01	Cable holder			
81	2	9997-0620-16	Screw			
82	2	9683-0025-02	Lock washer			
83	1	1482-0308-01	Cover			
84	1	1482-0443-01	Gasket			
85	1	1482-0248-01	Plastic plug			
86	1	1482-0554-01	Bushing			
90	1	9650-0016-04	Lock ring			
91	1	9650-0010-04	Lock ring			
92	1	1482-0587-01	Selfadh.clamp			
116	1	1482-0600-01	Chain case assy			
117	1	9594-0055-00	.Locating pin			
118	1	9594-0015-00	.Locating pin			
119	1	1482-0474-01	.Axle w chain wheel			
120	1	1482-0599-01	.Chain-upper			
121	1	9799-0831-02	.Nut			
122	1	9589-1002-00	.Sprocket			
123	1	9660-0200-00	.Spacer			
124	1	1482-0473-01	.Needle bearing			
125	1	1482-0473-01	.Needle bearing			
126	1	1482-0452-01	.Spacer			
127	1	1482-0485-01	.Needle bearing			
128	1	9589-1003-00	.Sprocket			

## Section: JB 90 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1121					
129	1	1482-0485-01	.Needle bearing			
130	2	9915-1020-15	.Screw			
131	1	1482-0547-01	.Chain-lower			
132	1	1482-0458-01	.Seal			
133	1	1482-0459-01	.Lock ring			
134	1	9549-0017-00	.Ball bearing			
135	1	1482-0475-01	.Spacer-short			
136	1	1482-0478-01	.Spacer-long			
137	1	9549-0017-00	.Ball bearing			
138	1	1482-0459-01	.Lock ring			
139	1	1482-0458-01	.Seal			
140	1	1482-0474-01	.Axle w chain wheel			
141	1	9939-0860-12	.Screw			
142	1	9699-0028-02	.Flat washer			
143	1	9699-0028-02	.Flat washer			
144	1	9747-0831-02	.Lock nut			
145	1	1482-0214-01	.Oil-seal			
146	1	1482-0048-01	.Shaft			
147	1	1482-0214-01	.Oil-seal			
148	1	1482-0479-01	.Gasket			
149	1	1482-0480-01	.Oil drain plug			
150	2	9915-0808-15	Set screw			
151	1	9600-0016-00	Key			
152	1	1482-0016-02	Pulley			
153	1	1482-9001-01	V-belt			
999	1	1482-0536-01	Gear case oil (0.5		Texaco Multifak	

test