



## Section: TURBO 530S-SE TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8518 8619					
	8524 8623					
1	1	1	1111-2563-01		Transmission assy	
2	1	1	9947-0616-16		Screw	
3	2	2	1111-2421-01		Clamp	
4	4	4	9943-0512-16		Screw	
5	1	1	1111-2446-01		Rear axle	
6	2	2	1111-2337-01		Bearing	
7	4	4	9943-0610-16		Screw	
9	1	1	1111-2444-02		Lever	
10	1	1	9997-0612-16		Screw	
11	1	1	9739-0631-22		Nut	
13	1	1	1111-2445-01		Grip	
14	1	1	9836-9520-12		Screw	
15	5	5	9943-0612-16		Screw	
17	2	2	9699-0060-02		Flat washer	
18	2	2	1111-2183-01		Spring	
19	2	2	1111-2108-01		Cover plate	
20	2	2	1111-2345-01		Rear wheel	
21	4	4	9549-0001-00		Ball bearing	
22	2	2	9699-0100-02		Washer	
23	2	2	1111-2077-01		Hub cap	
26	1	1	1111-2462-01		Drive shaft	
27	1	1	9595-0208-00		Locating pin	
28	2	2	9699-0069-02		Flat washer	
29	2	2	1111-2464-01		Gear wheel	
32	2	2	1111-2109-01		Gear ring	
34	8	8	9841-0410-16		Screw	
36	1	1	9911-0612-16		Set screw	
38	1	1	1111-2433-01		Engine belt pulley	
39	1	1	1111-9057-01		V-belt	
40	1	1	1111-2747-01		Tension roller	
42	1	1	9943-0630-16		Screw	
43	1	1	9739-0631-22		Nut	
44	1	1	1111-2746-01		Belt pulley	
45	1	1	9699-0100-02		Washer	
46	1	1	1111-2422-01		Lever	
47	1	1	9997-0630-12		Screw	
48	1	1	1111-2423-01		Spacer	
49	1	1	9943-0620-16		Screw	
52	1	1	1111-2469-01		Attachment	
54	1	1	1111-2484-01		Variat. control cab	
55	1	1	1111-2420-01		Transm.cover-yellow	
55	1	1	1111-2420-02		Transm.cover-black	
56	4	4	9943-0520-16		Screw	
57	1	1	1111-2486-01		Clutch cable	
62	1	1	1111-2480-01		Cover plate	
63	1	1	9849-7909-16		Screw	
64	1	1	1111-2474-01		Control handle-L.H.	
65	1	1	1111-2299-02		Shaft	
66	2	2	1111-2296-01		Bracket	
67	2	2	1111-2304-02		Plastic tube	
68	2	2	9595-0160-00		Locating pin	
70	1	1	1111-2467-01		Panel	
71	1	1	9948-0655-16		Screw	
72	1	1	1111-2183-01		Spring	
73	1	1	1111-2428-01		Lever	
74	1	1	9799-0831-02		Nut	
75	1	1	9403-0036-70		Lever knob	
76	1	1	1111-2181-02		Sleeve	
77	1	1	1111-2090-02		Spacer	
78	1	1	9747-0631-02		Lock nut	