


4 - SPEED

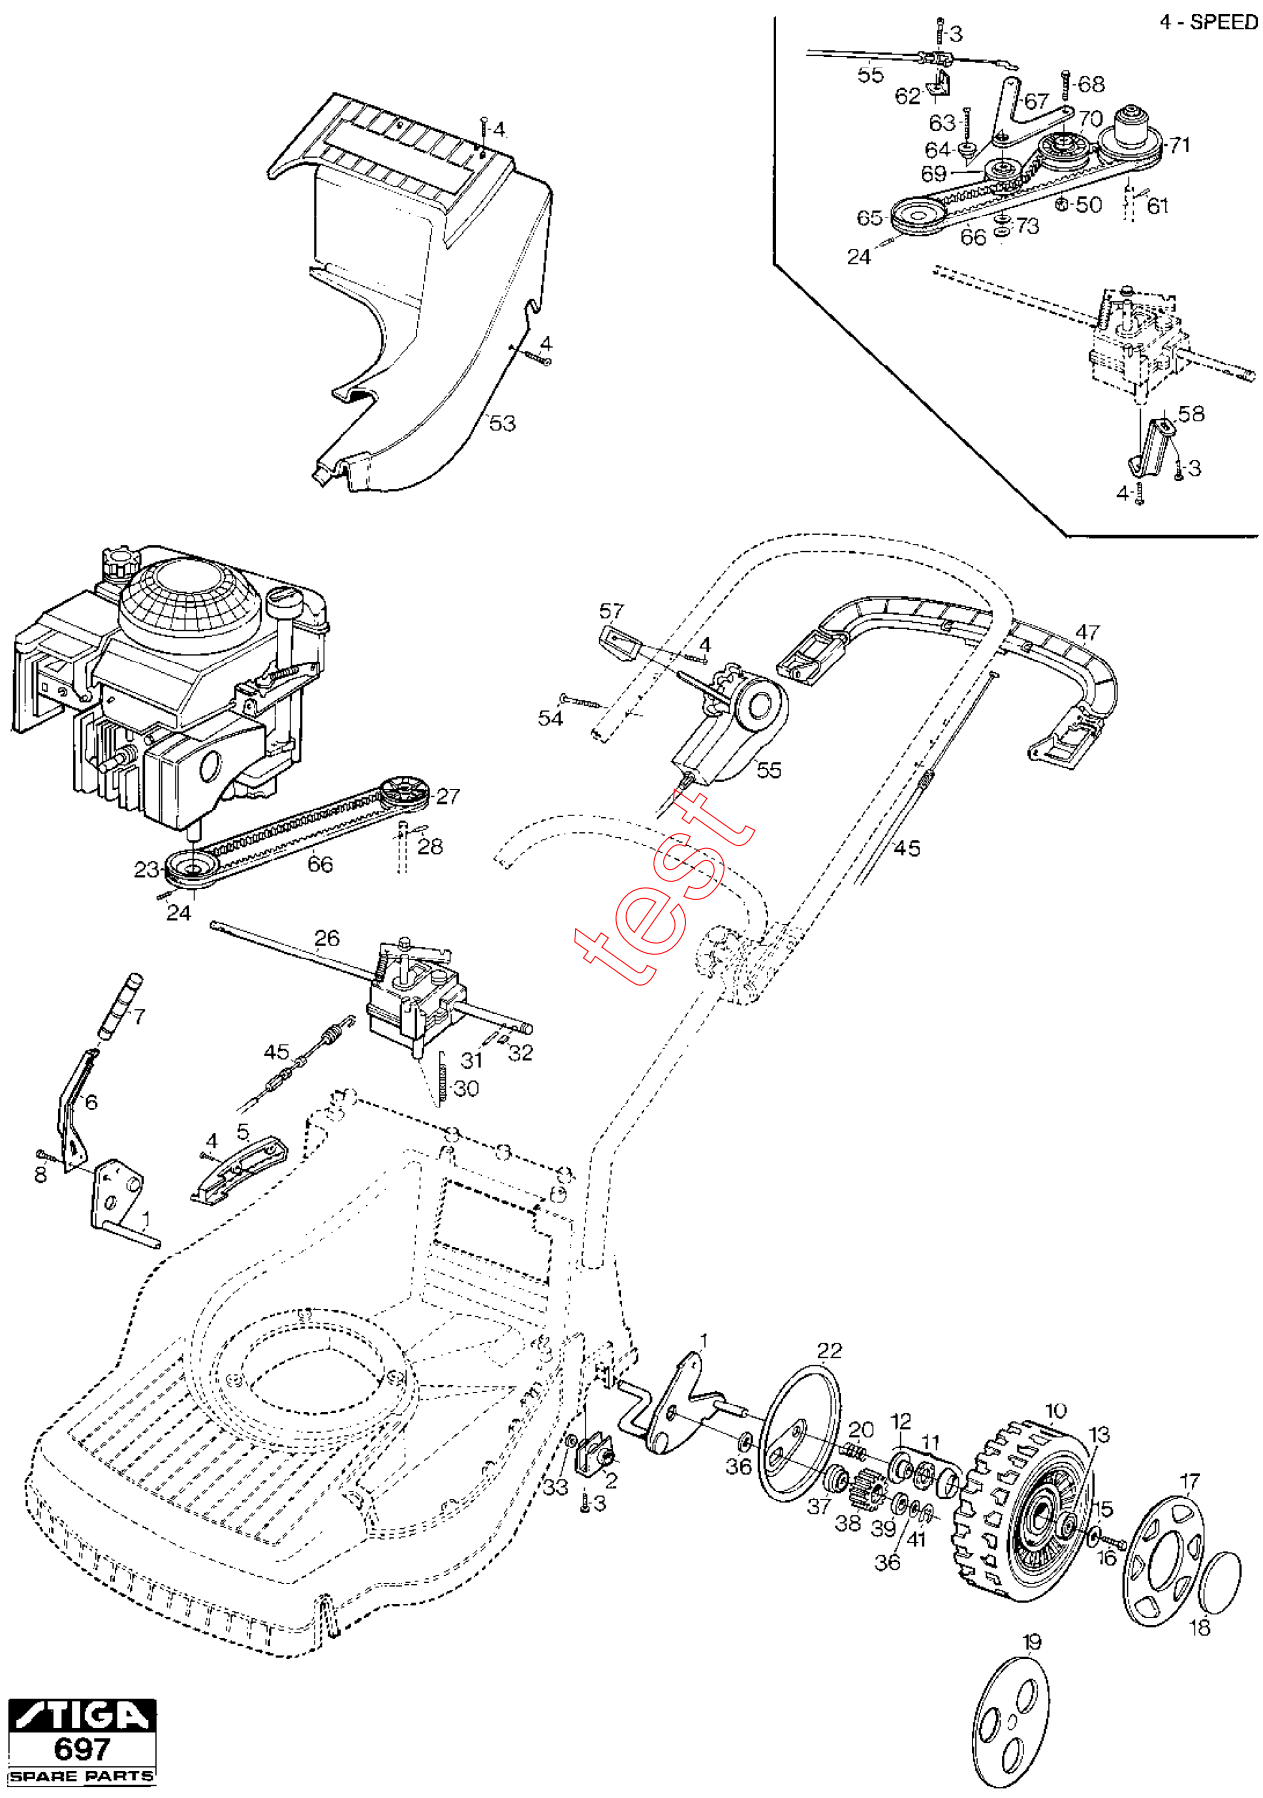

Section: TURBO 550S-550SE TRANSMISSION VARIATOR

| Pos. | Quantity | | | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|------|------|---------------|---------------------|-----|--------------------|-----|
| | | 9222 | | | | | | | |
| | 9212 | 9622 | 9221 | 9231 | | | | | |
| 1 | 1 | 1 | 1 | 1 | 1111-2808-01 | Rear axle | | | |
| 2 | 2 | 2 | 2 | 2 | 1111-2814-01 | Bushing | | | |
| 3 | 4 | 6 | 6 | 6 | 9947-0616-16 | Screw | | | |
| 4 | 6 | 6 | 6 | 6 | 9838-9522-12 | Screw | | | |
| 5 | 1 | 1 | 1 | 1 | 1111-2798-01 | Height adj.quadrant | | | |
| 6 | 1 | 1 | 1 | 1 | 1111-2816-01 | Height adj.lever | | | |
| 7 | 1 | 1 | 1 | 1 | 1111-2817-01 | Lever knob | | | |
| 8 | 2 | 2 | 2 | 2 | 9943-0612-16 | Screw | | | |
| 10 | 2 | 2 | 2 | 2 | 1111-3026-01 | Wheel w.ball bearin | | | |
| 11 | 1 | 1 | 1 | 1 | 1111-9047-01 | .Ball bearing kit | | | |
| 12 | 2 | 2 | 2 | 2 | 1111-1184-01 | ..Bearing cone | | | |
| 13 | 2 | 2 | 2 | 2 | 9549-0001-00 | .Ball bearing | | | |
| 15 | 2 | 2 | 2 | 2 | 9699-0100-02 | Washer | | | |
| 16 | 2 | 2 | 2 | 2 | 9943-0612-16 | Screw | | | |
| 17 | 2 | 2 | 2 | 2 | 1111-2661-01 | Hub cap | | | |
| 18 | 2 | 2 | 2 | 2 | 1111-2676-01 | Wheel cup | | | |
| 19 | 2 | 2 | 2 | 2 | 1111-2815-03 | Hub cap-white | | 12-9622-61,9221-91 | |
| 20 | 2 | 2 | 2 | 2 | 1111-2183-01 | Spring | | | |
| 22 | 2 | 2 | 2 | 2 | 1111-2561-01 | Cover plate | | | |
| 23 | 1 | | | | 1111-2915-01 | Engine belt pulley | | | |
| 24 | 1 | 1 | 1 | 1 | 9910-0612-16 | Set screw | | | |
| 26 | 1 | 1 | 1 | 1 | 1111-3046-01 | .Transmission | | | |
| 27 | 1 | 1 | 1 | 1 | 1111-3047-01 | .Belt pulley | | | |
| 28 | 1 | | | | 9594-0055-00 | .Locating pin | | | |
| 30 | 1 | 1 | 1 | 1 | 1111-2822-01 | Tensioning spring | | | |
| 31 | 2 | 2 | 2 | 2 | 1111-2382-01 | Pin | | | |
| 32 | 2 | 2 | 2 | 2 | 1111-2827-01 | Drive key | | | |
| 33 | 2 | 2 | 2 | 2 | 9404-0083-00 | Seal ring | | | |
| 36 | 4 | 4 | 4 | 4 | 9695-0013-00 | Washer | | | |
| 37 | 2 | 2 | 2 | 2 | 1111-2829-01 | Lock washer | | | |
| 38 | 2 | 2 | 2 | 2 | 1111-3075-01 | Pinion-plastic whee | | | |
| 39 | 2 | 2 | 2 | 2 | 1111-2830-01 | Support washer | | | |
| 41 | 2 | 2 | 2 | 2 | 9652-0010-04 | Snap ring | | | |
| 45 | 1 | 1 | 1 | 1 | 1111-2967-01 | Clutch cable | | | |
| 47 | 1 | 1 | 1 | 1 | 1111-2954-01 | Control handle | | | |
| 50 | 1 | 1 | 1 | 1 | 9747-0631-02 | Lock nut | | | |
| 53 | 1 | 1 | 1 | 1 | 1111-3019-01 | Cover-yellow | | | |
| 53 | | 1 | 1 | 1 | 1111-3019-06 | Cover-grey | | 12-9622-61,9221-91 | |
| 54 | | 2 | 2 | 2 | 9838-9540-12 | Screw | | | |
| 55 | | 1 | 1 | 1 | 1111-2971-03 | Variator control | | | |
| 57 | | 1 | 1 | 1 | 1111-2941-01 | Knob | | | |
| 58 | | 1 | 1 | 1 | 1111-3050-01 | Bracket | | | |
| 61 | | 1 | 1 | 1 | 9594-0026-00 | Locating pin | | | |
| 62 | | 1 | 1 | 1 | 1111-2469-01 | Attachment | | | |
| 63 | | 1 | 1 | 1 | 9943-0650-16 | Screw | | | |
| 64 | | 1 | 1 | 1 | 1111-2433-01 | Engine belt pulley | | | |
| 65 | | 1 | 1 | 1 | 1111-2423-01 | Spacer | | | |
| 65 | | 1 | 1 | 1 | 1111-2433-01 | Engine belt pulley | | | |
| 66 | 1 | 1 | 1 | 1 | 9585-0049-00 | V-belt | | | |
| 67 | | 1 | 1 | 1 | 1111-3051-01 | Tension arm | | | |
| 68 | | 1 | 1 | 1 | 9997-0630-12 | Screw | | | |
| 69 | | 1 | 1 | 1 | 1111-2747-01 | Tension roller | | | |
| 70 | | 1 | 1 | 1 | 1111-2746-01 | Belt pulley | | | |
| 71 | | 1 | 1 | 1 | 1111-3001-01 | Variator assy | | | |
| 73 | | 2 | 2 | 2 | 9699-0060-02 | Flat washer | | | |