



Section: FOOTE TRANSAXLE 4360-29

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4360					
	29					
0	1	1133-0556-01	Transaxle		Tractor 12/39 4WS	
1	1	F000-4582-00	Upper housing		Inkl.pos. 71	
2	16	F000-1919-00	Screw			
3	2	F000-5112-00	Ball			
4	2	F000-3626-00	Spring			
5	2	F000-3623-00	Set screw			
6	1	F000-4604-00	Shifter kit			
7	1	F000-5024-00	Shifter boot			
8	1	F000-3907-00	Friction puck			
9	1	F000-5013-00	Gear, spur		23T	
10	1	F000-1099-00	.Retaining ring			
11	ERF	F000-1068-00	Washer		1.0 mm	
11	ERF	F000-1319-00	Washer		2.1 mm	
11	ERF	F000-1145-00	Washer		1.5 mm	
11	ERF	F000-1358-00	Washer		1.3 mm	
11	ERF	F000-1425-00	Washer		1.2 mm	
11	ERF	F000-1424-00	Washer		0.9 mm	
11	ERF	F000-1082-00	Washer		0.8 mm	
11	ERF	F000-1423-00	Washer		0.7 mm	
11	ERF	F000-1959-00	Washer		0.3 mm	
11	ERF	F000-1441-00	Washer		0.5 mm	
12	1	F000-3847-00	Lock nut			
13	2	F000-3876-00	.Washer			
14	1	F000-1374-00	.Woodruff key			
15	1	F000-4549-00	Input shaft			
16	1	F000-3725-00	.Bevel pinion		14T	
17	1	F000-3624-00	.Retaining ring			
18	1	F000-3625-00	Chain			
19	4	F000-1542-00	Flange bearing			
20	1	F000-3709-00	Gear, spur		14T	
21	1	F000-3631-00	Clutch collar			
22	4	F000-3828-00	Key			
23	1	F000-1369-00	Woodruff key			
24	1	F000-3976-00	Intermediate shaft			
25	1	F000-1375-00	Woodruff key			
26	1	F000-3627-00	Retaining ring			
27	1	F000-3830-00	Sprocket		18T	
28	1	F000-3841-00	Spacer			
29	1	F000-3786-00	Gear, spur		37T	
30	1	F000-3867-00	Gear, spur		30T	
31	1	F000-5014-00	Gear, spur		27T	
32	1	F000-3783-00	Gear, spur		25T	
33	1	F000-3869-00	Gear, spur		22T	
34	1	F000-3817-00	Gear, spur		20T	
35	1	F000-3628-00	Washer			
36	2	F000-1423-00	Washer			
37	1	F000-3422-00	Spacer			
38	1	F000-4193-00	Comb gear		12T-35T	
39	1	F000-3967-00	Idler shaft			
40	1	F000-3901-00	Spacer			
41	1	F000-3645-00	Sprocket		9T	
42	1	F000-3589-00	Bevel gear		42T	
43	ERF	F000-3408-00	Washer		0.5 mm	
43	ERF	F000-3735-00	Washer		1.3 mm	
43	ERF	F000-3734-00	Washer		1.1 mm	
43	ERF	F000-3198-00	Washer		1.0 mm	
43	ERF	F000-3733-00	Washer		0.9 mm	
43	ERF	F000-3732-00	Washer		0.6 mm	
43	ERF	F000-3653-00	Washer		0.6 mm	
43	ERF	F000-3693-00	Washer		0.5 mm	
43	ERF	F000-3652-00	Washer		0.4 mm	
43	ERF	F000-3749-00	Washer		0.3 mm	
43	ERF	F000-3184-00	Washer			
44	1	F000-3882-00	Drive shaft			
45	1	F000-3724-00	Screw			
46	1	F000-3646-00	Gear, spur		12T	

Section: FOOTE TRANSAXLE 4360-29

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	4360 29					
47	1	F000-3866-00	Gear, spur		20T	
48	1	F000-3719-00	Gear, spur		25T	
49	1	F000-3868-00	Gear, spur		28T	
50	1	F000-3818-00	Gear, spur		30T	
51	1	F000-1145-00	Washer			
52	2	F000-3191-00	Seal			
53	1	F000-3180-00	Washer		1.6 mm	
54	1	F000-5038-00	Axle-L.H.			
55	2	F000-3871-00	Miter gear		15T	
56	2	F000-3656-00	Retaining ring			
57	1	F000-3839-00	Gear, spur		32T	
58	1	F000-3919-00	Cross shaft			
59	2	F000-3726-00	Miter gear		15T	
60	1	F000-5039-00	Axle-R.H.			
61	1	F000-4560-00	Lower housing		Inkl.pos. 71	
62	1	F000-3920-00	Friction puck			
63	1	F000-3276-00	Brake disc			
64	1	F000-3758-00	Spacer			
65	1	F000-3916-00	Brake jaw			
66	2	F000-3843-00	Dowel pin			
67	1	F000-3915-00	Screw			
68	1	F000-5284-00	Actuating lever			
69	1	F000-3760-00	Washer			
70	1	F000-3917-00	Bracket			
71	2	F000-5037-00	.Bearing			
72	2	F000-5110-00	Sealing washer			
99	1	F000-4300-00	Grease			

test