



Section: VILLA STEERING SEAT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2812					
	2855					
	2858	2841	2842			
1	1	1	1	1134-2390-01	Steering wheel	
2	1	1	1	9595-0262-00	Locating pin	
3	1	1	1	9699-0103-02	Flat washer	0,5 mm
3	1	1	1	9699-0114-02	Flat washer	1,0 mm
4	1	1	1	9595-0262-00	Locating pin	
5	1	1	1	1134-1424-01	Steering column	
6	2	2	2	1134-1901-01	Bearing	
8	1	1	1	1134-1933-01	Steering pulley	
9	4	4	4	1134-0041-01	Bushing	
10	2	2	2	1134-9025-01	Steering pulley-kit	
11	3	3	3	1134-3022-01	Cable holder	
12	4	4	4	9942-1030-16	Screw	
13	1	1	1	1134-9023-01	Steering wire	
14	5	5	5	9747-0831-02	Lock nut	
15	1	1	1	9699-0090-02	Flat washer	
16	1	1	1	1134-1310-01	Compression spring	
17	3	3	2	9959-0816-16	Screw	
18	4	4	4	9739-0831-22	Nut	
19	1	1	1	1134-9024-01	Bearing	
20	1	1	1	1134-0341-01	Washer	
21	1	1	1	9650-0020-04	Circlip	
23	1	1	1	1134-1500-02	Steering pulley	
25	2	2	2	1134-3247-02	Tie rod	
30	1	1	1	9959-0825-16	Screw	
32	1	1	1	1134-0022-00	Control rod	
33	2	2	2	9672-0004-02	Lock washer	
34	1	1	1	1134-2163-01	Rod	
35	1	1	1	1134-2166-01	Spacer	
42	1	1	1	1134-3252-02	Seat bracket-yellow	
43	1	1	1	1134-2846-01	Tube	
44	1	1	1	1134-1883-01	Axle	
45	1	1	1	1134-0015-00	Seat spring	
48	1	1	1	1134-1652-01	Spring shackle	
49	1	1	1	1134-0050-00	Seat rod	
50	1	1	1	1134-0493-00	Spring nut	
52	2	2	2	1134-1650-01	Tie bar	
53	4	4	4	9675-0017-02	Lock washer	
54	2	2	2	1134-2961-01	Seat adapter	
55	2	2	2	9898-0820-16	Screw	
56	4	4	4	9988-3616-16	Screw	
57	2	2	2	9699-0062-02	Flat washer	
58	2	2	2	1134-1711-01	Knob	
63	1	1	1	1134-3618-01	Seat bracket-R.H.	
64	1	1	1	1134-3618-02	Seat bracket-L.H.	
65	1	1		1134-0800-06	Seat	2812, 2855, 2841
65	1		1	1134-2541-01	Seat	
67	1	1	1	1134-2454-01	Shaft	
68	2	2	2	9672-0006-02	Lock washer	
69	1	1	1	1134-2847-01	Shaft	
70	1	1	1	1134-3022-01	Cable holder	
71	2	2	2	9699-0028-02	Flat washer	
72	4	4	4	9997-0825-16	Screw	
73	2	2	2	9799-0831-02	Nut	
74	1	1	1	1134-2138-01	Eye bolt	
75			1	9997-0860-16	Screw	60 mm
75	1	1		9959-0816-16	Screw	16 mm