



Section: TURBO 48-480S-480SE HANDLEBAR

| Pos. | Quantity | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|---------------|-------------|--------------|---------------------|---------------------|
| | | 5212 | 5221 | 5213 | | | |
| | 5211 | 5231 | 5232 | 5222 | | | |
| 1 | 1 | 1 | 1 | 1 | 1111-2805-01 | Front axle | |
| 2 | 2 | 2 | 2 | 2 | 1111-1504-01 | Retainer | |
| 3 | 2 | 2 | 2 | 2 | 9947-0616-16 | Screw | |
| 4 | 1 | 1 | 1 | 1 | 1111-2818-01 | Height adj.rod | |
| 5 | 2 | 2 | 2 | 2 | 9675-0011-00 | Starlock | |
| 6 | 1 | 1 | 1 | 1 | 1111-2819-01 | Spring | |
| 10 | 2 | 2 | 2 | 2 | 1111-1138-01 | Spring | |
| 11 | 2 | 2 | 2 | 2 | 1111-2784-01 | Wheel assy | |
| 12 | 1 | 1 | 1 | 1 | 1111-9047-01 | .Ball bearing kit | |
| 13 | 2 | 2 | 2 | 2 | 1111-1184-01 | ..Bearing cone | |
| 14 | 2 | 2 | 2 | 2 | 1111-2785-01 | Wheel cover | |
| 15 | 2 | 2 | 2 | 2 | 9699-0100-02 | Washer | |
| 16 | 2 | 2 | 2 | 2 | 9943-0612-16 | Screw | |
| 17 | 2 | 2 | 2 | 2 | 1111-2657-01 | Hub cap-yellow | |
| 17 | 2 | 2 | 2 | 2 | 1111-2657-05 | Hub cap-blue | |
| 18 | 2 | 2 | 2 | 2 | 1111-2675-01 | Wheel cup-yellow | |
| 18 | 2 | 2 | 2 | 2 | 1111-2675-05 | Wheel cup (blue) | |
| 22 | 1 | 1 | 1 | 1 | 1111-2970-01 | Handlebar lower par | |
| 23 | 4 | 4 | 4 | 4 | 1111-3023-01 | Locking knob | |
| 24 | 2 | 2 | 2 | 2 | 9988-3551-12 | Screw | |
| 25 | 2 | 2 | 2 | 2 | 1111-0178-00 | Reinforcement | |
| 26 | 4 | 4 | 4 | 4 | 9699-0025-02 | Washer | |
| 27 | 4 | 4 | 4 | 4 | 9795-3531-02 | Nut | |
| 30 | 2 | 2 | 2 | 2 | 9899-3576-12 | Screw | |
| 33 | 2 | 2 | 2 | 2 | 1111-2575-01 | Handle holder-inner | |
| 34 | 2 | 2 | 2 | 2 | 1111-2574-01 | Compr.spring | |
| 35 | 2 | 2 | 2 | 2 | 1111-2955-01 | Hand holder | |
| 36 | 2 | 2 | 2 | 2 | 9838-9516-12 | Screw | |
| 43 | 1 | 1 | 1 | 1 | 1111-2957-01 | Handle upper | |
| 44 | 1 | 1 | 1 | 1 | 1111-3062-01 | Eyelink | |
| 45 | 1 | 1 | 1 | 1 | 1111-2611-03 | Throttle control | |
| 45 | 1 | 1 | 1 | 1 | 1111-2611-09 | Throttle control | 12-5231-13, 5232-93 |
| 46 | 2 | 1 | 1 | 1 | 9948-0645-16 | Screw | 45 MM |
| 47 | 1 | 1 | 1 | 1 | 9948-0660-16 | Screw | 60 MM |
| 48 | 2 | 2 | 2 | 2 | 9747-0631-02 | Lock nut | |
| 52 | 1 | 1 | 1 | 1 | 1111-2953-01 | Control handle | |
| 53 | 1 | 1 | 1 | 1 | 1111-2968-05 | Engine brake cable | |
| 54 | 1 | 1 | 1 | 1 | 1111-2969-01 | Cable attachment | |
| 56 | 1 | 2 | 3 | 4 | 1111-2018-01 | Cable holder | 12-5213-13, 3 St |
| 57 | 1 | 2 | 3 | 4 | 9836-9216-12 | Screw | 12-5213-13, 3 St |
| 61 | | | | 2 | 9836-9512-12 | Screw | |
| 62 | | | | 1 | 9400-0218-00 | Battery | |
| 63 | 1 | 1 | 1 | 1 | 1111-2927-01 | Battery holder | |
| 64 | | | | 1 | 9400-0219-00 | Charger | |
| 65 | | | | 2 | 9838-9540-12 | Screw | 12-5213-13 |
| 66 | | | | 1 | 1111-2020-01 | Housing | 12-5213-13 |
| 67 | | | | 1 | 1111-2021-01 | Cover | 12-5213-13 |
| 68 | | | | 1 | 9838-9216-12 | Screw | 12-5213-13 |
| 69 | | | | 1 | 1111-2825-01 | Harness | |
| 70 | | | | 1 | 9400-0186-00 | Starting switch ass | |
| 71 | | | | 1 | 1134-2848-01 | .Ignition key | |
| 74 | | | | 2 | 9838-9522-12 | Screw | 12-5222-13, 5222-93 |
| 75 | | | | 1 | 1111-2705-01 | Cover | 12-5222-13, 5222-93 |
| 78 | | | | 1 | 1111-2707-01 | Housing | 12-5222-13, 5222-93 |
| 79 | | | | 1 | 9401-0200-00 | Cable holder | |