



Section: TURBO 48-48S-48SE HANDLEBAR

| Pos. | Quantity | Spare part No | | | | Description | Kit | Notes | New |
|------|----------|---------------|------|------|--------------|-------------|---------------------|--------------------|-----|
| | | 5802 | | | | | | | |
| | 5188 | 5202 | 5488 | 5489 | | | | | |
| | 5588 | 5288 | 5888 | 5889 | | | | | |
| 1 | 1 | 1 | 1 | 1 | 1111-2805-01 | | Front axle | | |
| 2 | 2 | 2 | 2 | 2 | 1111-1504-01 | | Retainer | | |
| 3 | 2 | 2 | 2 | 2 | 9947-0616-16 | | Screw | | |
| 4 | 1 | 1 | 1 | 1 | 1111-2818-01 | | Height adj.rod | | |
| 5 | 2 | 2 | 2 | 2 | 9675-0011-00 | | Starlock | | |
| 6 | 1 | 1 | 1 | 1 | 1111-2819-01 | | Spring | | |
| 10 | 2 | 2 | 2 | 2 | 1111-1138-01 | | Spring | | |
| 11 | 2 | 2 | 2 | 2 | 1111-2784-01 | | Wheel assy | | |
| 12 | 1 | 1 | 1 | 1 | 1111-9047-01 | | .Ball bearing kit | | |
| 13 | 2 | 2 | 2 | 2 | 1111-1184-01 | | ..Bearing cone | | |
| 14 | 2 | 2 | 2 | 2 | 1111-2785-01 | | Wheel cover | | |
| 15 | 2 | 2 | 2 | 2 | 9699-0100-02 | | Washer | | |
| 16 | 2 | 2 | 2 | 2 | 9943-0612-16 | | Screw | | |
| 17 | | | 1 | 1 | 1111-3084-03 | | Hub cap-white | | |
| 17 | 2 | 2 | 2 | 2 | 1111-3084-01 | | Hub cap-yellow | | |
| 17 | 2 | 2 | 2 | 2 | 1111-3084-05 | | Hub cap-blue | | |
| 20 | 2 | 2 | 2 | 2 | 1111-3021-01 | | Handlebar attachmen | | |
| 21 | 4 | 4 | 4 | 4 | 9795-3531-02 | | Nut | | |
| 22 | 1 | 1 | 1 | 1 | 1111-3022-01 | | Handle-lower | | |
| 23 | 4 | 4 | 4 | 4 | 1111-3023-01 | | Locking knob | | |
| 24 | 2 | 2 | 2 | 2 | 9988-3557-12 | | Screw | | |
| 25 | 2 | 2 | 2 | 2 | 9899-3545-12 | | Screw | | |
| 26 | 6 | 6 | 6 | 6 | 9699-0028-02 | | Flat washer | | |
| 27 | 2 | 2 | 2 | 2 | 9939-0820-16 | | Screw | | |
| 28 | 2 | 2 | 2 | 2 | 1111-3024-01 | | Attachment plate | | |
| 33 | 2 | 2 | 2 | 2 | 1111-0178-00 | | Reinforcement | | |
| 43 | 1 | 1 | 1 | 1 | 1111-2957-01 | | Handle-upper | | |
| 44 | 1 | 1 | 1 | 1 | 1111-3062-01 | | Eyelink | | |
| 45 | | 1 | 1 | | 1111-2611-09 | | Throttle control | | |
| 46 | | 1 | 1 | | 9948-0645-16 | | Screw | Honda L = 45 mm | |
| 47 | 1 | 1 | 1 | 1 | 9948-0640-16 | | Screw | L = 40 mm | |
| 47 | | 1 | 1 | | 9948-0660-16 | | Screw | L = 60 mm | |
| 48 | 1 | 1 | 1 | 1 | 9747-0631-02 | | Lock nut | Honda 2 st/2 pcs, | |
| 52 | 1 | 1 | 1 | 1 | 1111-2953-01 | | Control handle | | |
| 53 | 1 | 1 | 1 | 1 | 1111-2968-05 | | Engine brake cable | | |
| 54 | 1 | 1 | 1 | 1 | 1111-2969-01 | | Cable attachment | | |
| 56 | 1 | 2 | 3 | 4 | 1111-2018-01 | | Cable holder | | |
| 57 | 1 | 2 | 3 | 4 | 9836-9216-12 | | Screw | | |
| 61 | | | | 2 | 9836-9512-12 | | Screw | | |
| 62 | | | | 1 | 9400-0218-00 | | Battery | | |
| 63 | 1 | 1 | 1 | 1 | 1111-2927-01 | | Battery holder | | |
| 64 | | | | 1 | 9400-0219-00 | | Charger | | |
| 69 | | | | 1 | 1111-2825-01 | | Harness | | |
| 70 | | | | 1 | 9400-0186-00 | | Starting switch ass | | |
| 71 | | | | 1 | 1134-2848-01 | | .Ignition key | | |
| 74 | | | | 2 | 9838-9522-12 | | Screw | | |
| 75 | | | | 1 | 1111-2705-01 | | Cover | | |
| 78 | | | | 1 | 1111-2707-01 | | Housing | | |
| 79 | | | | 1 | 9401-0200-00 | | Cable holder | | |