



## Section: ES 1850

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3217					
1	1	1911-1148-01	Motor housing			
2	1	1911-1147-01	Transmission housin			
3	1	1911-1137-01	Motor cover			
4	1	1911-1187-01	Transmission base		Inkl. 63	
5	1	1911-1186-01	Sprocket cover		Inkl. 41	
6	1	1911-1138-01	Handle-front			
7	1	1911-1139-01	Hand guard			
8	1	1911-1140-01	Lock button			
9	1	1911-1141-01	Trigger			
10	1	1911-1188-01	Transmission wheel		Inkl. 25	
11	1	1911-1142-01	Air duct			
12	1	1911-1146-01	Lock assy		Inkl. 56, 65	
13	1	1911-1143-01	Oil tank			
14	1	1911-1144-01	Tank cap			
15	2	1911-1184-01	Brush holder			
16	2	1911-1185-01	Carbon holder			
17	1	1911-1182-01	Armature			
18	1	1911-1183-01	Armature housing			
19	1	1911-1154-01	Brake spring			
21	1	1911-1157-01	Sprocket			
22	1	1911-1155-01	Chain wheel			
23	1	1911-1151-01	Brake lever			
26	1	1911-1150-01	Drive shaft			
27	1	1911-1579-01	Switch			
28	1	1911-1179-01	Connection cord			
29	1	1911-1180-01	Grommet			
30	1	1911-1104-01	Cable connection			
31	1	1911-1178-01	Cable w. condensor		L = 150	
32	1	1911-1191-01	Cable w. drossel		L = 480	
33	1	1911-1190-01	Cable w. drossel		L = 235	
34	1	1911-1181-01	Switch cable		L = 180	
35	1	1911-1159-01	Bar		14" (3/8"-0.050)	
36	1	1911-1158-01	Chain		91VG (3/8")	
37	1	1911-1194-01	Oil hose w. filter			
38	1	1911-1174-01	Tension pin			
39	1	1911-1189-01	Pump housing w. bea			
40	1	1911-1145-01	Pump wheel w. pisto			
42	1	1911-1165-01	Seal ring			
43	1	1911-1175-01	Pump spring			
44	1	1911-1168-01	Spring			
45	1	1911-1164-01	Spring			
46	1	1911-1166-01	Spring			
48	1	1911-1171-01	O-ring			
49	1	1911-1176-01	Washer			
50	1	1911-1170-01	Lock ring			
51	1	1911-1160-01	Shaft lock			
52	1	1911-1161-01	Shaft lock			
53	2	1911-1193-01	Plastic pin			
54	1	1911-1156-01	Ball bearing			
55	1	1911-1163-01	Ball bearing			
57	1	1911-1172-01	Screw			
58	3	1911-1195-01	Screw			
59	16	1911-1105-01	Screw			
60	2	1911-1162-01	Screw			
61	1	1911-1167-01	Screw			
62	2	1911-1169-01	Screw			
64	1	1911-1173-01	Nut			
66	2	1911-1192-01	Plastic pin			
68	1	1911-1149-01	Bar guard			
69	1	1911-1153-01	Combi tool			