



Section: ST 311 TRIMMER ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3625					
1	1	1911-1380-01	Air cleaner cover		Inkl. 2, 37	
2	1	1911-1345-01	.Air cleaner filter			
3	1	1911-1346-01	Screw set			
4	1	1911-1342-01	Wavey washer			
5	1	1911-1398-01	.Choke lever assy		Inkl. 6	
6	1	1911-1399-01	.Choke knob			
7	1	1911-1400-01	Choke lever and pla		Inkl. 5, 6	
8	1	1911-1381-01	Carburettor assy		Inkl. 9, 21	
8A	1	1911-1333-01	Repair kit-carb.		Zama	
8A	1	1911-1290-01	Repair kit-carb.		Walbro	
8B	1	1911-1337-01	Gasket set-carb.		Zama	
8B	1	1911-1351-01	Gasket set-carb.		Walbro	
9	1	1911-1288-01	.Carburettor gasket			
10	4	1911-1367-01	.Screw			
11	1	1911-1317-01	Primer and hose			
12	1	1911-1382-01	Carb. mount assy		Inkl. 10, 13, 15	
13	1	1911-1415-01	.Reed assy			
14	1	1911-1372-01	.Power shaft			
15	1	1911-1319-01	.Carb. mount gasket			
16	1	1911-1371-01	Crankcase assy		Inkl. 10, 14, 24	
17	1	1911-1286-01	Mounting pad-rear			
18	1	1911-1377-01	Fuel tank assy		Inkl. 19-21	
19	1	1911-1329-01	.Fuel cap			
20	1	1911-1352-01	.Fuel return line			
21	1	1911-1287-01	.Fuel line assy			
22	1	1911-1285-01	Mounting pad-front			
23	1	1911-1299-01	Shroud			
24	4	1911-1368-01	.Screw			
25	1	1911-1383-01	Shroud ext. w. stand			
26	1	1911-1373-01	Flywheel			
27	1	1911-1411-01	Nut			
28	1	1911-1354-01	.Recoil pulley			
29	1	1911-1311-01	.Recoil spring			
30	1	1911-1292-01	.Rope guide			
31	2	1911-1298-01	.Pulley retainer			
32	1	1911-1378-01	Lead wire			
33	1	1911-1277-01	.Pull handle			
34	1	1911-1310-01	.Rope			
35	1	1911-1408-01	Starter housing ass		28-31, 33-34, 36, 3	
35A	1	1911-1353-01	Screw set-housing		Ej ill/not ill.	
36	4	1911-1369-01	.Screw			
37	6	1911-1279-01	.Screw			
38	1	1911-1278-01	Clamp			
39	1	1911-1284-01	Module			
40	1	1911-1264-01	Spark plug			
41	1	1911-1384-01	.Exhaust gasket			
42	1	1911-1385-01	Muffler assy		Inkl. 41, 43	
43	1	1911-1330-01	.Screw set-muffler			
44	1	1911-1358-01	Cylinder assy		Inkl. 43, 46, 47	
45	1	1911-1332-01	Piston and rod			
45A	1	1911-1291-01	.Piston ring		Ej ill/not ill.	
46	1	1911-1289-01	.Cylinder gasket			
47	1	1911-1410-01	.Cylinder bolt			
48	1	1911-1300-01	Male tab			
97	1	1911-1283-01	Crankcase seal		Ej ill/not ill.	
98	1	1911-1370-01	Short block assy		10,14,16,24,40,44-4	
99	1	1911-1386-01	Gasker set-engine		Ej ill/not ill.	