



Section: PARK SENATOR-PRESIDENT- COMFORT ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		6113				
	6113	-23				
		-13	6143			
6112	-43	-43				
1	1	1	1134-4222-02		Seal ring	H = 15 mm
3A	2	4	4	9997-0840-16	Screw	L = 40 mm
3B	1			9997-0845-12	Screw	L = 45 mm
3C	1			9997-0875-12	Screw	L = 75 mm
4	4	4	4	9739-0831-22	Nut	
5	1	1		1134-4110-01	Exhaust pipe	
7	1	1	1	1134-0433-00	Muffler gasket	
10	1	1	1	9578-0011-00	Clamp	
11	1	1	1	1134-4952-01	Muffler	
12	1	1	1	9959-0820-16	Screw	
13	1	1	1	9739-0831-22	Nut	
14	1	1	1	1134-4046-02	Muffler guard-black	
15	4	4	4	9959-0820-16	Screw	
16	4	4	4	9739-0831-22	Nut	
17	1	1	1	1134-4978-01	Oil drain pipe assy	
18	1	1	1	1134-4976-01	.Plug	
19	1	1	1	1134-4977-01	.Copper washer	
21	1	1	1	1134-4999-01	Engine pulley	
22	1	1	1	9600-0251-01	Key	
23	1	1	1	9987-5332-12	Screw	
24	1	1		1134-2733-01	Heat protection	
25	2	2		9893-0616-16	Screw	
26	1	1	1	1134-4757-01	Fuel tank assy	Inkl. 33-37, 41-42
27	2	2	2	1134-4273-03	Tank bracket	
28	2	2	2	1134-2941-01	Protection strip	
29	4	4	4	9893-0616-16	Screw	
31	1	1	1	1134-4356-01	Tank rod	
32	1	1	1	9747-0831-02	Lock nut	
33	1	1	1	1134-4063-01	.Fuel cap	
34	1	1	1	1134-3224-01	.Fuel shut-off valv	
35	1	1	1	1134-3225-01	.Grommet	
36	1	1	1	1134-2975-07	.Fuel hose	L = 350 mm
37	1	1	1	9578-0023-02	.Hose clamp	
38	1	1	1	9579-0003-00	Cable holder	
39	1	1	1	1134-4955-01	Muffler insert	
40	1	1	1	1134-4481-01	Wing nut	
41	1	1	1	9404-0025-01	.O-ring	
42	1	1	1	1134-4411-01	.Fuel tank insert	
43	1	1	1	9578-0023-02	Hose clamp	
44			1	1134-4998-01	Exhaust pipe	
45	2	2	2	1134-4930-01	Screw	
50	1	1	1	1134-5000-01	Engine pulley	
51	1	1	1	1134-5017-01	Washer	