



## Section: ESTATE MASTER BODY WORK

| Pos. | Quantity | Spare part No | Description  | Kit | Notes               | New              |
|------|----------|---------------|--------------|-----|---------------------|------------------|
|      | 2511     | 2512          |              |     |                     |                  |
| 1    | 1        | 1             | 1136-0585-01 |     | Cover-front         |                  |
| 2    | 1        | 1             | 1136-0415-01 |     | Cover-rear          |                  |
| 3    | 1        | 1             | 1136-0571-01 |     | Footboard cover     | Inkl. pos 29, 30 |
| 4    | 1        | 1             | 1136-0382-01 |     | Grass bag cover-fix |                  |
| 5    | 1        | 1             | 1136-0383-01 |     | Grass bag cover-mob |                  |
| 6    | 1        | 1             | 1136-0381-01 |     | Engine cover        |                  |
| 7    | 1        | 1             | 1136-0378-01 |     | Front cover         |                  |
| 8    |          | 1             | 1136-1069-01 |     | Wheel cover         |                  |
| 8    | 1        |               | 1136-0572-01 |     | Wheel cover         |                  |
| 9    | 10       | 10            | 9836-9618-12 |     | Screw               |                  |
| 10   | 8        | 8             | 9836-9635-12 |     | Screw               |                  |
| 11   | 2        | 2             | 9699-0060-02 |     | Flat washer         |                  |
| 12   | 2        | 2             | 9941-0512-16 |     | Screw               |                  |
| 13   | 2        | 2             | 1136-0011-01 |     | Lock plate          |                  |
| 15   | 2        | 2             | 9997-0616-16 |     | Screw               |                  |
| 16   | 4        | 4             | 9699-0060-02 |     | Flat washer         |                  |
| 17   | 2        | 2             | 9747-0631-02 |     | Lock nut            |                  |
| 18   | 2        | 2             | 1136-0375-01 |     | Bushing             |                  |
| 19   | 2        | 2             | 1136-0393-01 |     | Spring              |                  |
| 20   | 2        | 2             | 9997-0845-12 |     | Screw               |                  |
| 21   | 2        | 2             | 1136-0014-01 |     | Washer              |                  |
| 22   | 2        | 2             | 9747-0831-02 |     | Lock nut            |                  |
| 23   | 2        | 2             | 1136-0404-01 |     | Plate               |                  |
| 24   | 4        | 4             | 9836-9618-12 |     | Screw               |                  |
| 25   | 2        | 2             | 1136-0405-01 |     | Plate               |                  |
| 26   | 2        | 2             | 9836-9618-12 |     | Screw               |                  |
| 27   | 4        | 4             | 9847-8116-16 |     | Screw               |                  |
| 28   | 4        | 4             | 9699-0035-02 |     | Flat washer         |                  |
| 29   | 1        | 1             | 1136-0379-01 |     | .Footboard cover-RH |                  |
| 30   | 1        | 1             | 1136-0380-01 |     | .Footboard cover-LH |                  |
| 41   | 1        | 1             | 1136-0556-01 |     | Throttle control    |                  |
| 42   | 2        | 2             | 9997-0412-16 |     | Screw               |                  |
| 43   | 2        | 2             | 9683-0010-02 |     | Washer              |                  |
| 44   | 1        | 1             | 1136-0192-01 |     | Handle              |                  |
| 45   | 1        | 1             | 9865-0412-16 |     | Screw               |                  |
| 46   | 1        | 1             | 9799-0431-02 |     | Nut                 |                  |
| 51   | 1        | 1             | 1136-0315-01 |     | Seat                |                  |
| 52   | 1        | 1             | 1136-0336-01 |     | Support             |                  |
| 53   | 1        | 1             | 1136-0252-01 |     | Seat plate          |                  |
| 54   | 4        | 4             | 9997-0820-16 |     | Screw               |                  |
| 55   | 4        | 4             | 9683-0030-02 |     | Lock washer         |                  |
| 56   | 4        | 4             | 9699-0056-02 |     | Flat washer         |                  |
| 61   | 1        | 1             | 1136-0360-01 |     | Steering wheel      |                  |
| 62   | 1        | 1             | 9595-0272-00 |     | .Pin                |                  |
| 71   | 1        | 1             | 1136-0275-01 |     | Guard-upper         |                  |
| 72   | 1        | 1             | 1136-0276-01 |     | Guard-lower         |                  |
| 73   | 2        | 2             | 9847-8038-16 |     | Screw               |                  |
| 74   | 2        | 2             | 9699-0024-02 |     | Flat washer         |                  |
| 75   | 2        | 2             | 1136-0010-01 |     | Lock plate          |                  |
| 81   | 1        | 1             | 1136-0419-01 |     | Fuel tank           |                  |
| 82   | 1        | 1             | 1136-0344-01 |     | Tank cap            |                  |
| 83   | 1        | 1             | 1136-0591-01 |     | Tank support        |                  |
| 84   | 6        | 6             | 9739-0831-22 |     | Nut                 |                  |
| 85   | 1        | 1             | 1136-0368-01 |     | Tank clamp          |                  |
| 86   | 2        | 2             | 9747-0631-02 |     | Lock nut            |                  |
| 99   | 1        | 1             | 1136-0599-01 |     | Key outfit          | Inkl. pos 62     |