



Section: TORNADO TORNADO HST BODY WORK

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2521	2522				
1	1	1	1136-1038-01	Engine hood	Inkl. pos 2, 5	
2	1	1	1136-0905-01	.Plate-yellow		
3	2	2	1136-0230-01	Bolt		
4	2	2	1136-0009-01	Lock plate		
5	1	1	1136-0888-01	.Grill		
6	1	1	1136-0866-01	Engine hood-lower		
7	1	1	1136-0923-01	Intake separator		
10	2	2	1136-0179-01	Grommet		
11	1	1	1136-0871-01	Dashboard		
14	2	2	9848-8013-16	Screw		
15	2	2	1136-0010-01	Lock plate		
16	3	3	9836-9618-12	Screw		
17	1	1	1136-0926-01	Support		
18	1	1	1136-0475-01	Wheel cover-yellow	Inkl. pos 19, 20	
18		1	1136-0476-01	Wheel cover	Inkl. pos 19, 20	
19	1	1	1136-0148-01	.Footboard cover-RH		
20	1	1	1136-0147-01	.Footboard cover-LH		
21	6	6	9836-9635-12	Screw		
22	4	4	9836-9618-12	Screw		
23	1	1	9836-9525-12	Screw		
24	5	5	9699-0060-02	Flat washer		
25	4	4	9699-0085-02	Flat washer		
31	1	1	1136-0440-01	Throttle control		
32	2	2	9997-0412-16	Screw		
33	2	2	9683-0010-02	Washer		
34	1	1	1136-0192-01	Handle		
35	1	1	9865-0412-16	Screw		
36	1	1	9799-0431-02	Nut		
41	1	1	1136-0315-01	Seat		
43	1	1	1136-0252-01	Seat plate		
44	4	4	9997-0820-16	.Screw		
45	4	4	9683-0030-02	.Lock washer		
46	4	4	9699-0056-02	.Flat washer		
47	1	1	1136-0891-01	Spring		
48	1	1	9997-0512-16	Screw		
49	1	1	9747-0531-02	Nut		
51	1	1	1136-0360-01	Steering wheel		
52	1	1	9595-0272-00	.Pin		
54	1	1	1136-0942-01	Cam		
55	2	2	1136-0820-01	Screw		
56	2	2	9699-0018-02	Washer		
57	2	2	9747-0531-02	Nut		
61	1	1	1136-0869-01	Cover		
62	2	2	9836-9635-12	Screw		
63	2	2	9699-0035-02	Flat washer		
64	2	2	9836-9618-12	Screw		
81	1	1	1136-0275-01	Guard-upper		
82	1	1	1136-0276-01	Guard-lower		
83	2	2	9847-8038-16	Screw		
84	2	2	9699-0024-02	Flat washer		
85	2	2	1136-0010-01	Lock plate		
91	1	1	1136-0318-01	Fuel tank		
92	1	1	1136-0344-01	Tank cap		
93	1	1	1136-0327-01	Tank support		
94	1	1	9848-8013-16	Screw		
99	1	1	1136-1108-01	Key outfit	Inkl. pos 44 - 46,	