



Genuine Spare Parts



Joist
Spareparts
Joist

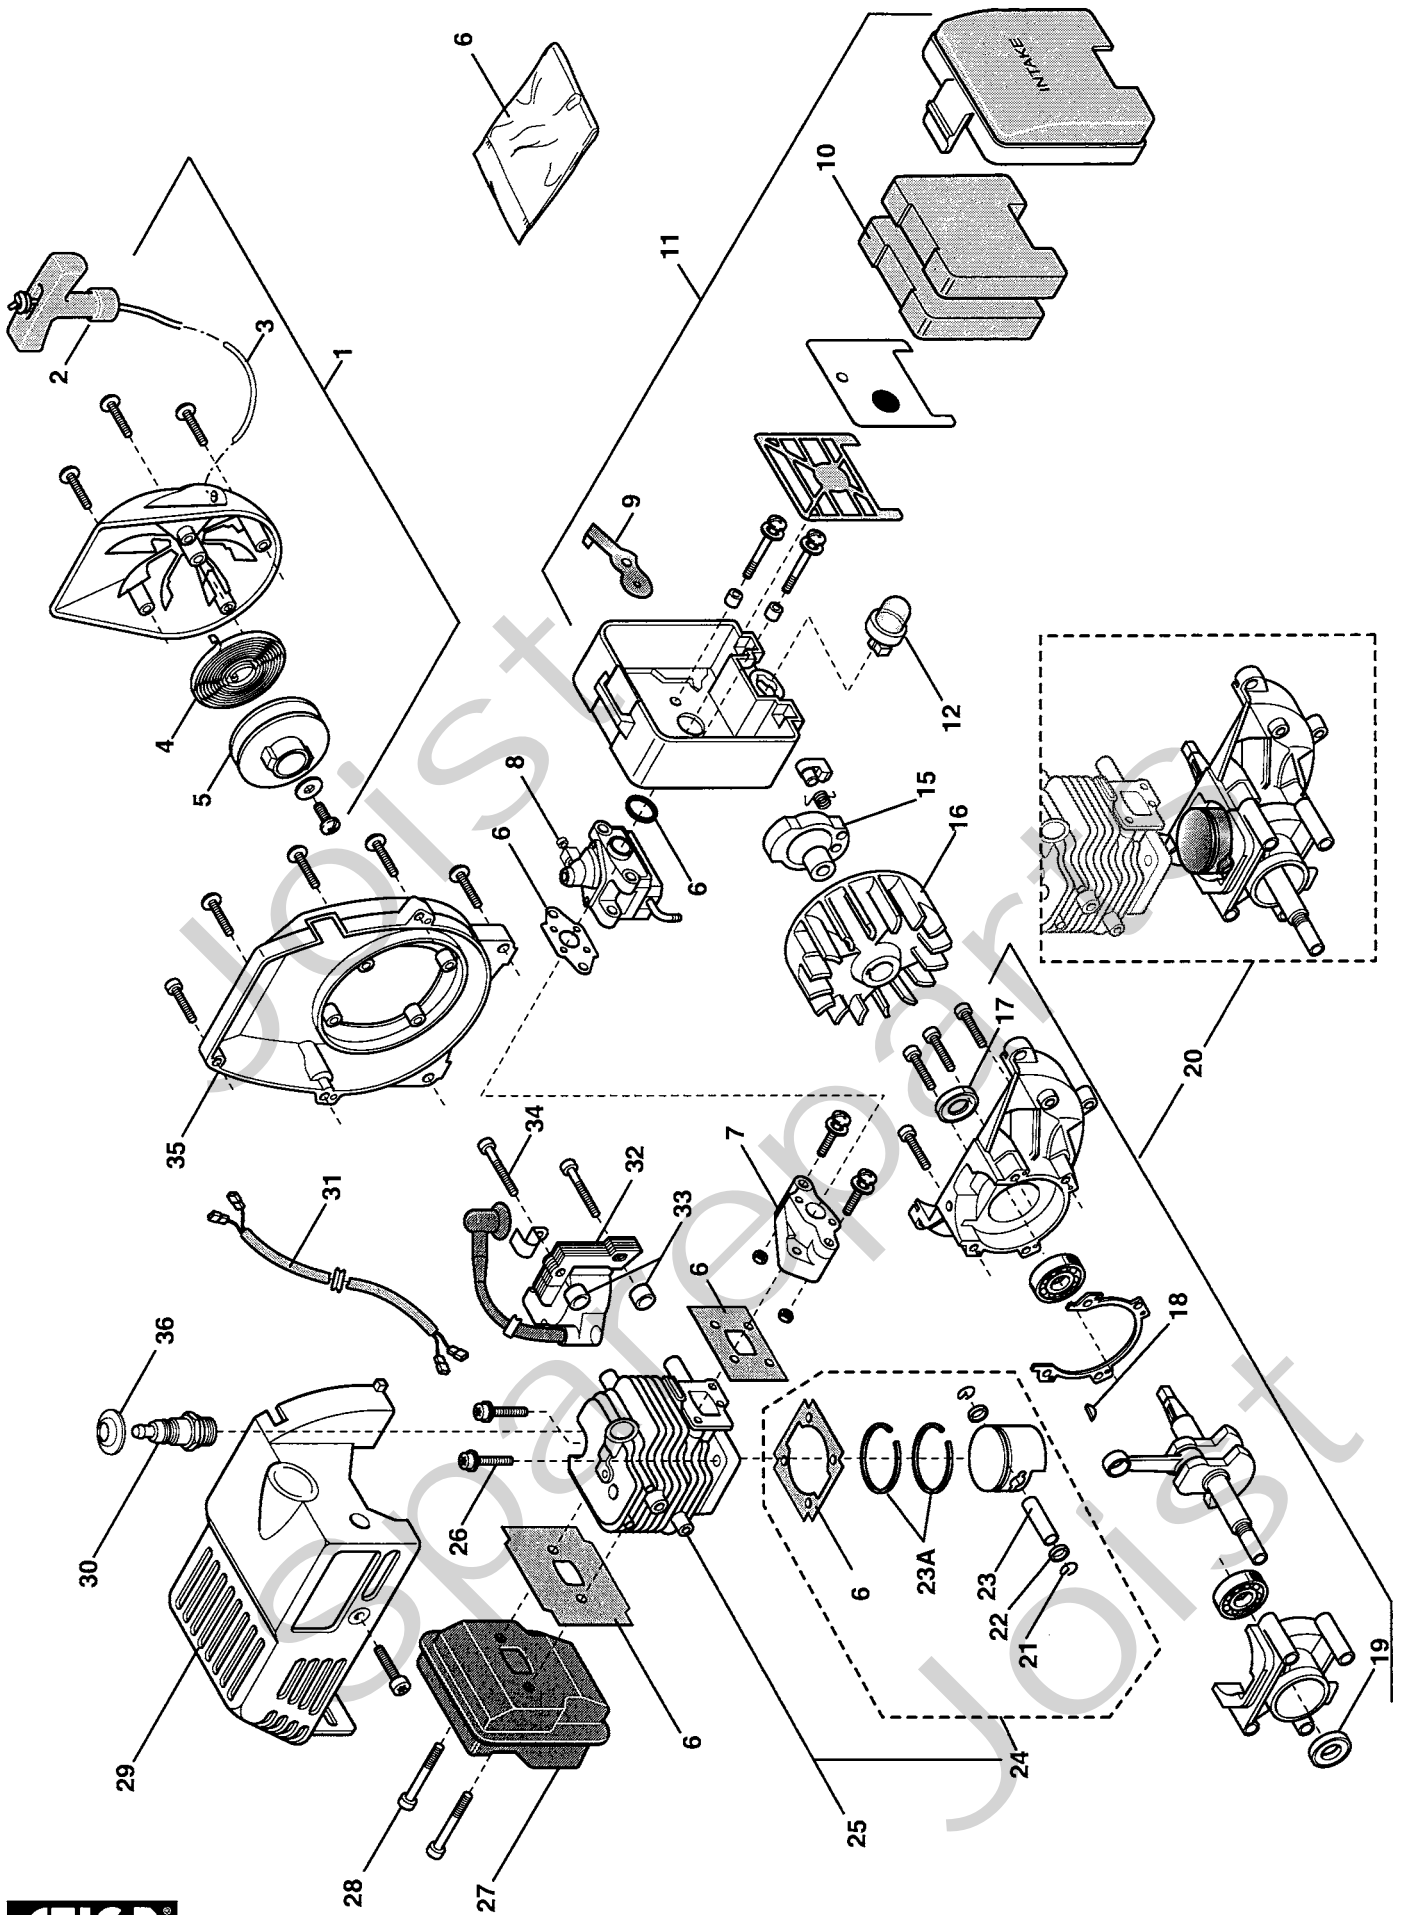

Utgåva Issue		Bildnr Picture No		ST 210- SB 22 MOTOR	ST 210- SB 22 ENGINE	Sida Page		
2006- 12		1485B				258		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	1021 6110							
1	1			1911- 3781- 01	Start kpl.....	Start assy.....		Inkl. pos 2 - 5
2	1			1911- 3782- 01	• Starthandtag.....	• Starter handle.....		
3	1			1911- 3783- 01	• Startsnöre.....	• Starter rope.....		
4	1			1911- 3784- 01	• Fjäder.....	• Spring.....		
5	1			1911- 3785- 01	• Linhjul.....	• Pulley.....		
6	1			1911- 3786- 01	Packningsatts.....	Gasket set.....		
7	1			1911- 3787- 01	Förgasarfäste.....	Carburettor base.....		
8	1			1911- 3788- 01	Förgasare kpl.....	Carburettor assy.....		
8A	1			1911- 2062- 01	Gasspjäll m.axel.....	Throttle valve & shaf.....		Ej ill/not ill.
9	1			1911- 3789- 01	• Chokespjäll.....	• Choke valve.....		
10	2			1911- 3790- 01	• Luftfilter.....	• Air filter.....		
11	1			1911- 3791- 01	Luftfilter kpl.....	Air filter assy.....		Inkl. pos 9 - 10
12	1			1911- 3792- 01	Primer.....	Primer.....		
15	1			1911- 3855- 01	Startspärr kpl.....	Starter pawl assy.....		
16	1			1911- 3796- 01	Svånghjul.....	Flywheel.....		
17	1			1911- 3797- 01	• Tätningsring.....	• Seal ring.....		
18	1			1911- 3798- 01	• Kil.....	• Key.....		
19	1			1911- 3799- 01	• Tätningsring.....	• Seal ring.....		
20	1			1911- 3800- 01	Short- block.....	Short- block.....		
21	2			1911- 3801- 01	• Låsring.....	• Lock ring.....		
22	2			1911- 3802- 01	• Packning.....	• Gasket.....		
23	1			1911- 3803- 01	• Kolvbult.....	• Piston pin.....		
23A	2			1911- 3816- 01	• Kolvring.....	• Piston ring.....		
24	1			1911- 3804- 01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 21 - 23A Inkl. pos 24
25	1			1911- 3805- 01	Cylinder kpl m.kolv.....	Cylinder assy w.pisto.....		
26	2			1911- 3806- 01	Skruv.....	Screw.....		
27	1			1911- 3807- 01	Ljuddämpare.....	Muffler.....		
28	2			1911- 3808- 01	Skruv.....	Screw.....		
29	1			1911- 3809- 01	Motorkåpa.....	Engine shield.....		
30	1			9400- 0258- 00	Tändstift.....	Spark plug.....		Champion CJ7Y
31	1			1911- 3810- 01	Kablage.....	Wiring harness.....		
32	1			1911- 3811- 01	Elektronikspole.....	Electronic coil.....		
33	2			1911- 3812- 01	Distans.....	Spacer.....		
34	2			1911- 3813- 01	Skruv.....	Screw.....		
35	1			1911- 3814- 01	Svånghjulslock.....	Flywheel cover.....		
36	1			1911- 3815- 01	Tändstiftsskydd.....	Spark plug cover.....		

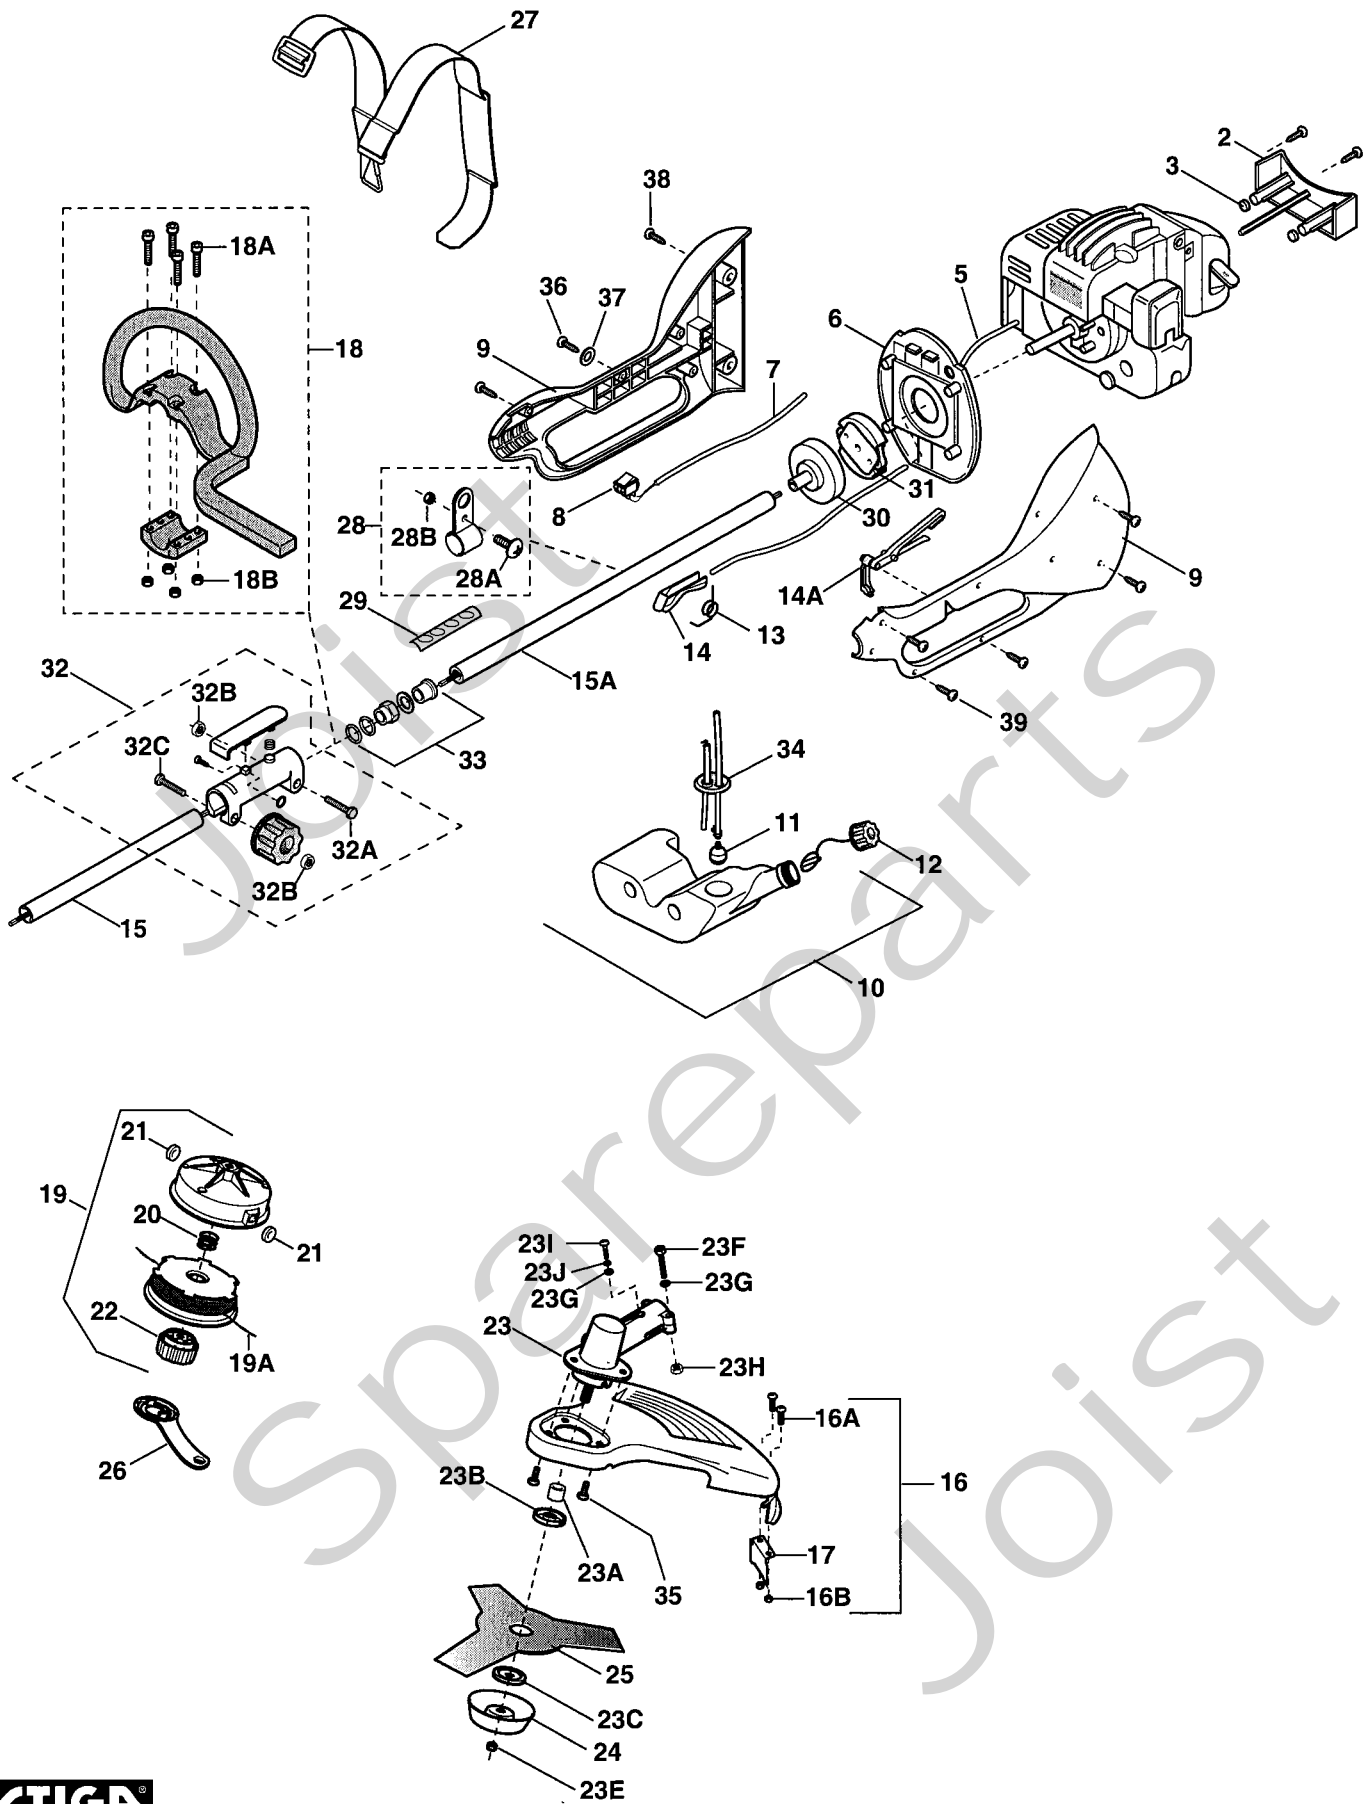

Utgåva Issue 2006- 12		Bildnr Picture No 1616C		SB 22 RÖJARE RIGG		SB 22 BRUSH CUTTER DRIVE SHAFT		Sida Page 256	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6110								
2	1			1911-3761-01	Platta	Fixed plate.....			
3	4			1911-3762-01	Isolator	Insulator.....			
5	1			1911-3911-01	Gaswire	Throttle cable			
6	1			1911-3763-01	Lock.....	Cover			
7	1			1911-3764-01	Jordkabel.....	Ground wire			
8	1			1911-3918-01	Strömbrytare	Switch			
9	1			1911-3919-01	Kåpa kpl- gul	Housing assy- yellow			
10	1			1911-3766-01	Bränsletank kpl.....	Fuel tank assy		Inkl. pos 11, 34	
11	1			1911-3767-01	• Bränslefilter	• Fuel pick-up			
12	1			1911-3912-01	Tanklock	Fuel tank cap			
13	1			1911-3769-01	Fjäder.....	Spring			
14	1			1911-3914-01	Gasreglage.....	Throttle trigger			
14A	1			1911-3915-01	Säkerhetsspärr	Safety lever			
15	1			1911-3916-01	Rör nedre m.drivaxel	Lower tube w.shaft.....			
15A	1			1911-3917-01	Rör övre m.drivaxel	Upper tube w.shaft.....			
16	1			1911-3896-01	Stenskydd kpl.....	Stone guard assy		Inkl. pos 17	
16A	2			9865-0525-16	• Skruv	• Screw			
16B	2			9747-0531-02	• Mutter	• Nut			
17	1			1911-3772-01	• Kniv	• Line cutter blade			
18	1			1911-3897-01	Handtag främre kpl.....	Front handle assy.....			
18A	4			9865-0530-16	• Skruv	• Screw			
18B	4			9747-0531-02	• Mutter	• Nut			
19	1			1911-3895-01	Skärhuvud kpl.....	Cutting head assy.....		Inkl. pos 20 - 22	
19A	1			1911-9007-04	Skärtråd (2.0 mm).....	Cutting line (2.0 mm).....		0.45 kg (130 m)	
19A	1			1911-9007-08	Skärtråd (2.0 mm).....	Cutting line (2.0 mm).....		15 m	
20	1			1911-3898-01	• Fjäder.....	• Spring			
21	2			1911-3899-01	• Trådhylsa	• Line inlet			
22	1			1911-3757-01	• Ratt (vä-gänga).....	• Knob (LH- thread)			
23	1			1911-3900-01	Snäckväxel kpl.....	Gear case assy			
23A	1			1911-3901-01	Hylsa	Collar			
23B	1			1911-3902-01	Övre ringmutter	Upper ring nut			
23C	1			1911-3903-01	Nedre ringmutter	Lower ring nut			
23E	1			1911-3905-01	Mutter.....	Nut			
23F	2			9997-0535-12	• Skruv	• Screw			
23G	3			9699-0024-02	• Planbricka	• Flat washer			
23H	2			9739-0531-22	• Mutter	• Nut			
23I	1			9865-0512-16	• Skruv	• Screw			
23J	1			9683-0015-02	• Låsbricka	• Lock washer			
24	1			1911-3906-01	Stabiliseringskål.....	Stabilizer bowl.....			
25	1			1911-3920-01	Röjklinga	Clearing blade		3T	
26	1			1911-3907-01	Nyckel-skärhuvud	Key-cutting head			
27	1			1911-3908-01	Sele	Harness			
28	1			1911-3909-01	Fäste f.sele.....	Harness support			
28A	1			9865-0510-16	• Skruv	• Screw			
28B	1			9747-0531-02	• Mutter	• Nut			
29	1			1911-3910-01	Dekal- säkerhet	Label- safety.....			
30	1			1911-3780-01	Kopplingshjul.....	Clutch drum			
31	1			1911-3779-01	Koppling	Clutch.....			
32	1			1911-3777-01	Rörkoppling kpl	Tube joint			
32A	1			9939-0630-12	• Skruv	• Screw			
32B	2			9799-0631-02	• Mutter	• Nut			
32C	1			9997-0635-12	• Skruv	• Screw			
33	1			1911-3776-01	Axelhylsa	Shaft sleeve.....			
34	1			1911-3929-01	• Gummiringstättning.....	• Grommet.....			
35	3			1911-3013-01	Skruv	Screw			
36	2			1911-4262-01	Skruv	Screw			
37	2			1911-4263-01	Bricka	Washer			
38	8			1911-4264-01	Skruv	Screw			
39	6			1911-4265-01	Skruv	Screw			