


Genuine Spare Parts

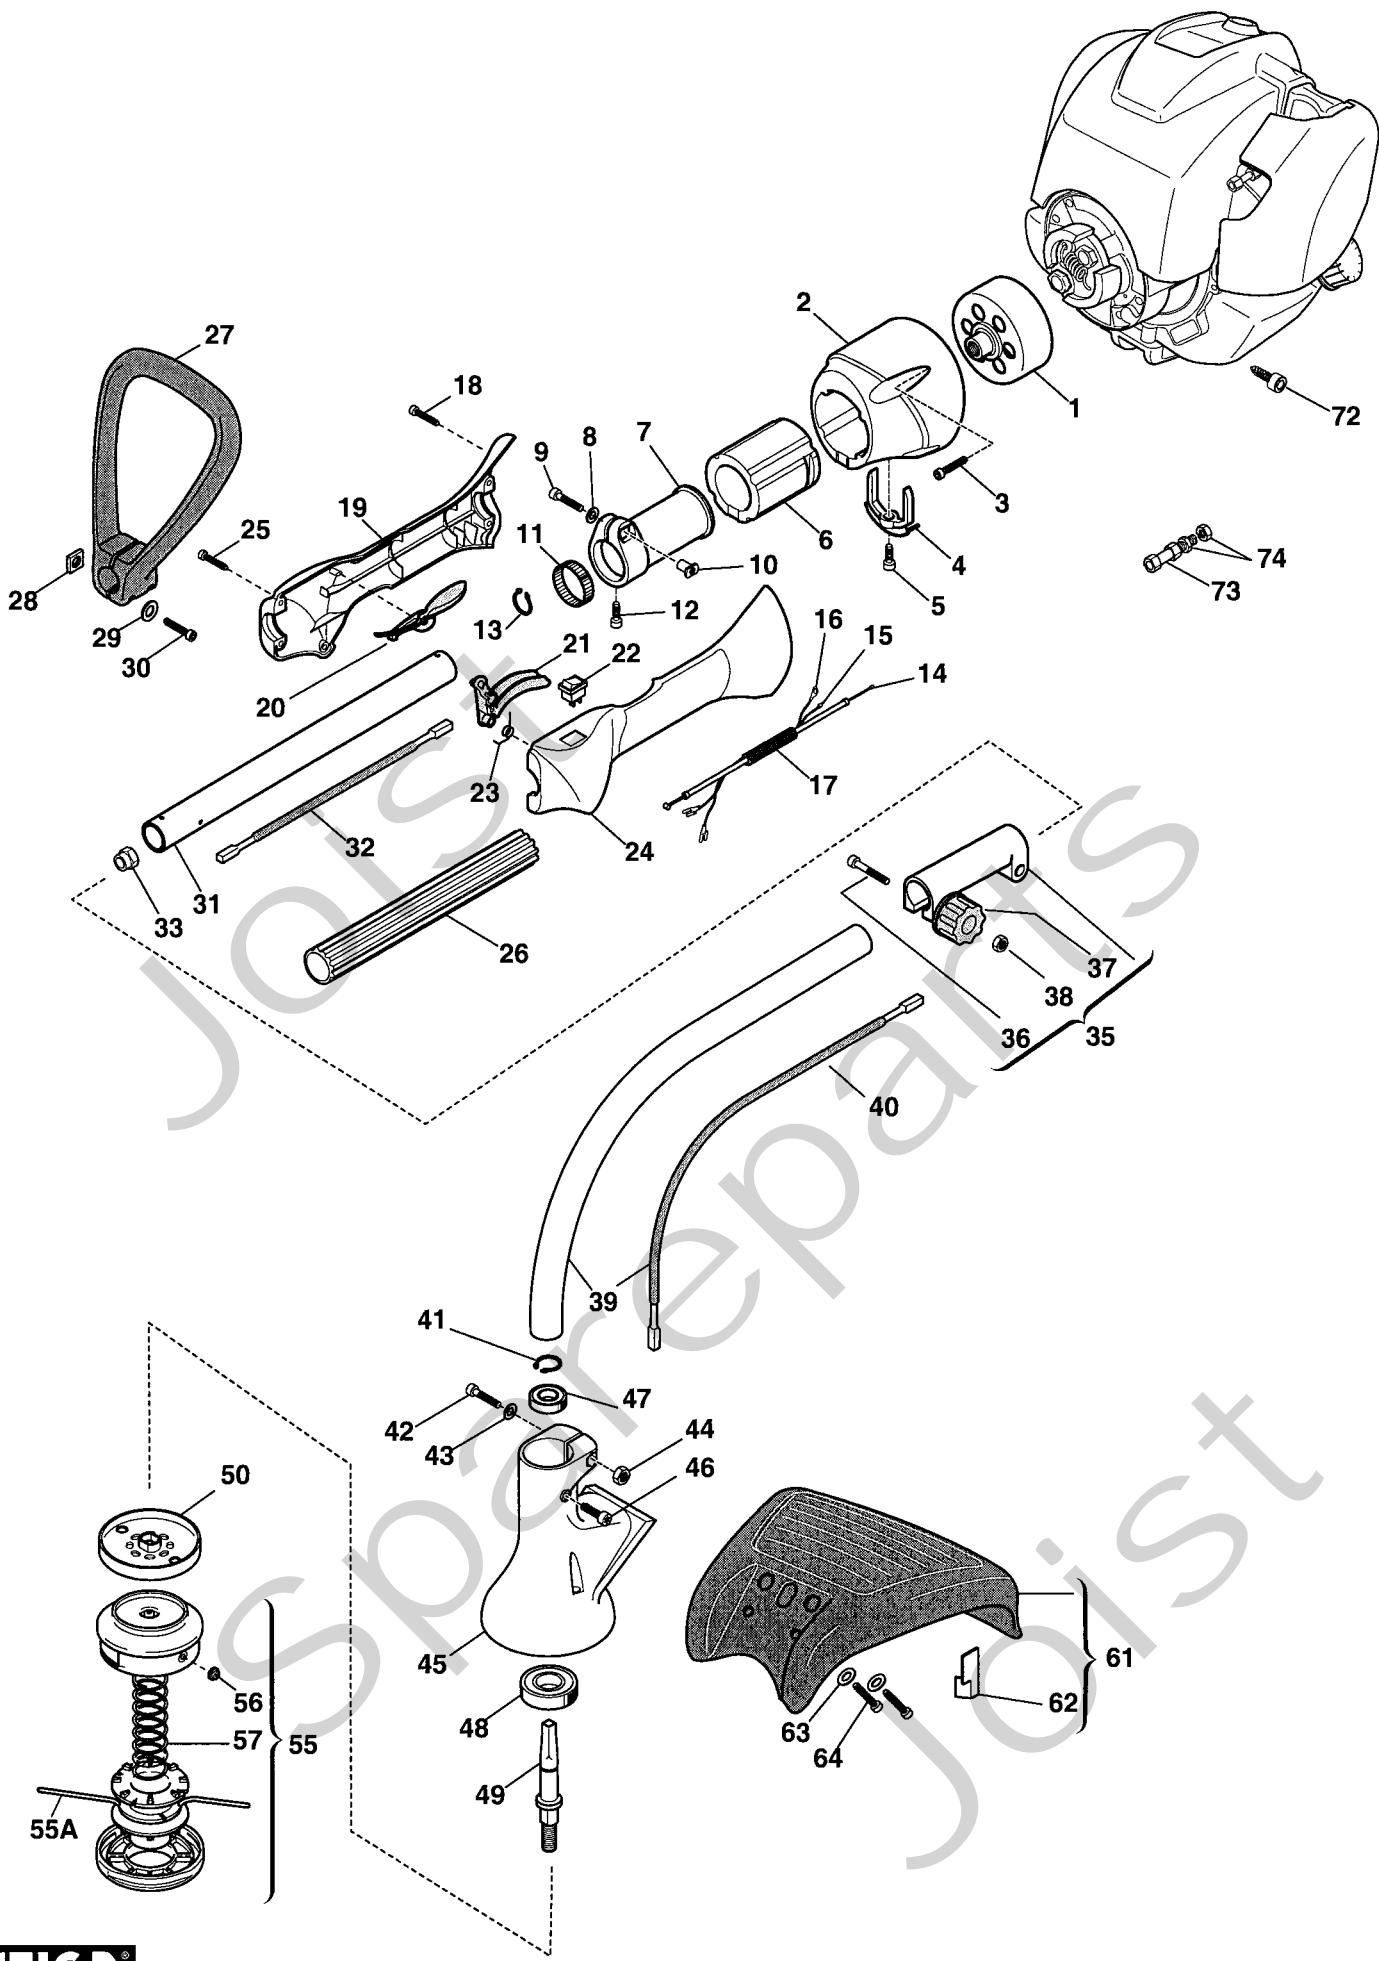



Utgåva Issue		Bildnr Picture No		ST 425J TRIMMER		ST 425J TRIMMER		Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes		
	1042 -11									
X	1	1		1911-4206-01	Kopplingstrumma.....	Clutch drum				
	2	1		1911-4189-01	Transmissionsstöd	Transmission support				
	3	4		1911-4438-01	Skruv.....	Screw.....				
	4	1		1911-4154-01	Gaffel.....	Fork.....				
	5	1		1911-3002-01	Skruv.....	Screw.....				
	6	1		1911-4155-01	Hylsa	Grommet				
X	7	1		1911-4188-01	Stöd.....	Support				
X	8	1		1911-4463-01	Bricka	Washer				
X	9	1		1911-4435-01	Skruv.....	Screw				
X	10	1		1911-4513-01	Bussning	Bushing				
X	11	1		1911-4507-01	Reduktion	Reduction				
X	12	1		1911-4505-01	Skruv.....	Screw				
X	13	1		1911-4509-01	Låsring	Snap ring				
	14	1		1911-4134-01	Gaswire	Throttle wire				
	15	1		1911-4127-01	Kabel	Cable				
	16	1		1911-4130-01	Jordkabel	Ground cable				
X	17	1		1911-4164-01	Kabelhölje	Wire sheath				
	18	1		1911-4434-01	Skruv	Screw				
	19	1		1911-4184-01	Handtag- hö	Handgrip- RH				
	20	1		1911-4170-01	Säkerhetsspärr	Safety lever				
X	21	1		1911-4169-01	Gasreglage	Throttle lever				
X	22	1		1911-4508-01	Brytare	Switch				
	23	1		1911-4173-01	Fjäder	Spring				
X	24	1		1911-4185-01	Handtag- vä	Handgrip- LH				
X	25	4		1911-4433-01	Skruv	Screw				
	26	1		1911-4152-01	Värmeisolering	Heat insulator				
	27	1		1911-4165-01	Handtag- främre	Handle- front				
X	28	2		1911-4504-01	Mutter	Nut				
X	29	2		1911-4464-01	Bricka	Washer				
X	30	2		1911-4436-01	Skruv	Screw				
X	31	1		1911-4522-01	Transmissionsrör	Transmission tube				
X	32	1		1911-4440-01	Drivaxel	Transmission shaft				
X	33	1		1911-4483-01	Axelhylsa	Shaft sleeve				
X	35	1		1911-4519-01	Rörkoppling kpl	Joint	Inkl. pos 36 - 38			
X	36	1		9997-0640-12	• Skruv	• Screw				
X	37	1		1911-4480-01	• Låsratt	• Knob				
X	38	1		1911-4231-01	• Mutter	• Nut				
X	39	1		1911-4524-01	Transmissionsrör	Transmission tube	Inkl. pos 40			
X	40	1		1911-4442-01	• Drivaxel	• Transmission shaft				
X	41	1		1911-4509-01	Låsring	Snap ring				
X	42	1		1911-4437-01	Skruv	Screw				
X	43	1		1911-4462-01	Bricka	Washer				
X	44	1		1911-4502-01	Mutter	Nut				
X	45	1		1911-4125-01	Transmissionshus	Gear case				
X	46	1		1911-4434-01	Skruv	Screw				
X	47	1		1911-4113-01	Kullager	Ball bearing				
X	48	1		1911-4506-01	Kullager	Ball bearing				
X	49	1		1911-4115-01	Axel	Head shaft				
X	50	1		1911-4510-01	Ringmutter- övre	Ring nut- upper				
	55	1		1911-4149-01	Skärhuvud kpl	Nylon head assy				
55A	1			1911-9008-04	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	0.45 kg (90 m)			
55A	1			1911-9008-08	Skärtråd (2.4 mm)	Cutting line (2.4 mm)	15 m			
X	56	2		1911-4512-01	• Bussning	• Bushing				
X	57	1		1911-4174-01	• Fjäder	• Spring				
X	61	1		1911-4216-01	Skyddskåpa kpl	Safety cover assy	Inkl. pos 62			
X	62	1		1911-4511-01	• Kniv	• Line cutter				
X	63	2		1911-4465-01	Bricka	Washer				
X	64	2		1911-4433-01	Skruv	Screw				
	72	1		1911-3261-01	Skruv	Screw				
X	73	1		1911-3998-01	Wirejustering	Throttle cable adjust				
X	74	2		1911-4503-01	Mutter	Nut				
	99	1		1911-3212-01	Skyddsglasögon	Protective goggles	Tillbehör/accessory			