



Genuine Spare Parts



Joist
Spareparts
Joist

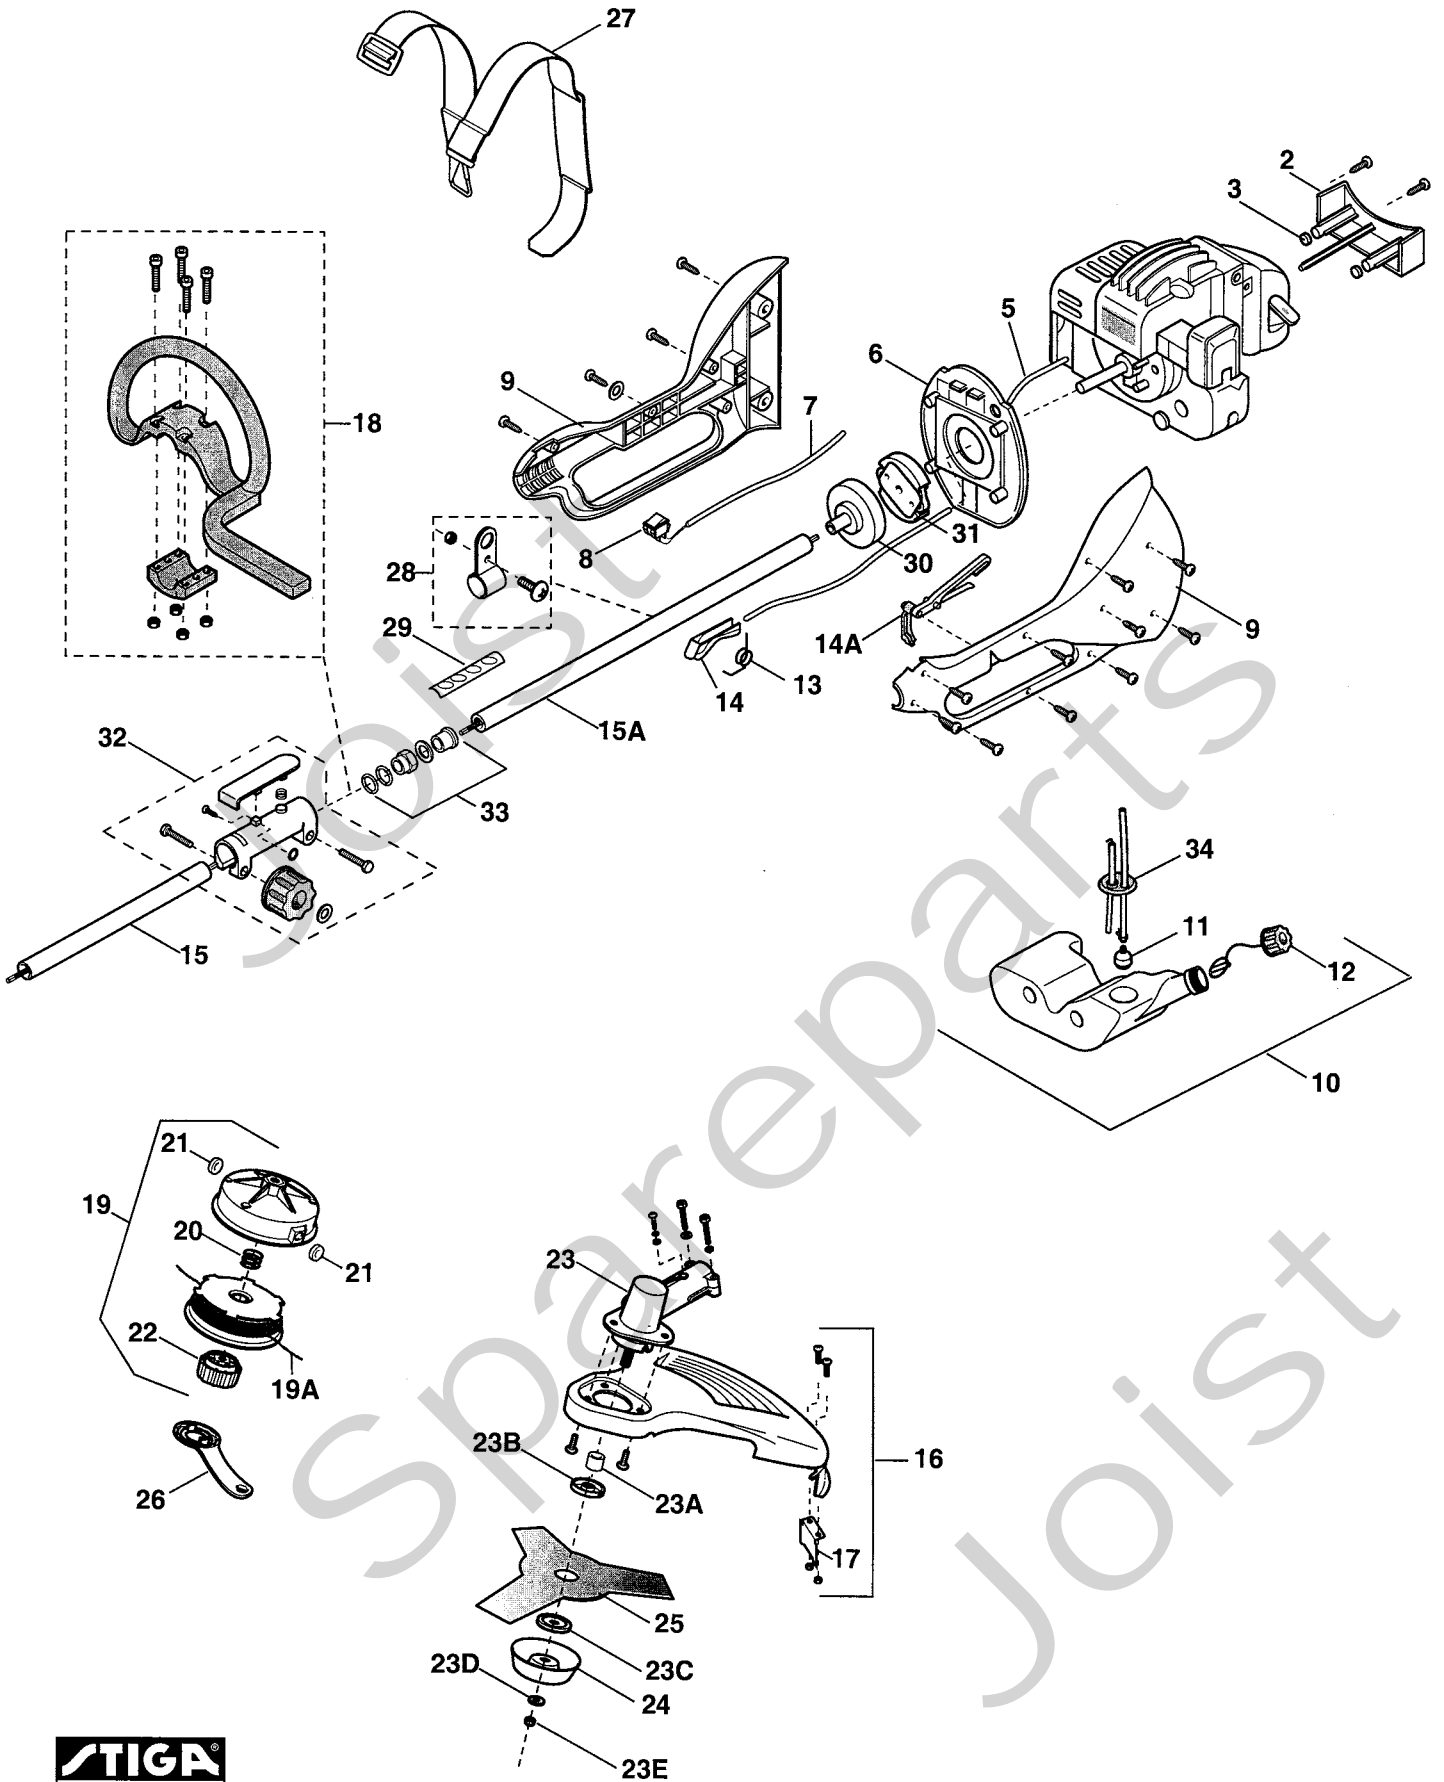


Utgåva Issue		Bildnr Picture No		SB 22 RÖJARE RIGG SKÄRHUVUD		SB 22 BRUSH CUTTER DRIVE SHAFT STRINGHEAD		Sida Page	
2004-12		1616A						254	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6110								
2	1			1911-3761-01	Platta	Fixed plate			
3	4			1911-3762-01	Isolator	Insulator			
5	1			1911-3911-01	Gaswire	Throttle cable			
6	1			1911-3763-01	Lock	Cover			
7	1			1911-3764-01	Jordkabel	Ground wire			
8	1			1911-3918-01	Strömbrytare	Switch			
9	1			1911-3919-01	Kåpa kpl- gul	Housing assy- yellow			
10	1			1911-3766-01	Bränsletank kpl	Fuel tank assy		Inkl. pos 11, 12, 34	
11	1			1911-3767-01	• Bränslefilter	• Fuel pick-up			
12	1			1911-3912-01	• Tanklock	• Fuel tank cap			
13	1			1911-3913-01	Fjäder	Spring			
14	1			1911-3914-01	Gasreglage	Throttle trigger			
14A	1			1911-3915-01	Säkerhetsspärr	Safety lever			
15	1			1911-3916-01	Rör nedre m.drivaxel	Lower tube w.shaft			
15A	1			1911-3917-01	Rör övre m.drivaxel	Upper tube w.shaft			
16	1			1911-3896-01	Stenskydd kpl	Stone guard assy		Inkl. pos 17	
17	1			1911-3772-01	• Kniv	• Line cutter blade			
18	1			1911-3897-01	Handtag främre kpl	Front handle assy			
19	1			1911-3895-01	Skärhuvud kpl	Cutting head assy		Inkl. pos 20 - 22	
19A	1			1911-9007-04	Skärtråd (2.0 mm)	Cutting line (2.0 mm)		0.45 kg (130 m)	
19A	1			1911-9007-08	Skärtråd (2.0 mm)	Cutting line (2.0 mm)		15 m	
20	1			1911-3898-01	• Fjäder	• Spring			
21	2			1911-3899-01	• Trådhylsa	• Line inlet			
22	1			1911-3757-01	• Ratt (vå-gänga)	• Knob (LH-thread)			
23	1			1911-3900-01	Snäckväxel kpl	Gear case assy			
23A	1			1911-3901-01	Hylsa	Collar			
23B	1			1911-3902-01	Övre ringmutter	Upper ring nut			
23C	1			1911-3903-01	Nedre ringmutter	Lower ring nut			
23D	1			1911-3904-01	Bricka	Washer			
23E	1			1911-3905-01	Mutter	Nut			
24	1			1911-3906-01	Stabiliseringsskål	Stabilizer bowl			
25	1			1911-3920-01	Röjklina	Clearing blade		3T	
26	1			1911-3907-01	Nyckel- skärhuvud	Key-cutting head			
27	1			1911-3908-01	Sele	Harness			
28	1			1911-3909-01	Fäste f. sele	Harness support			
29	1			1911-3910-01	Dekal- säkerhet	Label- safety			
30	1			1911-3780-01	Kopplingshjul	Clutch drum			
31	1			1911-3779-01	Koppling	Clutch			
32	1			1911-3777-01	Rörkoppling kpl	Tube joint			
33	1			1911-3776-01	Axelhylsa	Shaft sleeve			
X 34	1			1911-3929-01	• Gummiringstättning	• Grommet			

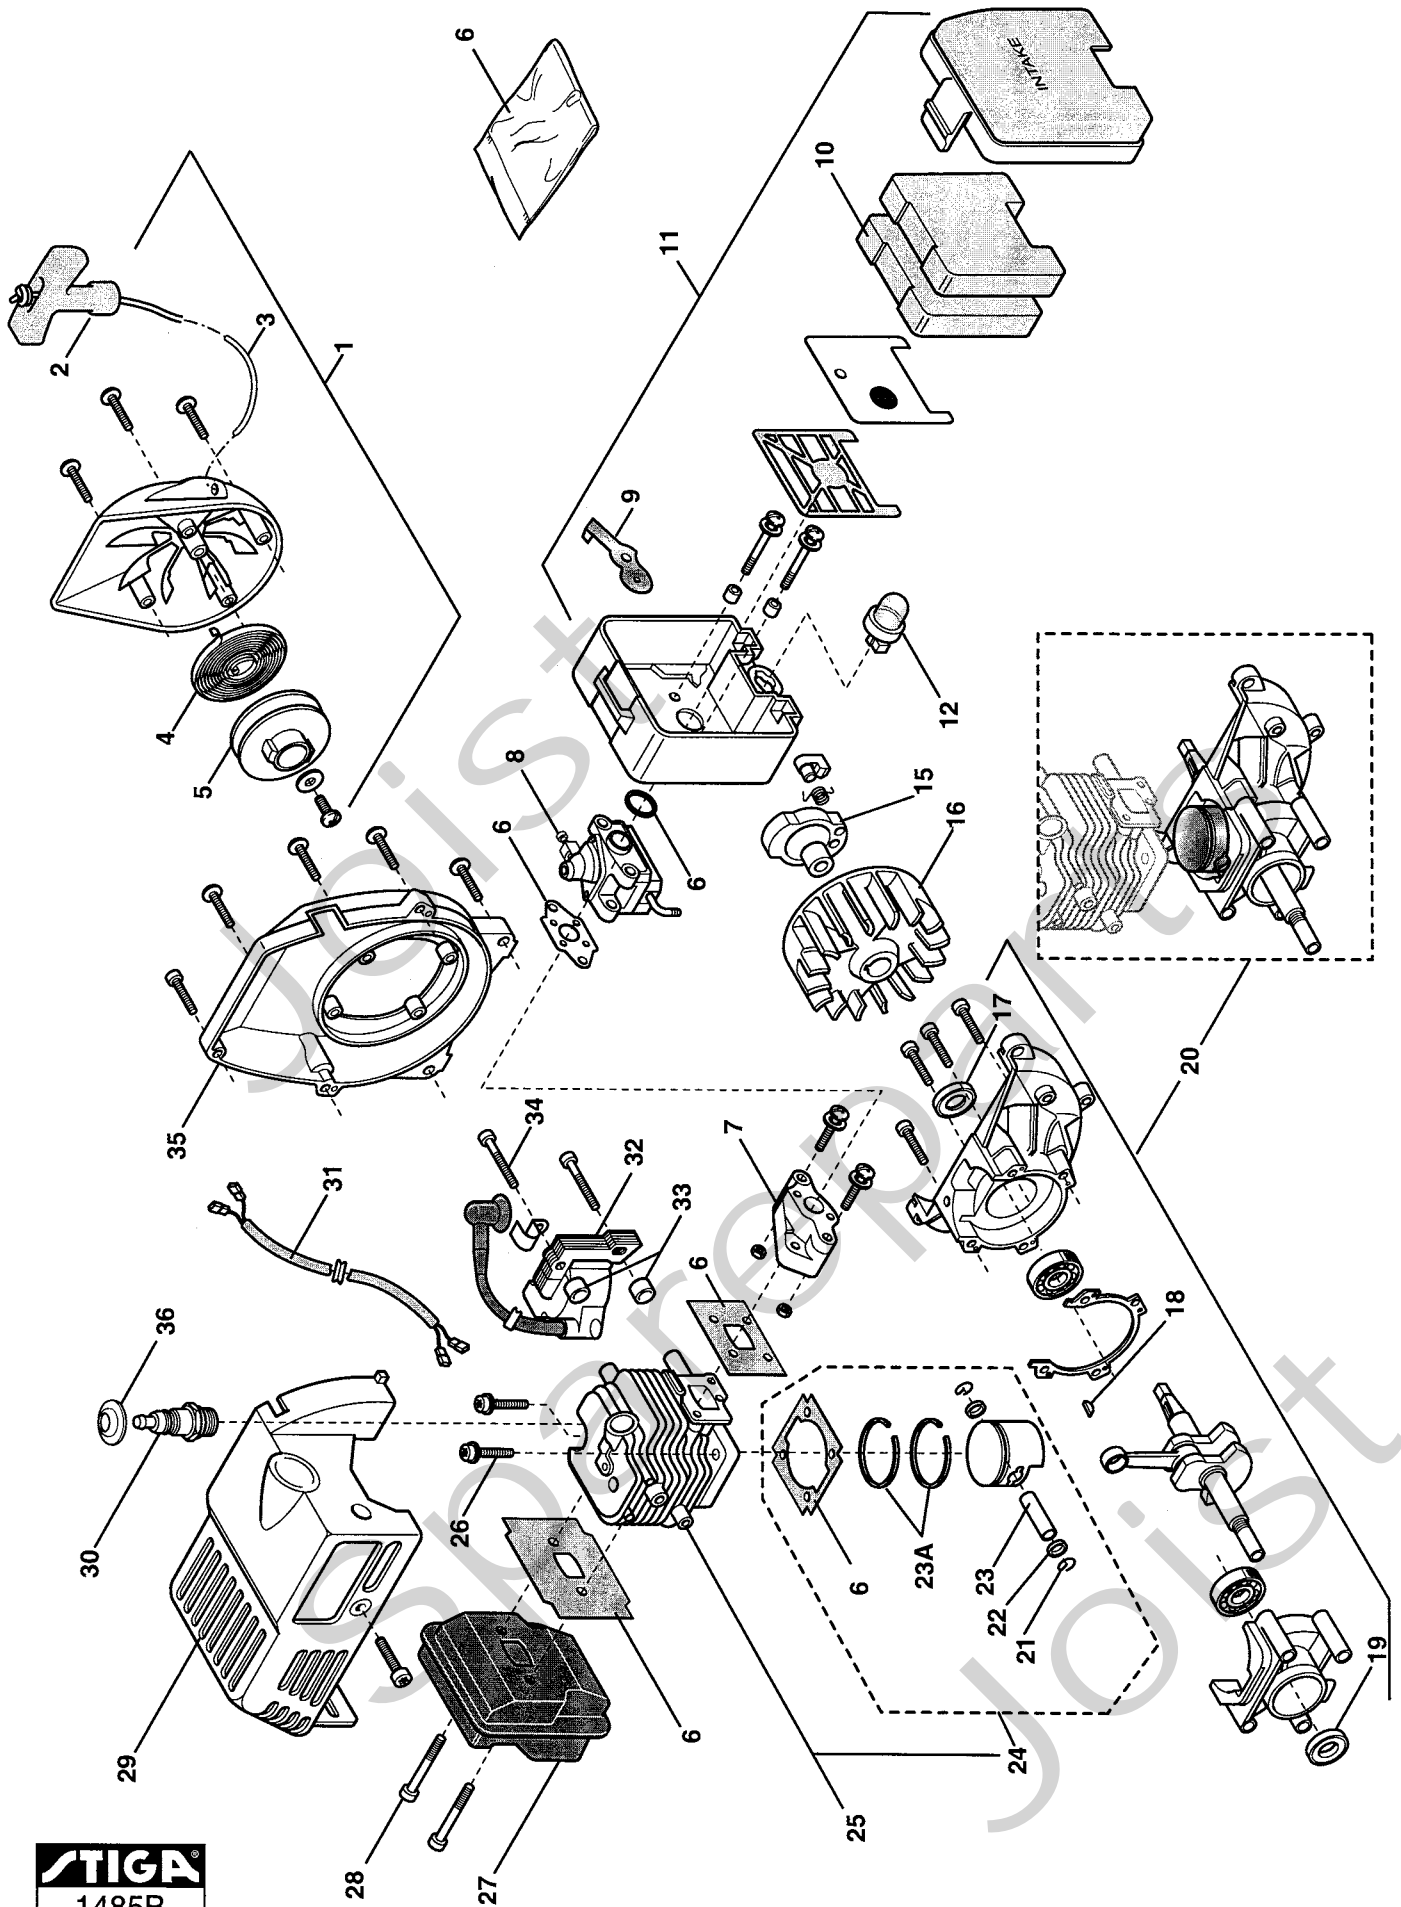

STIGA
 1485B
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		ST 210-SB 22 MOTOR		ST 210-SB 22 ENGINE		Sida Page	
2004-12		1485B						256	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	1021 6110								
1	1			1911-3781-01	Start kpl.....	Start assy.....		Inkl. pos 2 - 5	
2	1			1911-3782-01	• Starthandtag.....	• Starter handle.....			
3	1			1911-3783-01	• Startsnöre.....	• Starter rope.....			
4	1			1911-3784-01	• Fjäder.....	• Spring.....			
5	1			1911-3785-01	• Linhjul.....	• Pulley.....			
6	1			1911-3786-01	Packningssats.....	Gasket set.....			
7	1			1911-3787-01	Förgasarfäste.....	Carburettor base.....			
8	1			1911-3788-01	Förgasare kpl.....	Carburettor assy.....			
9	1			1911-3789-01	• Chokespjäll.....	• Choke valve.....			
10	2			1911-3790-01	• Luftfilter.....	• Air filter.....			
11	1			1911-3791-01	Luftfilter kpl.....	Air filter assy.....		Inkl. pos 9 - 10	
12	1			1911-3792-01	Primer.....	Primer.....			
15	1			1911-3855-01	Startspärr kpl.....	Starter pawl assy.....			
16	1			1911-3796-01	Svänghjul.....	Flywheel.....			
17	1			1911-3797-01	• Tätningsring.....	• Seal ring.....			
18	1			1911-3798-01	• Kil.....	• Key.....			
19	1			1911-3799-01	• Tätningsring.....	• Seal ring.....			
20	1			1911-3800-01	Short-block.....	Short-block.....			
21	2			1911-3801-01	• Låsring.....	• Lock ring.....			
22	2			1911-3802-01	• Packning.....	• Gasket.....			
23	1			1911-3803-01	• Kolvbult.....	• Piston pin.....			
23A	2			1911-3816-01	• Kolvring.....	• Piston ring.....			
24	1			1911-3804-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 21 - 23A Inkl. pos 24	
25	1			1911-3805-01	Cylinder kpl m.kolv.....	Cylinder assy w.pisto.....			
26	2			1911-3806-01	Skruv.....	Screw.....			
27	1			1911-3807-01	Ljuddämpare.....	Muffler.....			
28	2			1911-3808-01	Skruv.....	Screw.....			
29	1			1911-3809-01	Motorkåpa.....	Engine shield.....			
30	1			9400-0258-00	Tändstift.....	Spark plug.....		Champion CJ7Y	
31	1			1911-3810-01	Kablage.....	Wiring harness.....			
32	1			1911-3811-01	Elektronikspole.....	Electronic coil.....			
33	2			1911-3812-01	Distans.....	Spacer.....			
34	2			1911-3813-01	Skruv.....	Screw.....			
35	1			1911-3814-01	Svänghjulslock.....	Flywheel cover.....			
36	1			1911-3815-01	Tändstiftsskydd.....	Spark plug cover.....			

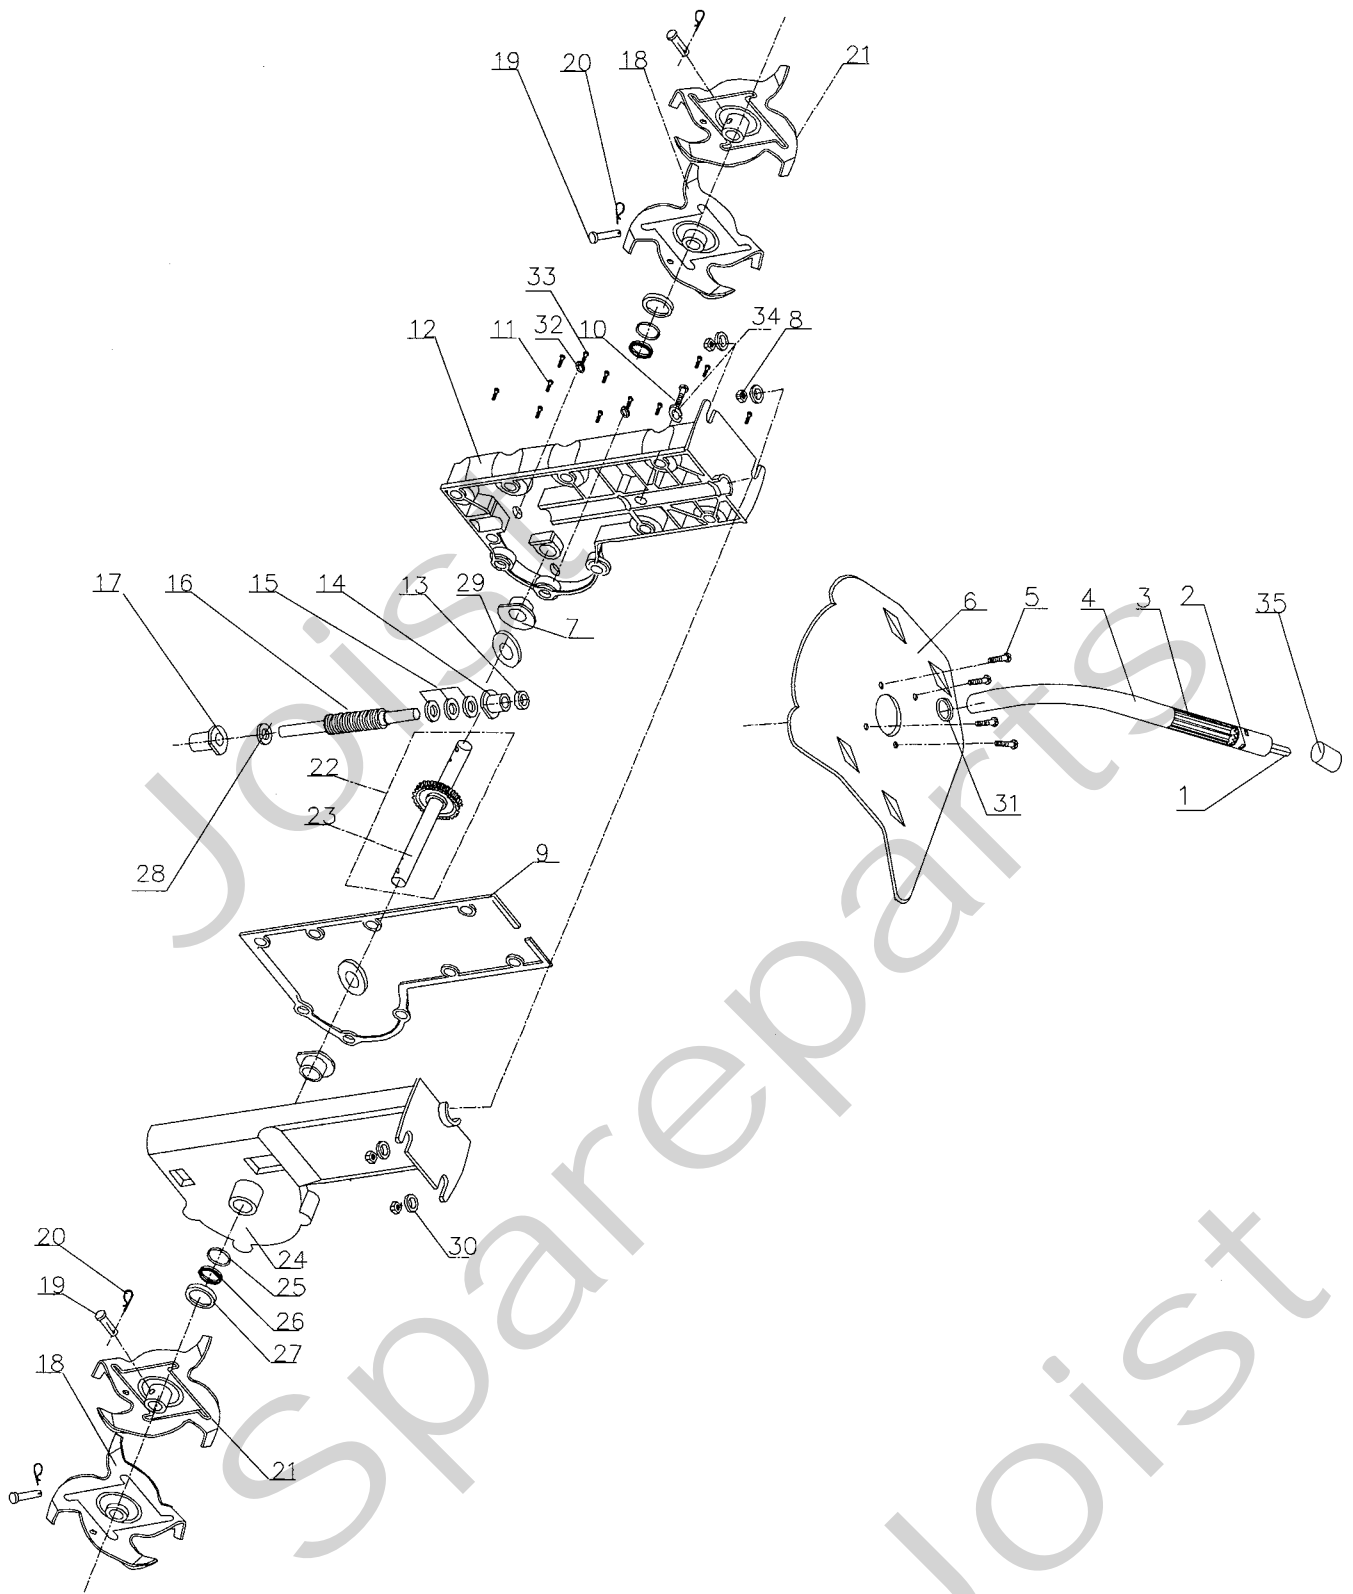

Utgåva Issue		Bildnr Picture No		KULTIVATOR ST 210-SB 22 ART.NR 19-1921-11		CULTIVATOR ST 210-SB 22 ART.NO 19-1921-11		Sida Page	
2004-12		1733						366	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	1921								
X	1	1		1911-2011-01	Flexaxel.....	Flex shaft.....			
X	2	1		1911-2030-01	Bricka	Washer.....			
X	3	1		1911-2014-01	Bussning	Bushing.....			
X	4	1		1911-2010-01	Rör	Steel tube.....			
X	5	4		1911-2027-01	Skruv	Screw.....			
X	6	1		1911-2006-01	Skydd	Guard shield.....			
X	7	2		1911-2016-01	Bussning	Bushing.....			
X	8	4		1911-2026-01	Mutter.....	Nut.....			
X	9	1		1911-2015-01	Packning.....	Gasket.....			
X	10	1		1911-2019-01	Skruv	Screw.....			
X	11	10		1911-2028-01	Skruv	Screw.....			
X	12	1		1911-2022-01	Transm.hus- hö.....	Gearbox- RH.....			
X	13	1		1911-2008-01	Tätningring	Oil seal.....			
X	14	1		1911-2017-01	Bussning	Bushing.....			
X	15	1		1911-2013-01	Lager	Bearing.....			
X	16	1		1911-2007-01	Snäckskruv	Worm shaft.....			
X	17	1		1911-2018-01	Bussning	Bushing.....			
X	18	2		1911-2024-01	Rotor	Blade.....			
X	19	4		1911-2020-01	Sprint.....	Pin.....			
X	20	4		1911-2021-01	Låssprint	Pin lock.....			
X	21	2		1911-2025-01	Rotor	Blade.....			
X	22	1		1911-2012-01	Axel m drev	Spiral gear assy.....		Inkl. pos 23	
X	24	1		1911-2023-01	Transm.hus- vä.....	Gearbox- LH.....			
X	25	2		1911-2001-01	O-ring	O-ring.....			
X	26	2		1911-2000-01	Bricka	Washer.....			
X	27	2		1911-2009-01	Filtring	Dust ring.....			
X	28	1		1911-2004-01	Bricka	Washer.....			
X	29	2		1911-2003-01	Bricka	Washer.....			
X	30	4		1911-2031-01	Bricka	Washer.....			
X	31	1		1911-2002-01	O-ring	O-ring.....			
X	32	2		1911-2005-01	Bricka	Washer.....			
X	33	2		1911-2029-01	Skruv	Screw.....			
X	34	1		1911-2032-01	Fjäderbricka	Spring washer.....			
X	35	1		1911-2033-01	Skyddshatt.....	Sleeve.....			