


Genuine Spare Parts




Joist
Spareparts
Joist

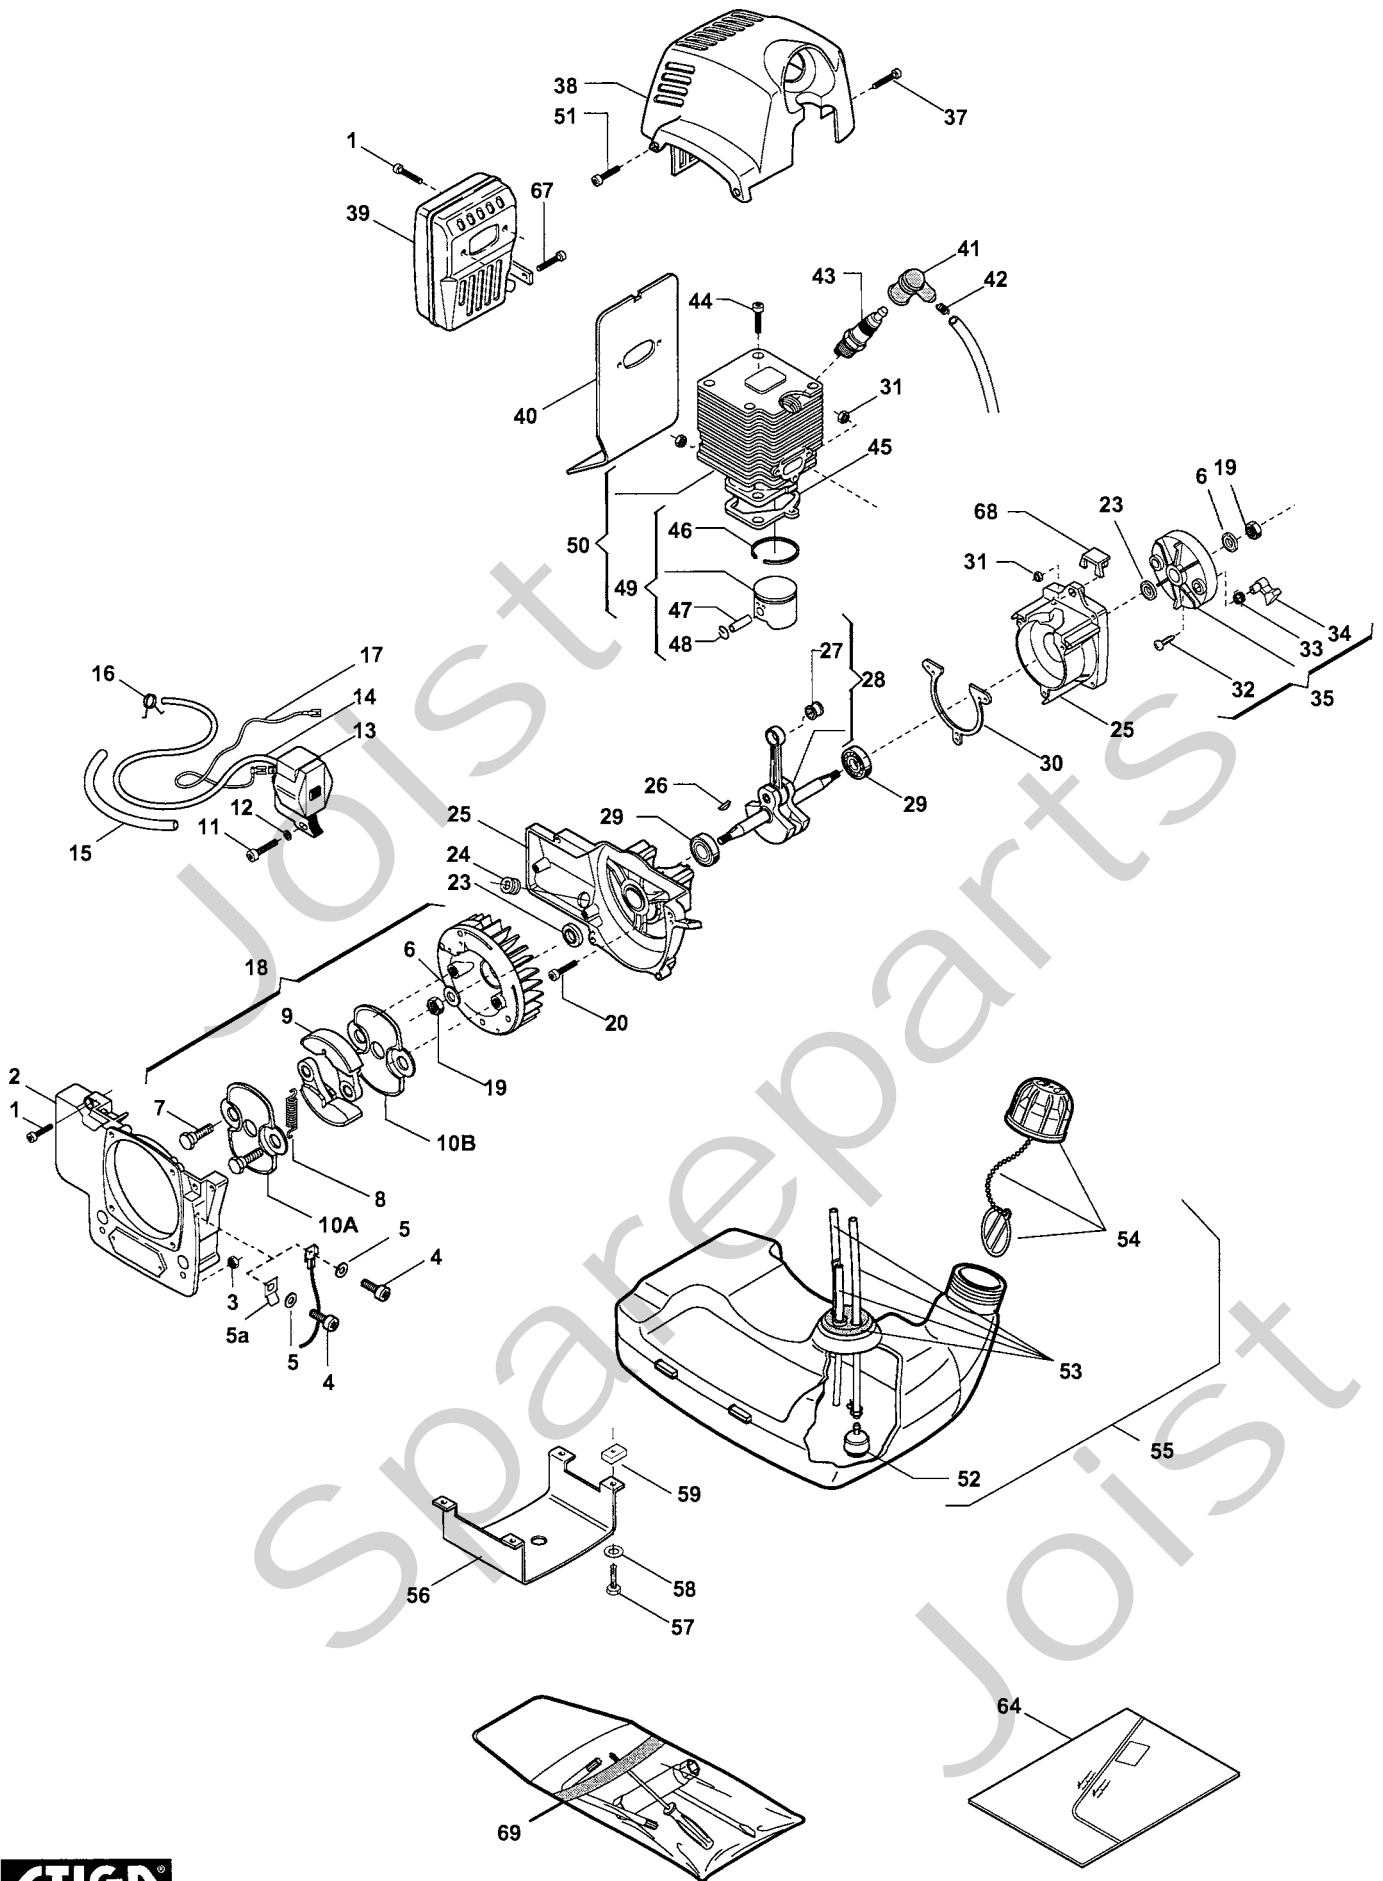


Utgåva Issue		Bildnr Picture No		SB 43P- SB 44P SB 52P PRO RÖJARE MOTOR	SB 43P- SB 44P SB 52P PRO BRUSH CUTTER ENGINE	Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4630 -14	6113 -12 6115 -12						
1	10	10		1911-3007-01	Skruv.....	Screw.....		
2	1	1		1911-3732-01	Transm.stödhus.....	Transm.support case.....		
3	4	4		1911-3023-01	Mutter.....	Nut.....		
4	1	1		1911-3005-01	Skruv.....	Screw.....		
5	1	1		1911-3016-01	Bricka.....	Washer.....		
5A	1	1		1911-3874-01	Flatstiftskontakt.....	Connector.....		
6	2	2		1911-3019-01	Bricka.....	Washer.....		
7	2	2		1911-3028-01	• Skruv.....	• Screw.....		
8	1	1		1911-3086-01	• Fjäder.....	• Spring.....		
8	1	1		1911-3088-01	• Fjäder.....	• Spring.....		
9	2	2		1911-3094-01	• Koppling.....	• Clutch unit.....		
9	2	2		1911-3095-01	• Koppling.....	• Clutch unit.....		
10A	1	1		1911-3078-01	• Kopplingsplatta- yttre.....	• Clutch guide plate- ou.....		
10B	1	1		1911-3079-01	• Kopplingsplatta- inre.....	• Clutch guide plate- in.....		
11	2	2		1911-3009-01	Skruv.....	Screw.....		
12	2	2		1911-3017-01	Bricka.....	Washer.....		
13	1	1		1911-4443-01	Elektronikspole.....	Electronic coil.....		
14	1	1		1911-3055-01	Tändstiftskabel.....	Spark plug cable.....		
15	1	1		1911-4248-01	Kabelhölje.....	Wire sheath.....		
16	1	1		1911-3092-01	Klämma.....	Clamp.....		
17	1	1		1911-3673-01	Jordkabel.....	Earth cable.....		
18	1	1		1911-3186-01	Svänghjul kpl.....	Flywheel assy.....		Inkl. pos 7 - 10
18	1	1		1911-3821-01	Svänghjul kpl.....	Flywheel assy.....		Inkl. pos 7 - 10
19	2	2		1911-3020-01	Mutter.....	Nut.....		
20	4	4		1911-3010-01	Skruv.....	Screw.....		
23	2	2		1911-3044-01	Tätningssring.....	Seal ring.....		
24	1	1		1911-3116-01	Gummihylsa.....	Grommet.....		
25	1	1		1911-3823-01	Vevhus kpl.....	Crankcase assy.....		
26	1	1		1911-3049-01	Kil.....	Key.....		
27	1	1		1911-3041-01	• Nällager.....	• Needle bearing.....		
28	1	1		1911-3185-01	Vevaxel kpl.....	Crankshaft assy.....		Inkl. pos 27
29	2	2		1911-3033-01	Kullager.....	Ball bearing.....		
30	1	1		1911-3098-01	• Packning.....	• Gasket.....		
31	5	5		1911-3022-01	Mutter.....	Nut.....		
32	2	2		1911-3002-01	• Skruv.....	• Screw.....		
33	2	2		1911-3087-01	• Fjäder.....	• Spring.....		
34	2	2		1911-3118-01	• Startspärr.....	• Starter hook.....		
35	1	1		1911-3824-01	Startkopp kpl.....	Starter cup assy.....		Inkl. pos 32 - 34
37	1	1		1911-3006-01	Skruv.....	Screw.....		
38	1	1		1911-3174-01	Cylinderkäpa.....	Cylinder cover.....		
39	1	1		1911-3136-01	Ljuddämpare.....	Muffler.....		
40	1	1		1911-3105-01	• Packning.....	• Gasket.....		
41	1	1		1911-3113-01	Tändstiftshylsa.....	Spark plug cover.....		
42	1	1		1911-3093-01	Tändstiftsfjäder.....	Spark plug spring.....		
43	1	1		9400-0258-00	Tändstift.....	Spark plug.....		Champion CJ7Y
44	4	4		1911-3009-01	Skruv.....	Screw.....		
45	1	1		1911-3099-01	• Cylinderpackning.....	• Cylinder gasket.....		
46	1	1		1911-3046-01	•• Kolvring.....	•• Piston ring.....		
46	1	1		1911-3303-01	•• Kolvring.....	•• Piston ring.....		
47	1	1		1911-3050-01	•• Kolvbult.....	•• Piston pin.....		
47	1	1		1911-3305-01	•• Kolvbult.....	•• Piston pin.....		
48	2	2		1911-3068-01	•• Låsring.....	•• Lock ring.....		
49	1	1		1911-3195-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 46 - 48
49	1	1		1911-3595-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 46 - 48
50	1	1		1911-3196-01	Cylinder kpl m.kolv.....	Cylinder assy w.pist.....		Inkl. pos 49
50	1	1		1911-3596-01	Cylinder kpl m.kolv.....	Cylinder assy w.pist.....		Inkl. pos 49
51	2	2		1911-3007-01	Skruv.....	Screw.....		
52	1	1		1911-3150-01	• Bränslefilter.....	• Intake filter.....		
53	1	1		1911-3209-01	• Slangtätning kpl.....	• Grommet assy.....		
54	1	1		1911-3207-01	• Tanklock.....	• Fuel cap.....		
55	1	1		1911-3147-01	Bränsletank kpl.....	Fuel tank assy.....		Inkl. pos 52 - 54
56	1	1		1911-3740-01	Fläns.....	Flange.....		
57	4	4		1911-3006-01	Skruv.....	Screw.....		Plast/plastic





X

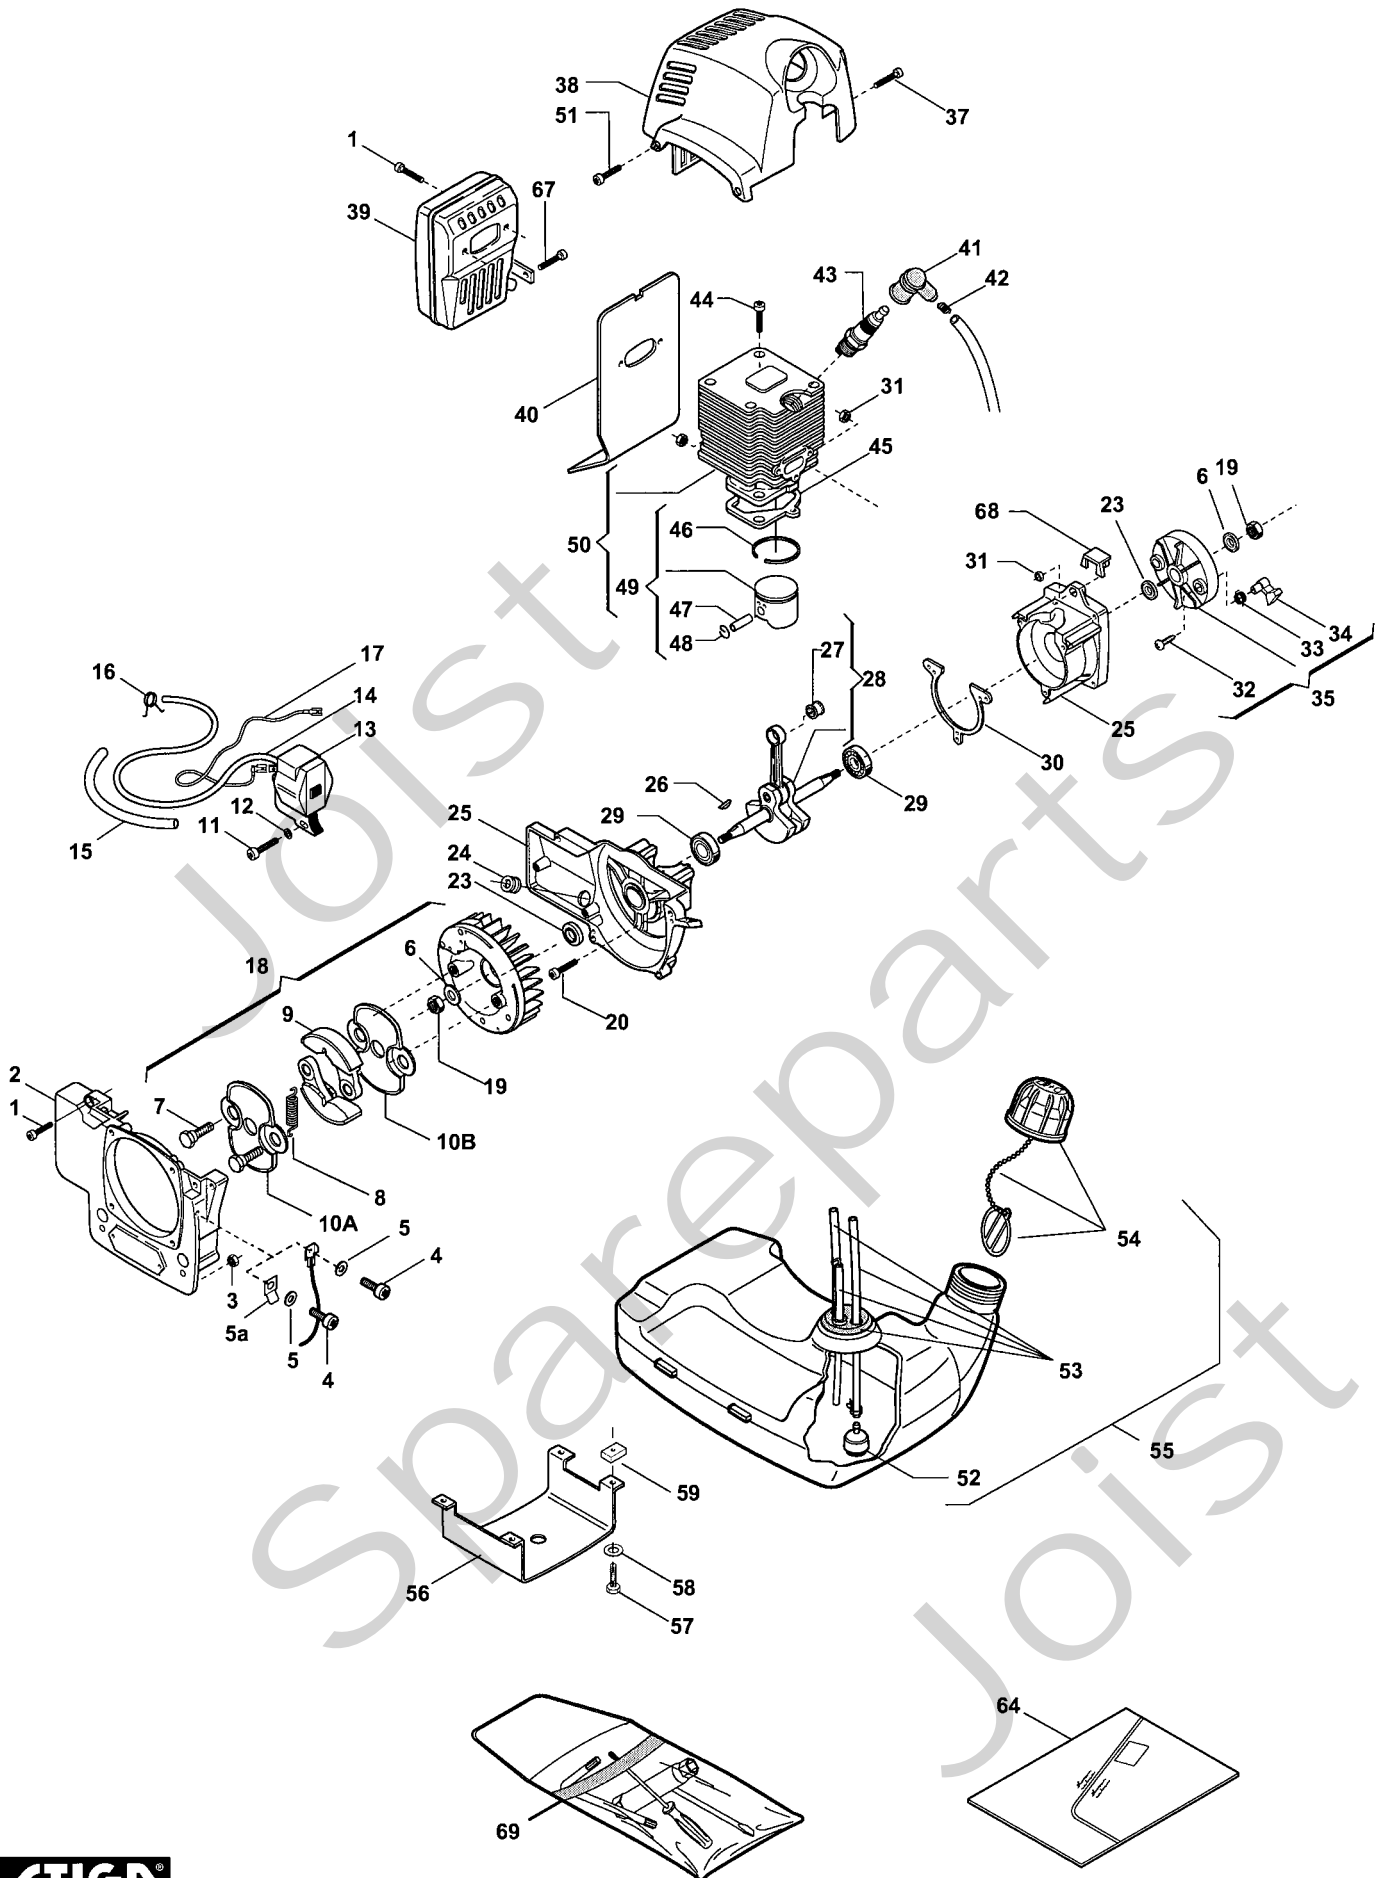

Utgåva Issue		Bildnr Picture No		SB 43P- SB 44P SB 52P PRO RÖJARE MOTOR		SB 43P- SB 44P SB 52P PRO BRUSH CUTTER ENGINE		Sida Page
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4630 -14	6113 -12	6115 -12					
57	4	4		1911-3007-01	Skruv	Screw		Stål/steel Inkl. pos 30, 40, 45
58	4	4		1911-3017-01	Bricka	Washer		
59	4	4		1911-3023-01	Mutter	Nut		
64	1	1		1911-3206-01	Packningsatts	Gasket set		
67	1	1		1911-3013-01	Skruv	Screw		
68	1	1		1911-3701-01	Distans	Spacer		
69	1	1		1911-3723-01	Påse m.verktyg	Bag w.tools		

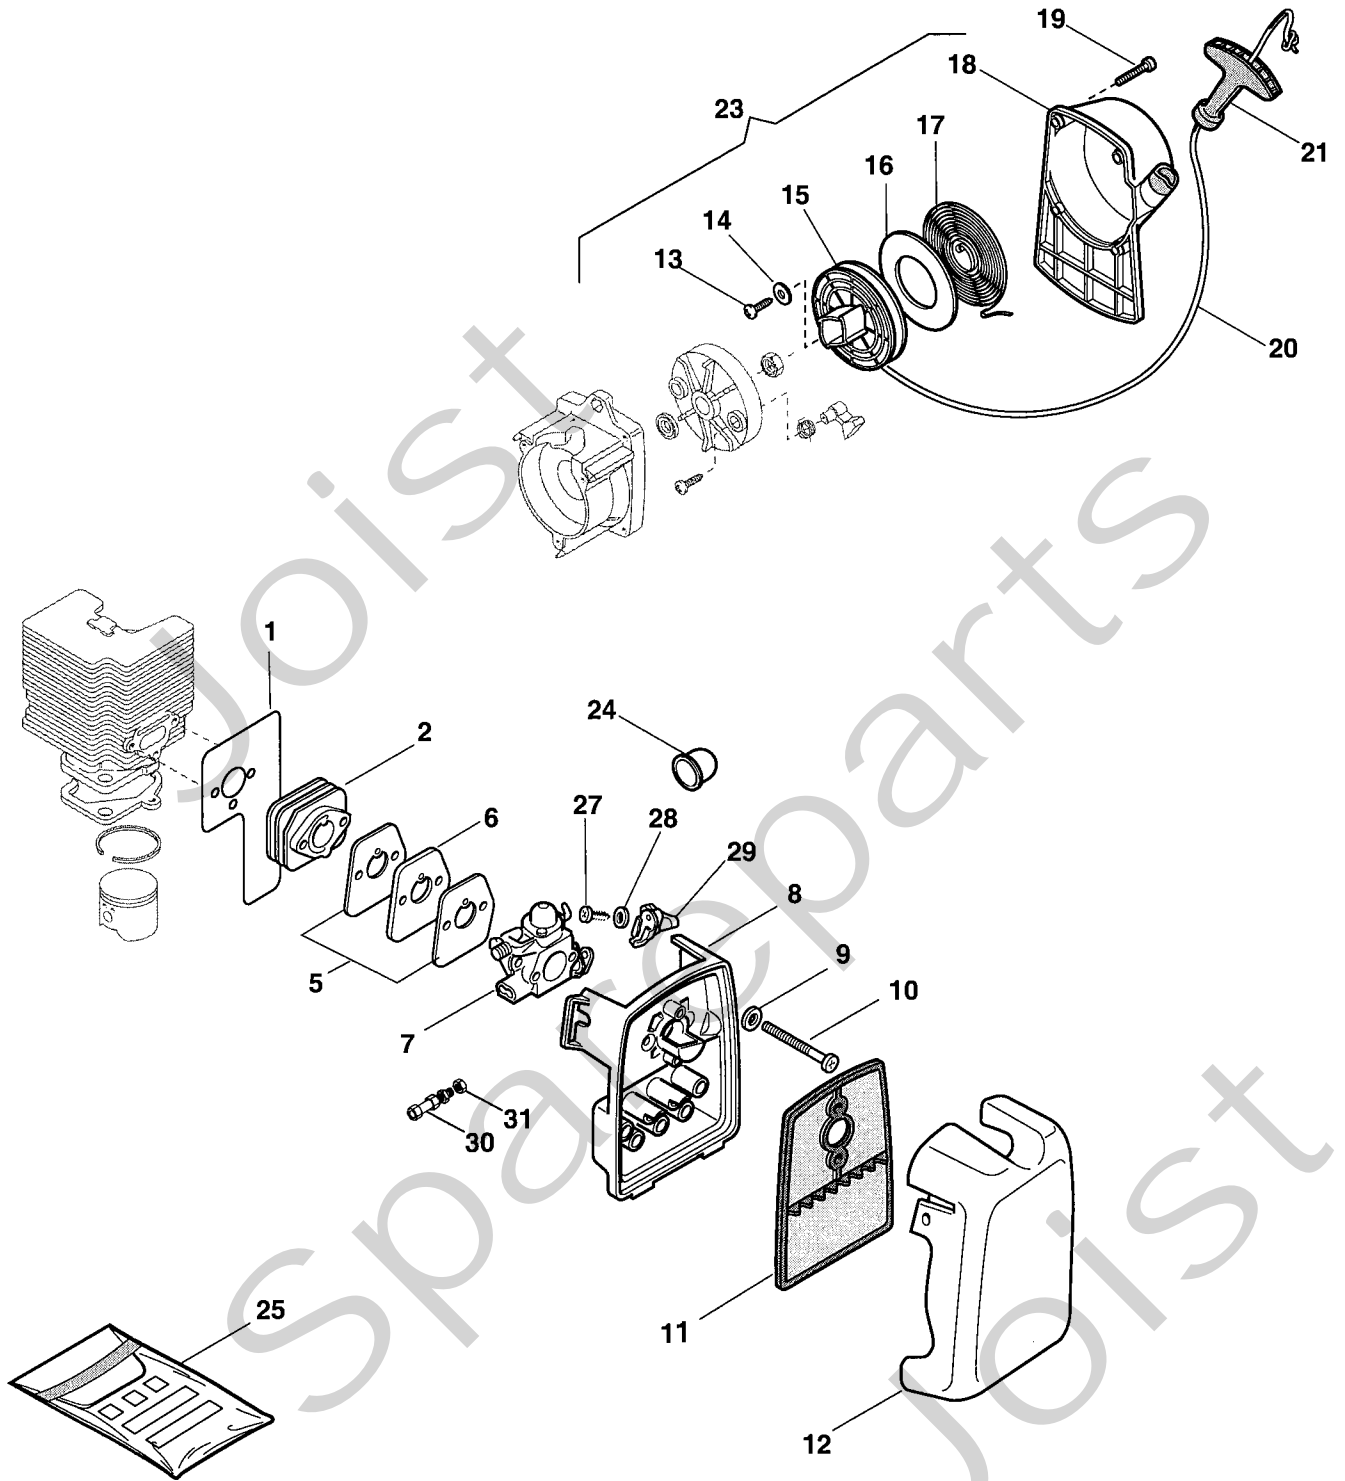


Utgåva Issue		Bildnr Picture No		SB 43P- SB 44P SB 52P PRO RÖJARE FÖRGASARE		SB 43P- SB 44P SB 52P PRO BRUSH CUTTER CARBURETTOR		Sida Page	
2006- 12		1289B						306	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4630 -14	6113 -12 6115 -12							
X	1	1	1	1911-3106-01	Packning.....	Gasket.....			
	2	1	1	1911-4514-01	Insugningsrör.....	Intake manifold.....			
	5	2	2	1911-3440-01	Packning.....	Gasket.....			
X	6	1	1	1911-4515-01	Värmedistans.....	Heat block.....			
X	7	1	1	1911-4450-01	Förgasare kpl.....	Carburettor assy.....		WT-761A	
X	8	1	1	1911-4488-01	Luftfilterfäste.....	Air cleaner base.....			
	9	2	2	1911-3015-01	Bricka.....	Washer.....			
X	10	2	2	1911-4525-01	Skruv.....	Screw.....			
	11	1	1	1911-3127-01	Luftfilter.....	Air filter.....			
X	12	1	1	1911-4456-01	Luftfilterkåpa.....	Air filter cover.....			
	13	1	1	1911-3002-01	• Skruv.....	• Screw.....			
	14	1	1	1911-3071-01	• Bricka.....	• Washer.....			
	15	1	1	1911-3165-01	• Linhjul.....	• Starter pulley.....			
	16	1	1	1911-3100-01	• Skiva.....	• Disc.....			
	17	1	1	1911-3176-01	• Startfjäder.....	• Starter spring.....			
	18	1	1	1911-3204-01	• Starthus.....	• Starter recoil case.....			
	19	4	4	1911-3007-01	• Skruv.....	• Screw.....			
	20	1	1	1911-3129-01	• Startsnöre.....	• Starter cord.....			
	21	1	1	1911-3479-01	• Starthandtag.....	• Starter handle.....			
	23	1	1	1911-3149-01	Start kpl.....	Starter assy.....		Inkl. pos 13 - 21	
	24	1	1	1911-3115-01	Primer.....	Primer bulb.....			
	25	1	1	1911-3157-01	Packning- membransats.....	Gasket- diaphragm set.....			
	27	1	1	1911-3950-01	Skruv.....	Screw.....			
X	28	1	1	1911-4526-01	Bricka.....	Washer.....			
	29	1	1	1911-4352-01	Chokearm.....	Choke lever.....			
	30	1	1	1911-3998-01	Wirejustering.....	Throttle cable adjust.....			
	31	1	1	1911-4000-01	Mutter.....	Nut.....			

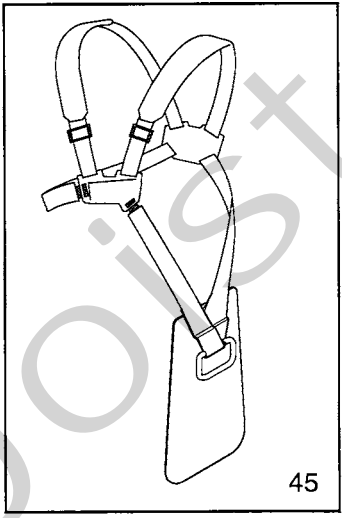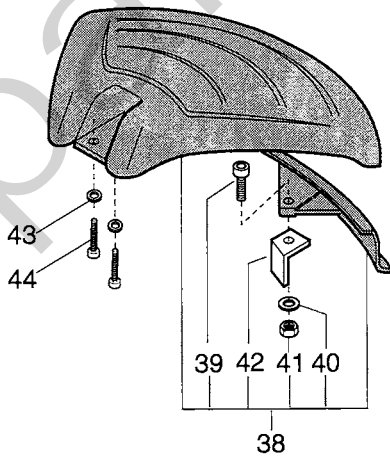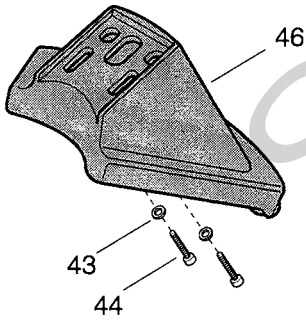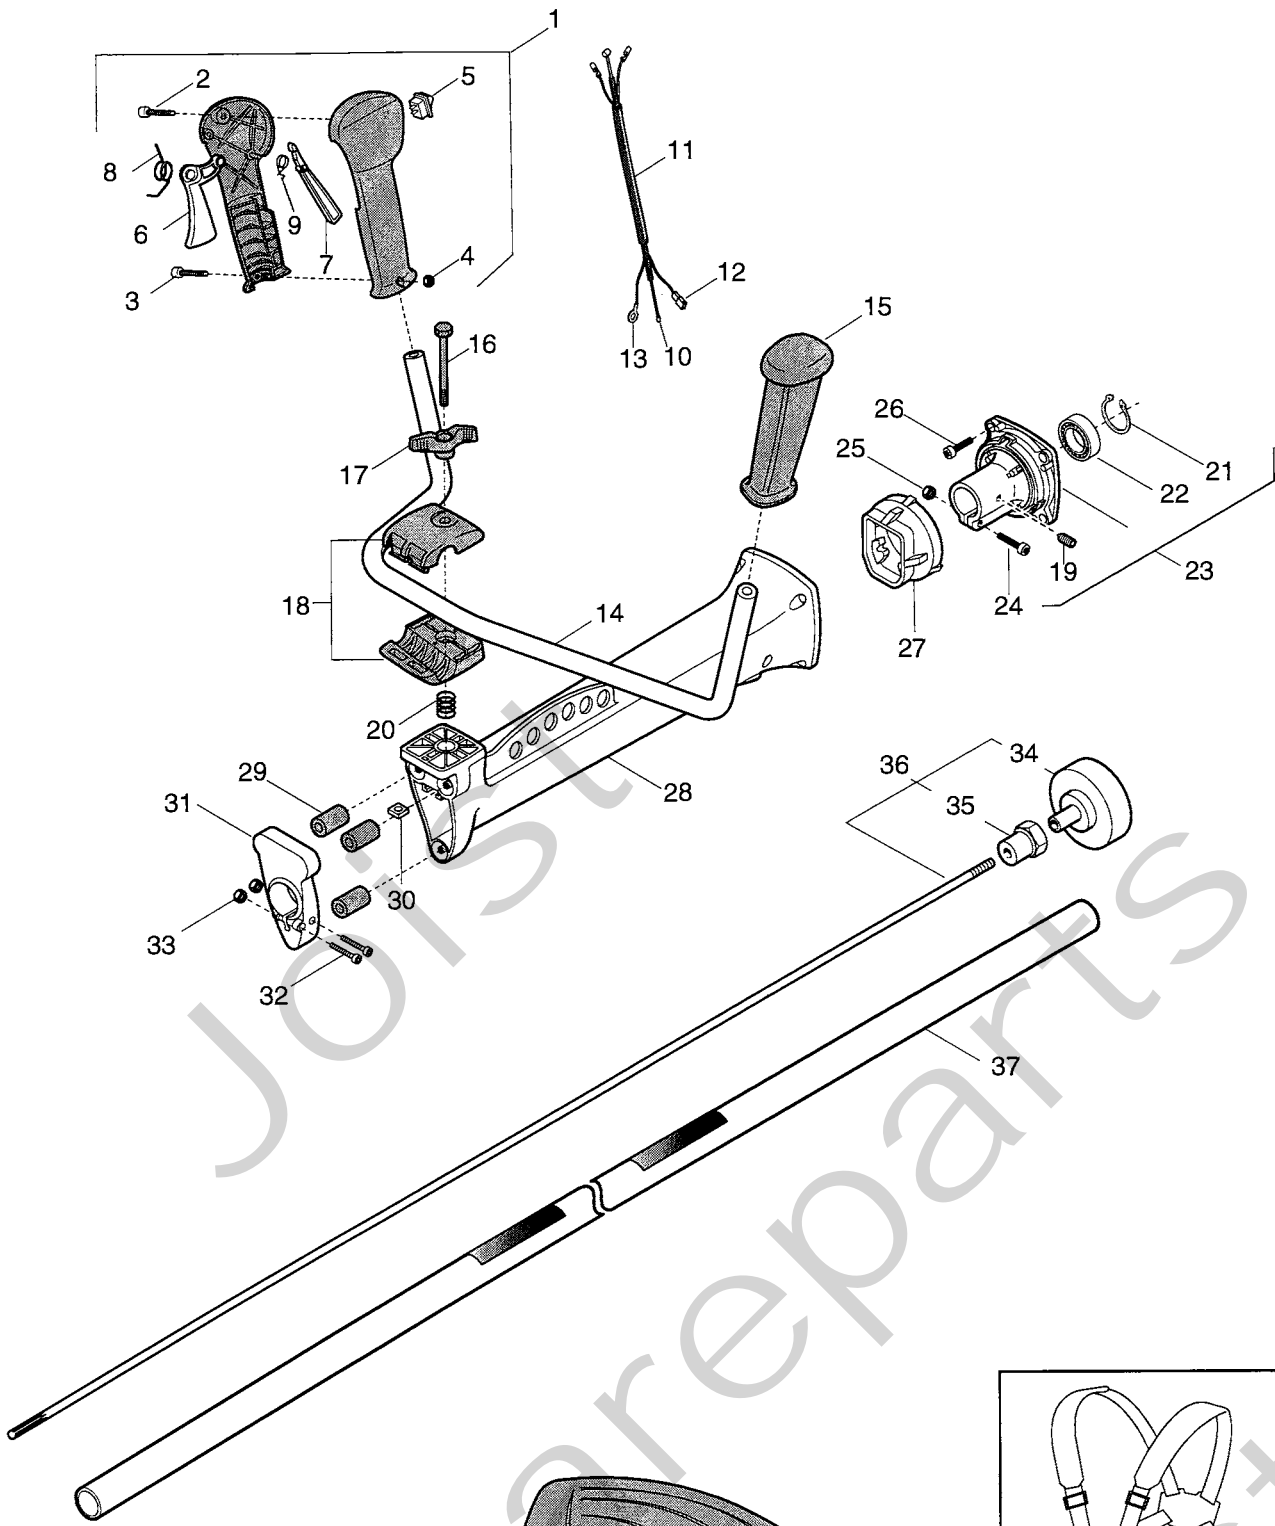

STIGA
1284
SPARE PARTS

Utgåva Issue		Bildnr Picture No		SB 40- SB 44P SB 52P PRO RÖJARE RIGG	SB 40- SB 44P SB 52P PRO BRUSH CUTTER DRIVE SHAFT	Sida Page	
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4629 -13	6115 -12 4630 -14					
1	1	1	1911-3203-01	Handtag kpl	Handle assy.....		Inkl. pos 2 - 9
2	1	1	1911-3001-01	• Skruv	• Screw		
3	1	1	1911-3008-01	• Skruv	• Screw		
4	1	1	9747-0531-02	• Mutter	• Nut		
5	1	1	1911-3053-01	• Stoppkontakt	• Stop switch		
6	1	1	1911-3108-01	• Gasreglage.....	• Throttle lever		
7	1	1	1911-3109-01	• Säkerhetsspärr	• Safety lever		
8	1	1	1911-3089-01	• Fjäder.....	• Spring		
9	1	1	1911-3090-01	• Fjäder.....	• Spring		
10	1	1	1911-3146-01	Gaswire	Throttle wire.....		
X 10	1	1	1911-4453-01	Gaswire	Throttle cable		
11	1	1	1911-3133-01	Kabelskydd	Wire sheath.....		
12	1	1	1911-3061-01	Kabel- röd	Cable- red		
13	1	1	1911-3062-01	Jordkabel- svart	Earth cable- black		
14	1	1	1911-3722-01	Styre.....	Handle.....		
15	1	1	1911-3114-01	Handtag- vä	Knob- left		
16	1	1	1911-3000-01	Skruv	Screw		
17	1	1	1911-3123-01	Vingmutter.....	Wing nut		
18	1	1	1911-3192-01	Styrinfästning kpl	Handle support assy		
19	1	1	1911-3658-01	• Skruv	• Screw		
20	1	1	1911-3091-01	Fjäder.....	Spring		
21	1	1	1911-3066-01	• Låsring	• Lock ring		
22	1	1	1911-3035-01	• Kullager	• Ball bearing		
23	1	1	1911-3188-01	Transmissionsnav kpl	Transmission hub assy		Inkl. pos 19, 21 - 22
23	1	1	1911-3189-01	Transmissionsnav kpl	Transmission hub assy		Inkl. pos 19, 21 - 22
24	1	1	1911-3011-01	Skruv	Screw		
25	1	1	1911-3021-01	Mutter	Nut		
26	4	4	1911-3012-01	Skruv	Screw		
27	1	1	1911-3111-01	Vibrationsdämpare- bak.....	Shock absorber- rear.....		
28	1	1	1911-3171-01	Transmissionshus	Transmission housing		
29	3	3	1911-3110-01	Vibrationsdämpare- fra.....	Shock absorber- front		
30	1	1	1911-3080-01	Handtagsfästmutter	Handle fixing plate		
31	1	1	1911-3172-01	Stöd- främre	Housing support- front.....		
31	1	1	1911-3173-01	Stöd- främre	Housing support- front.....		
32	2	2	1911-3009-01	Skruv	Screw		
33	2	2	9747-0531-02	Mutter	Nut		
34	1	1	1911-3134-01	• Kopplingstrumma.....	• Clutch.....		
35	1	1	1911-3083-01	• Lagernav.....	• Bearing hub.....		
36	1	1	1911-3140-01	Drivaxel kpl.....	Transm. shaft assy		Inkl. pos 34 - 35
37	1	1	1911-3139-01	Drivaxelrör	Transmission pipe		D = 26 mm
37	1	1	1911-3142-01	Drivaxelrör	Transmission pipe		D = 28 mm
38	1	1	1911-3201-01	Säkerhetsskydd kpl.....	Safety cover assy		Inkl. pos 39 - 42
39	1	1	1911-3006-01	• Skruv	• Screw		
40	1	1	1911-3216-01	• Bricka	• Washer		
41	1	1	1911-3022-01	• Mutter	• Nut		
42	1	1	1911-3077-01	• Kniv	• Line cutter		
43	2	2	1911-3216-01	Bricka	Washer.....		
44	2	2	1911-3009-01	Skruv	Screw		
45	1	1	1911-3152-01	Sele	Harness.....		
46	1	1	1911-3166-01	Stenskydd (sågklinga)	Stone shield (saw)		
99	1	1	1911-3212-01	Skyddsglasögon	Protective goggles		Tillbehör/accessory

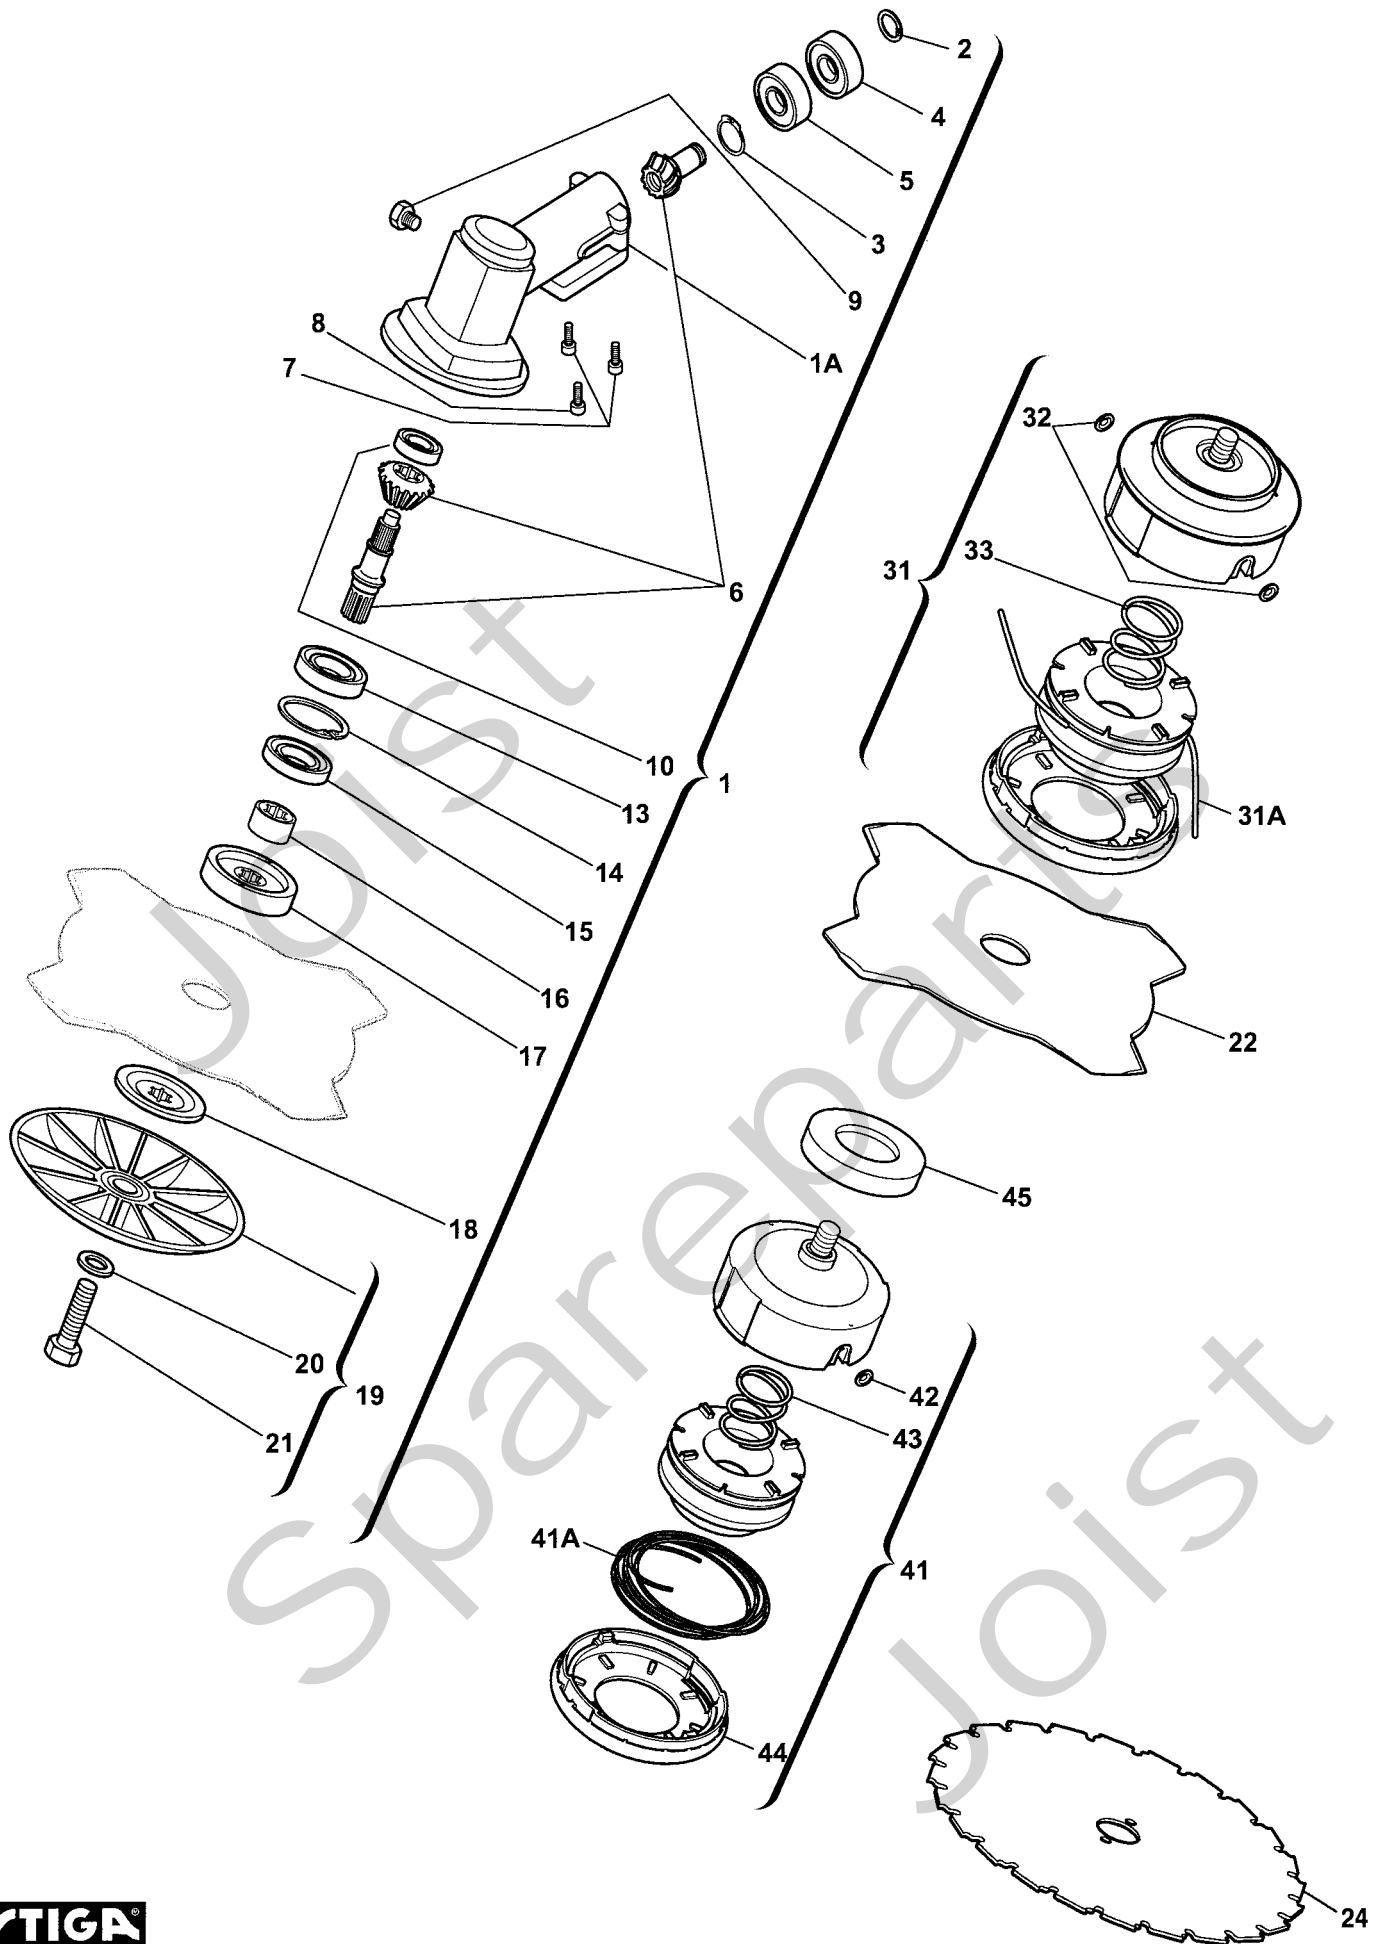

Utgåva Issue 2006- 12		Bildnr Picture No 1285D		SB 39- SB 40- SB 43P SB 44P- SB 52P PRO RÖJARE SNÄCKVÄXEL		SB 39- SB 40- SB 43P SB 44P- SB 52P PRO BRUSH CUTTER GEAR CASE		Sida Page 296	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6118 -11 4629 -13	6113 -12	6115 -12 4630 -14						
1	1	1			1911-3137-01	Snäckväxel kpl.....	Gear case assy.....		Inkl. pos 2 - 21
1			1		1911-3138-01	Snäckväxel kpl.....	Gear case assy.....		Inkl. pos 2 - 21
1A	1	1			1911-3161-01	Snäckväxelhus.....	Gear case.....		
1A			1		1911-3162-01	Snäckväxelhus.....	Gear case.....		
2	1	1	1		1911-3067-01	• Låsring.....	• Lock ring.....		
3	1	1	1		1911-3065-01	• Låsring.....	• Lock ring.....		
4	1	1	1		1911-3037-01	• Kullager.....	• Ball bearing.....		
5	1	1	1		1911-3036-01	• Kullager.....	• Ball bearing.....		
6	1	1			1911-3182-01	• Snäckdrev.....	• Worm gear.....		
6			1		1911-3183-01	• Snäckdrev.....	• Worm gear.....		
7	2	2	2		1911-3008-01	• Skruv.....	• Screw.....		
8	1	1	1		1911-3025-01	• Skruv.....	• Screw.....		
9	1	1	1		1911-3029-01	• Skruv.....	• Screw.....		
10	1	1	1		1911-3038-01	• Kullager.....	• Ball bearing.....		
13	1	1	1		1911-3034-01	• Kullager.....	• Ball bearing.....		
14	1	1	1		1911-3066-01	• Låsring.....	• Lock ring.....		
15	1	1	1		1911-3045-01	• Tätningsring.....	• Oil seal.....		
16	1	1	1		1911-3082-01	• Hylsa.....	• Collar.....		
17	1	1	1		1911-3081-01	• Ringmutter- övre.....	• Ring nut- upper.....		
18	1	1	1		1911-3070-01	• Ringmutter- nedre.....	• Ring nut- lower.....		
19	1	1	1		1911-3163-01	• Skål kpl (fast).....	• Bowl assy (fixed).....		Inkl. pos 20 - 21
20	1	1	1		1911-3018-01	• • Bricka.....	• • Washer.....		
21	1	1	1		1911-3026-01	• • Skruv (vä- gängad).....	• • Screw (LH- thread).....		
22	1	1	1		1911-3179-01	Röjklina.....	Clearing blade.....		4T - Ø 255 mm
22A	1	1	1		1911-3850-01	Klingskydd.....	Blade guard.....		Ej ill/not ill.
24	1	1	1		1911-3921-01	Sågklina.....	Saw blade.....		24T - Ø 255 mm
31	1	1	1		1911-3877-01	Skärhuvud kpl.....	Cutterhead assy.....		Inkl. pos 32 - 33
31A	1	1	1		1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)
31A	1	1	1		1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m
32	2	2	2		1911-3875-01	• Trådhylsa.....	• Line inlet.....		
33	1	1	1		1911-3876-01	• Fjäder.....	• Spring.....		
41	1	1	1		1911-3154-01	Skärhuvud kpl (Profi).....	Nylon head (Profi).....		Inkl. pos 42 - 44
41A	1	1	1		1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)
41A	1	1	1		1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m
42	2	2	2		1911-3085-01	• Bussning.....	• Bushing.....		
43	1	1	1		1911-3213-01	• Fjäder.....	• Spring.....		
44	1	1	1		1911-3215-01	• Lock.....	• Cover.....		
45	1	1	1		1911-3076-01	Kopp.....	Cup.....		
99	1	1	1		1911-3853-01	Fettub.....	Grease tube.....		Ej ill/not ill.