



Genuine Spare Parts




Spareparts
Joist

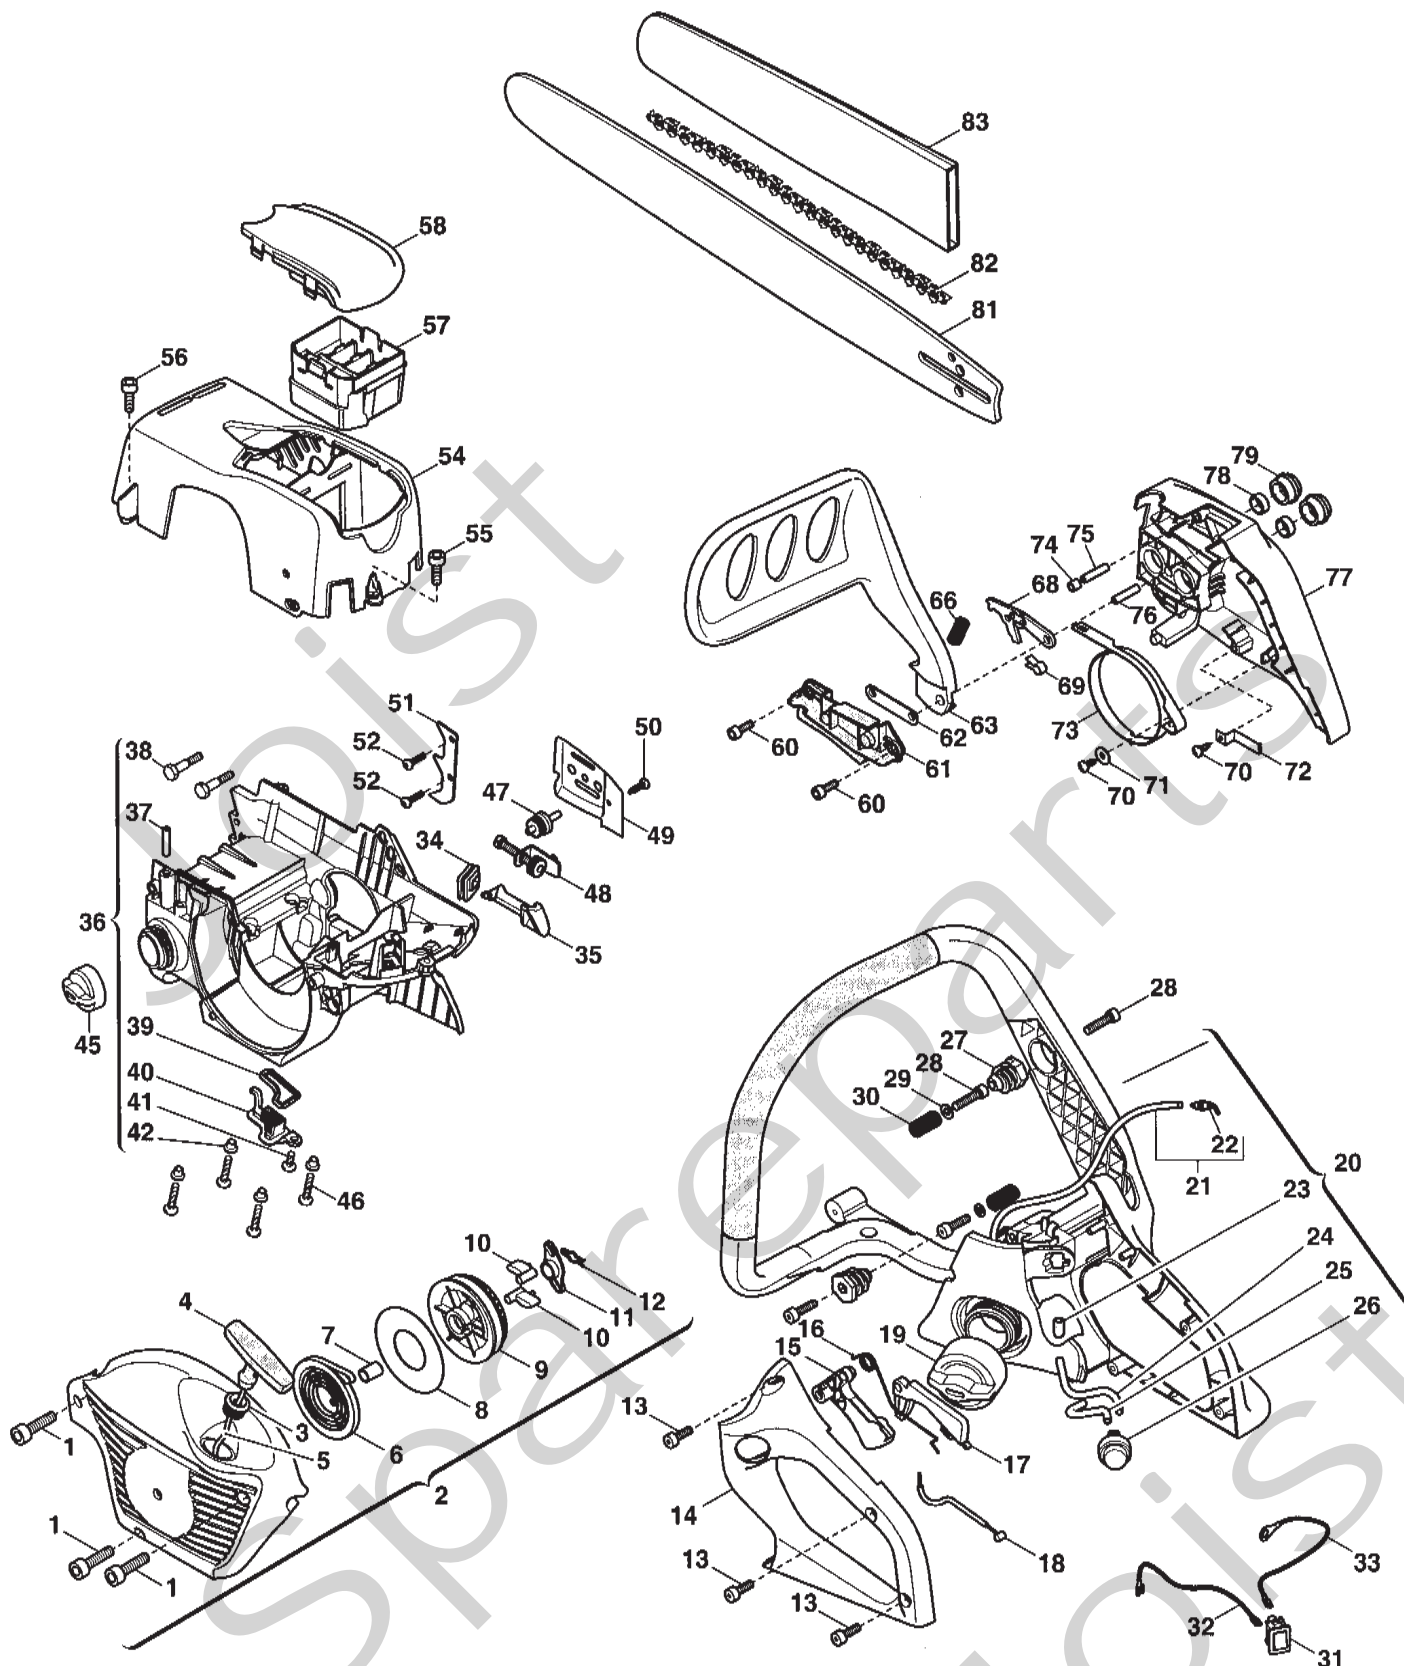

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 CHASSI		SP 440- SP 480 CHASSIS		Sida Page	
2005- 12		1974						362	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4141	4148							
X	1	3	3	1911-3001-01	Skruv	Screw			
X	2	1	1	1911-4209-01	Start kpl- gul	Start assy- yellow		Inkl. pos 3 - 12	
X	3	1	1	1911-4240-01	• Bussning	• Bushing			
X	4	1	1	1911-3472-01	• Starthandtag	• Starter handle			
X	5	1	1	1911-3129-01	• Startsnöre	• Starter cord			
X	6	1	1	1911-3176-01	• Startfjäder	• Starter spring			
X	7	1	1	1911-3372-01	• Bussning	• Bushing			
X	8	1	1	1911-3096-01	• Skiva	• Disc			
X	9	1	1	1911-3483-01	• Linhjul	• Starter pulley			
X	10	2	2	1911-3480-01	• Startspärr	• Starter hook			
X	11	1	1	1911-3484-01	• Fäste- startspärr	• Guide- starter hook			
X	12	1	1	1911-3423-01	• Hållare	• Retainer			
X	13	4	4	1911-3002-01	Skruv	Screw			
X	14	1	1	1911-4147-01	Handtagskåpa	Handle cover			
X	15	1	1	1911-3453-01	Gasreglage	Throttle lever			
X	16	1	1	1911-3417-01	Fjäder	Spring			
X	17	1	1	1911-3454-01	Säkerhetsspärr	Safety lever			
X	18	1	1	1911-4136-01	Gaswire	Throttle cable			
X	19	1	1	1911-4220-01	Tanklock	Fuel tank cap			
X	20	1	1	1911-4212-01	Handtag kpl	Handle assy		Inkl. pos 21 - 26	
X	21	1	1	1911-3558-01	• Bränslerör	• Fuel tube		Inkl. pos 22	
X	22	1	1	1911-3560-01	• Andningsventil	• Breather valve			
X	23	1	1	1911-3621-01	• Bränslefilter	• Fuel intake filter			
X	24	1	1	1911-4194-01	• Primerslang	• Air purge line			
X	25	1	1	1911-4249-01	• Primerslang	• Air purge line			
X	26	1	1	1911-4114-01	• Primer	• Primer			
X	27	3	3	1911-4191-01	Plugg	Welch plug			
X	28	6	6	1911-3001-01	Skruv	Screw			
X	30	3	3	1911-4175-01	Fjäder	Spring			
X	31	1	1	1911-3053-01	Stoppkontakt	Stop switch			
X	32	1	1	1911-4131-01	Stoppkabel	Stop wire			
X	33	1	1	1911-3321-01	Jordkabel	Ground cable			
X	34	1	1	1911-4157-01	Hylsa	Grommet			
X	35	1	1	1911-4171-01	Chokearm	Choke lever			
X	36	1	1	1911-4207-01	Vevhus kpl	Crankcase assy		Inkl. pos 37 - 42	
X	37	1	1	1911-3563-01	• Oljeslang	• Tube			
X	38	2	2	1911-3240-01	• Svärdskruv	• Bar screw			
X	39	1	1	1911-4160-01	• Packning	• Gasket			
X	40	1	1	1911-4179-01	• Oljefilter	• Oil filter			
X	41	1	1	1911-3002-01	• Skruv	• Screw			
X	42	4	4	1911-4120-01	• Bussning	• Bushing			
X	45	1	1	1911-4221-01	Tanklock	Tank cap			
X	46	4	4	1911-3009-01	Skruv	Screw			
X	47	1	1	1911-4178-01	Bult	Pin			
X	48	1	1	1911-4192-01	Kedjesträckare	Chain tensioner			
X	49	1	1	1911-4167-01	Svärdplatta	Bar plate			
X	50	1	1	1911-3249-01	Skruv	Screw			
X	51	1	1	1911-3856-01	Spikjärn	Spike			
X	52	2	2	1911-3002-01	Skruv	Screw			
X	54	1	1	1911-4142-01	Cylinderskåpa- gul	Cylinder cover- yellow			
X	55	1	1	1911-3002-01	Skruv	Screw			
X	56	2	2	1911-3001-01	Skruv	Screw			
X	57	1	1	1911-4153-01	Lufffilter	Air filter			
X	58	1	1	1911-4145-01	Lock	Cover			
X	60	2	2	1911-3002-01	Skruv	Screw			
X	61	1	1	1911-4146-01	Bromskåpa	Cover			
X	62	1	1	1911-3361-01	Bromsplåt	Brake plate			
X	63	1	1	1911-4215-01	Handskydd	Hand guard			
X	66	1	1	1911-4421-01	Fjäder	Spring			
X	68	1	1	1911-3540-01	Kedjebromsarm	Chain brake lever			
X	69	1	1	1911-3366-01	Fjäder	Spring			
X	70	2	2	1911-3249-01	Skruv	Screw			
X	71	1	1	1911-3269-01	Bricka	Washer			

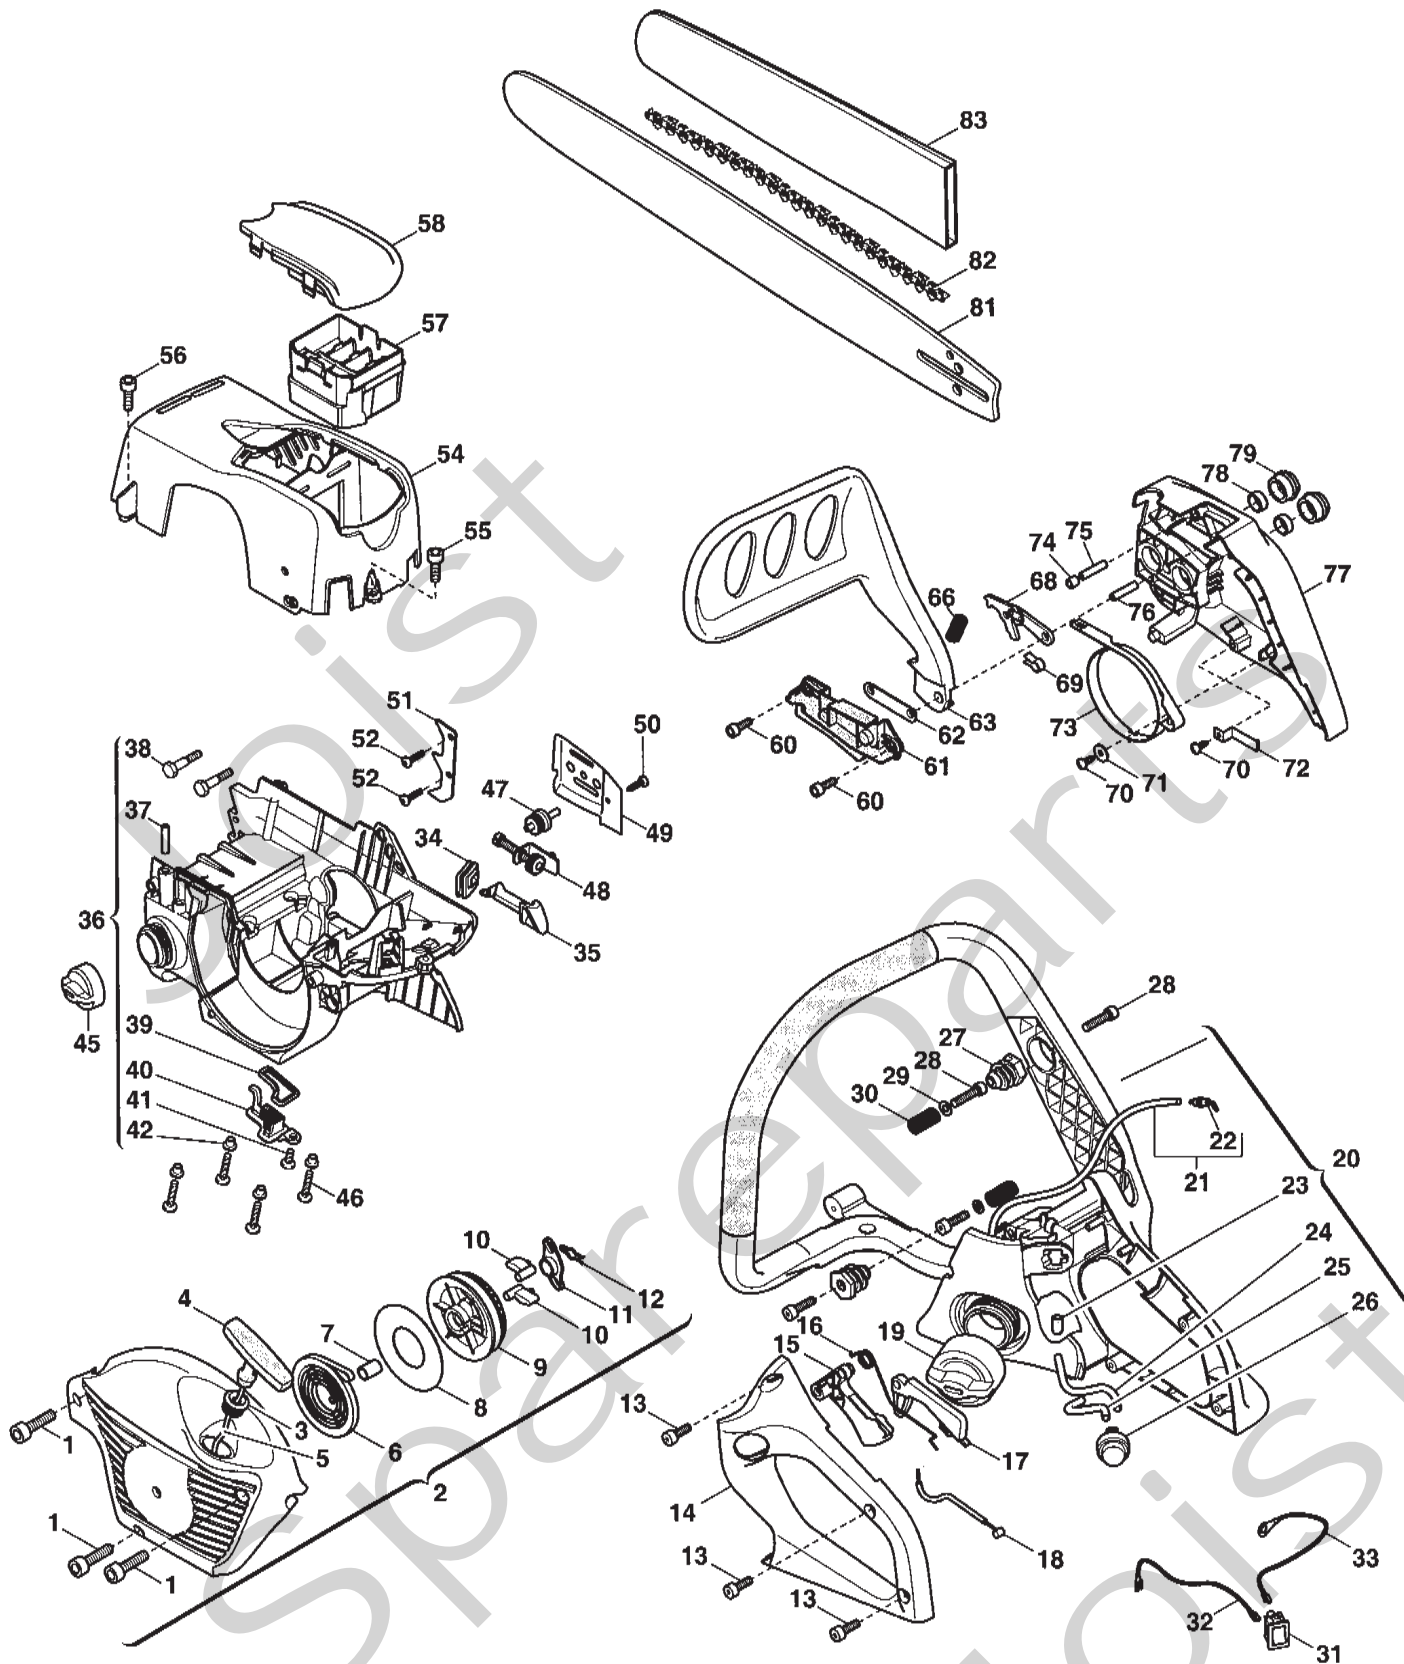

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 CHASSI		SP 440- SP 480 CHASSIS		Sida Page	
2005- 12		1974						364	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4141	4148							
X	72	1	1	1911-4241-01	Plåt	Plate			
X	73	1	1	1911-4177-01	Bromsband	Brake band			
X	74	1	1	1911-4229-01	Bussning	Bushing			
X	75	1	1	1911-4108-01	Nål	Needle			
	76	1	1	1911-3309-01	Pinne	Pin			
X	77	1	1	1911-4126-01	Kopplingshus- gul	Clutch housing- yellow			
X	78	2	2	1911-4243-01	Bussning	Bushing			
	79	2	2	1911-3296-01	Mutter	Nut			
X	81	1	1	1911-4197-01	Svärd	Bar		16" (0.325"x0.050)	
X	81		1	1911-4198-01	Svärd	Bar		18" (0.325"x0.050)	
X	81	1	1	1911-4199-01	Svärd	Bar		13" (0.325"x0.050)	
	82	1	1	1519-9002-56	Kedja (56E)	Chain (56E)		95VP (0.325")	
X	82	1	1	1519-9002-66	Kedja (66E)	Chain (66E)		95VP (0.325")	
X	82		1	1519-9002-72	Kedja (72E)	Chain (72E)		95VP (0.325")	
	83	1	1	1911-3519-01	Kedjeskydd	Chain cover		13"	
	83	1	1	1911-3520-01	Kedjeskydd	Chain cover		16"	
X	83		1	1911-4250-01	Kedjeskydd	Chain cover		18"	

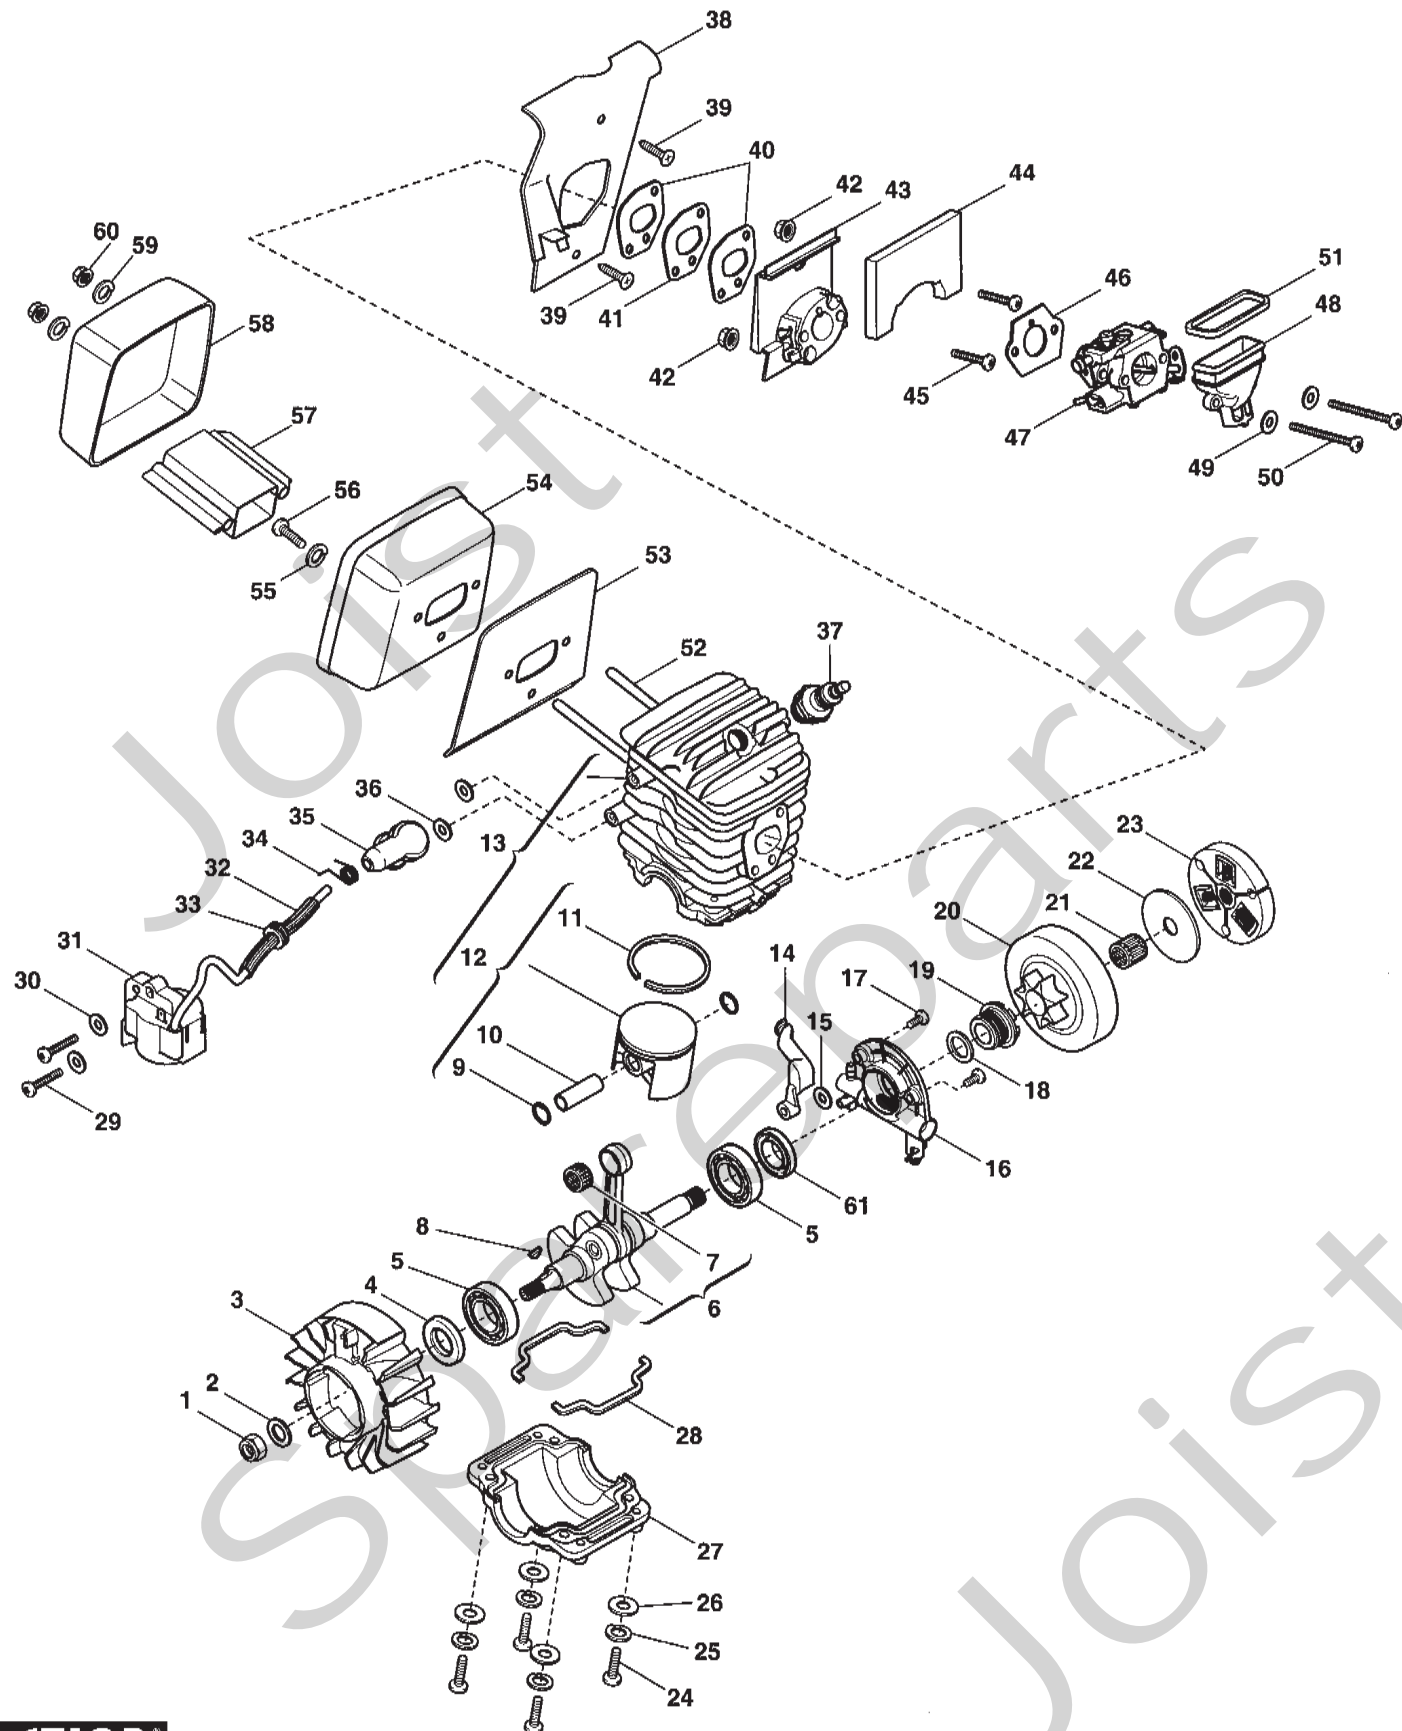

Utgåva Issue		Bildnr Picture No		SP 440- SP 480 MOTOR		SP 440- SP 480 ENGINE		Sida Page
2005- 12		1975						366
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4141	4148						
	1	1		1911-3280-01	Mutter.....	Nut.....		
	2	1		1911-3268-01	Bricka.....	Washer.....		
	3	1		1911-3567-01	Svånghjul.....	Flywheel.....		
X	4	1		1911-4111-01	Tätningring.....	Seal ring.....		
	5	2		1911-3033-01	Kullager.....	Ball bearing.....		
X	6	1		1911-4116-01	Vevaxel.....	Crankshaft.....		Inkl. pos 7
	7	1		1911-3041-01	• Nållager.....	• Needle bearing.....		
	8	1		1911-3048-01	Svånghjulskil.....	Flywheel key.....		
	9	2		1911-3068-01	•• Låsring.....	•• Lock ring.....		
	10	1		1911-3305-01	•• Kolvbult.....	•• Piston pin.....		
X	11	1		1911-4107-01	•• Kolvring.....	•• Piston ring.....		
X	12	1		1911-4218-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 9 - 11
X	13	1		1911-4210-01	Cylinder-kolv kpl.....	Cylinder-piston assy.....		Inkl. pos 12
X	14	1		1911-4156-01	Gummihylsa.....	Grommet.....		
	15	1		1911-3015-01	Bricka.....	Washer.....		
X	16	1		1911-4219-01	Oljepump.....	Oil pump.....		
X	17	2		1911-4109-01	Skruv.....	Screw.....		
X	18	1		1911-4182-01	Bricka.....	Washer.....		
X	19	1		1911-4195-01	Skruv.....	Screw.....		
X	20	1		1911-4204-01	Kopplingshjul.....	Clutch drum.....		
X	21	1		1911-4233-01	Nållager.....	Needle bearing.....		
X	22	1		1911-4183-01	Bricka.....	Washer.....		
X	23	1		1911-4211-01	Koppling.....	Clutch.....		
	24	4		1911-3009-01	Skruv.....	Screw.....		
	25	4		1911-3274-01	Bricka.....	Washer.....		
	26	4		1911-3015-01	Bricka.....	Washer.....		
X	27	1		1911-4141-01	Stabilisator.....	Stabilizer.....		
X	28	2		1911-4158-01	Packning.....	Gasket.....		
X	29	2		1911-4226-01	Skruv.....	Screw.....		
	30	2		1911-3017-01	Bricka.....	Washer.....		
X	31	1		1911-4119-01	Elektronikspole.....	Electronic coil.....		
	32	1		1911-3128-01	Kabelhölje.....	Wire sheath.....		
	33	1		1911-3116-01	Gummihylsa.....	Grommet.....		
	34	1		1911-3421-01	Fjäder.....	Spring.....		
	35	1		1911-3470-01	Tändstiftshatt.....	Spark plug cover.....		
	36	2		1911-3271-01	Bricka.....	Washer.....		
	37	1		9400-0258-00	Tändstift.....	Spark plug.....		
X	38	1		1911-4143-01	Luftledare.....	Air conveyor.....		
X	39	2		1911-4109-01	Skruv.....	Screw.....		
X	40	2		1911-4161-01	Packning.....	Gasket.....		
X	41	1		1911-4151-01	Värmeskydd.....	Heat block.....		
	42	2		1911-3032-01	Mutter.....	Nut.....		
X	43	1		1911-4138-01	Insugningsrör.....	Intake manifold.....		
X	44	1		1911-4186-01	Isolersvamp.....	Insulating sponge.....		
	45	2		1911-3008-01	Skruv.....	Screw.....		
X	46	1		1911-4162-01	Packning.....	Gasket.....		
X	47	1		1911-4121-01	Förgasare kpl.....	Carburettor assy.....		WT-727B
X	48	1		1911-4139-01	Insugningsrör.....	Intake manifold.....		
	49	2		1911-3015-01	Bricka.....	Washer.....		
X	50	2		1911-4227-01	Skruv.....	Screw.....		
X	51	1		1911-4159-01	Packning.....	Gasket.....		
X	52	2		1911-4196-01	Skruv.....	Screw.....		
X	53	1		1911-4163-01	Packning.....	Gasket.....		
X	54	1		1911-4422-01	Botten-ljuddämpare.....	Muffler bottom.....		
	55	1		1911-3274-01	Bricka.....	Washer.....		
	56	1		1911-3013-01	Skruv.....	Screw.....		
X	57	1		1911-4140-01	Innanmåte-ljuddämpare.....	Muffler inner duct.....		
X	58	1		1911-4144-01	Lock-ljuddämpare.....	Muffler cover.....		
	59	2		1911-3274-01	Bricka.....	Washer.....		
	60	2		1911-3022-01	Mutter.....	Nut.....		
X	61	1		1911-4112-01	Tätningring.....	Seal ring.....		