



Genuine Spare Parts





Joist
Spareparts
Joist

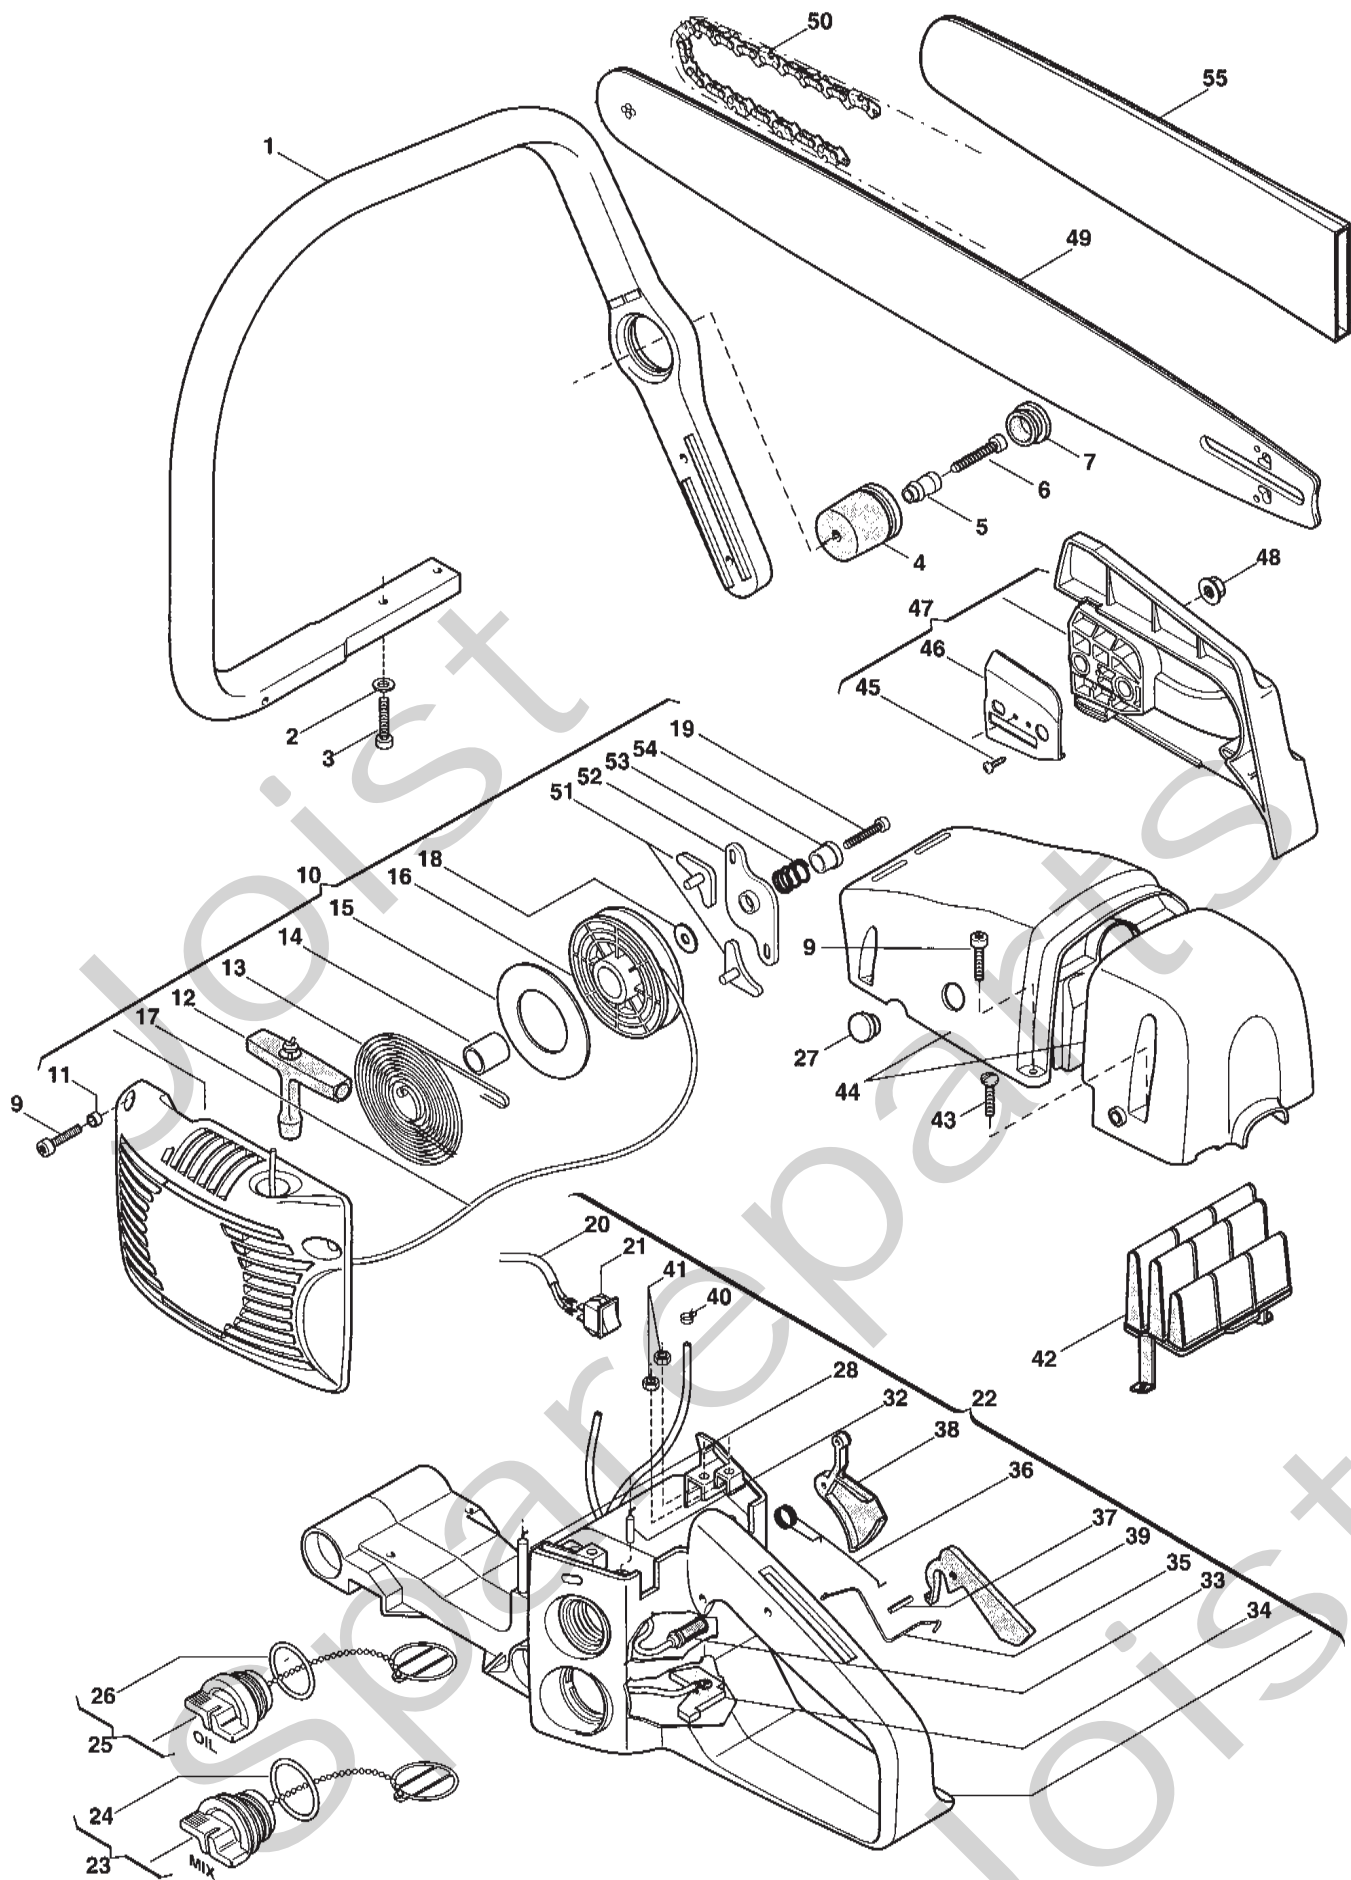


Utgåva Issue		Bildnr Picture No		SP 460- SP 510 MC 443- MC 509 CHASSI		SP 460- SP 510 MC 443- MC 509 CHASSIS		Sida Page	
2005- 12		1365B						368	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4115	4116	MC 443	MC 509					
	1	1	1	1	1911-3571-01	Handtag	Handle		
	2	10	10	10	1911-3015-01	Bricka	Washer		
	3	4	4	4	1911-3001-01	Skruv	Screw		
	4	5	5	5	1911-3457-01	Stötdämpare	Shock absorber		
	5	5	5	5	1911-3393-01	Bussning	Bushing		
	6	7	7	7	1911-3006-01	Skruv	Screw		
	7	5	5	5	1911-3476-01	Propp	Cap		
	9	9	9	9	1911-3007-01	Skruv	Screw		
	10	1	1	1	1911-3551-01	Start kpl- gul	Starter assy- yellow		Inkl. 11- 19, 51- 54
X	10			1	4252176	Start kpl- röd	Starter assy- red		Inkl. 11- 19, 51- 54
	11	4	4	4	1911-3277-01	• Bussning	• Bushing		
	12	1	1	1	1911-3472-01	• Starthandtag	• Starter handle		
	13	1	1	1	1911-3176-01	• Startfjäder	• Starter spring		
	14	1	1	1	1911-3371-01	• Bussning	• Bushing		
	15	1	1	1	1911-3096-01	• Skiva	• Disc		
	16	1	1	1	1911-3572-01	• Lihjul	• Starter pulley		
	17	1	1	1	1911-3129-01	• Startsnöre	• Starter cord		
	18	1	1	1	1911-3071-01	• Bricka	• Washer		
	19	1	1	1	1911-3001-01	• Skruv	• Screw		
	20	1	1	1	1911-3582-01	Kabel m.hölje	Cable w.sheath		
	21	1	1	1	1911-3053-01	Stoppkontakt	Stop switch		
X	22	1	1	1	1911-4213-01	Handtag kpl	Handle assy		Inkl. pos 23 - 39
	23	1	1	1	1911-3524-01	• Bensintanklock kpl	• Fuel cap assy		Inkl. pos 24
	24	1	1	1	1911-3430-01	• O- ring	• O- ring		
	25	1	1	1	1911-3525-01	• Oljetanklock kpl	• Oil tank cap assy		Inkl. pos 26
	26	1	1	1	1911-3432-01	• O- ring	• O- ring		
	27	1	1	1	1911-3492-01	• Lock- gul	• Cap- yellow		
X	27			1	3750555	• Lock- röd	• Cap- red		
	28	1	1	1	1911-3558-01	• Bränslerör	• Fuel tube		
	32	1	1	1	1911-3561-01	• Oljerör	• Oil tube		
	33	1	1	1	1911-3620-01	• Oljefilter	• Oil filter		
	34	1	1	1	1911-3619-01	• Bränslefilter	• Fuel intake filter		
	35	1	1	1	1911-3419-01	• Gasreglagelänk	• Throttle link		
	36	1	1	1	1911-3408-01	• Fjäder	• Spring		
	37	2	2	2	1911-3325-01	• Fjäderpinne	• Spring pin		
	38	1	1	1	1911-3449-01	• Gasreglage	• Throttle lever		
	39	1	1	1	1911-3450-01	• Säkerhetspörr	• Safety lever		
	40	1	1	1	1911-3327-01	Slangklämma	Clamp		
	41	4	4	4	1911-3278-01	Mutter	Nut		
	42	1	1	1	1911-3498-01	Lufffilter	Air filter		
	43	2	2	2	1911-3287-01	Skruv	Screw		
	44	1	1	1	1911-3604-01	Lufffilterkåpa- gul	Air filter cover- yell		
X	44			1	8563505/1	Lufffilterkåpa- röd	Air filter cover- red		
	45	1	1	1	1911-3249-01	• Skruv	• Screw		
	46	1	1	1	1911-3350-01	• Svärdplåt	• Bar plate		
	47	1	1	1	1911-3553-01	Kopplingshus kpl- gul	Clutch housing- yellow		Inkl. pos 45, 46
X	47			1	4252835	Kopplingshus kpl- röd	Clutch housing- red		Inkl. pos 45, 46
	48	2	2	2	1911-3030-01	Mutter	Nut		
	49	1	1	1	1911-3227-01	Svärd	Bar		13" (0.325"x0.058)
	49	1	1	1	1911-3228-01	Svärd	Bar		16" (0.325"x0.058)
	49		1	1	1911-3229-01	Svärd	Bar		18" (0.325"x0.058)
X	49			1	4112640	Svärd	Bar		20" (0.325"x0.058)
	50	1	1	1	1519-9003-56	Kedja (56E)	Chain (56E)		21BP (0.325")
	50	1	1	1	1519-9003-66	Kedja (66E)	Chain (66E)		21BP (0.325")
	50		1	1	1519-9003-72	Kedja (72E)	Chain (72E)		21BP (0.325")
X	50			1	4113461	Kedja (78E)	Chain (78E)		21BP (0.325")
	51	2	2	2	1911-3480-01	• Startspörr	• Starter hook		
	52	1	1	1	1911-3481-01	• Hällare- startspörr	• Guide- starter hook		
	53	1	1	1	1911-3413-01	• Fjäder	• Spring		
	54	1	1	1	1911-3397-01	• Bussning	• Bushing		
	55	1	1	1	1911-3519-01	Kedjeskydd	Chain cover		13"
	55	1	1	1	1911-3520-01	Kedjeskydd	Chain cover		16 - 18"
X	55			1	4181497	Kedjeskydd	Chain cover		20"

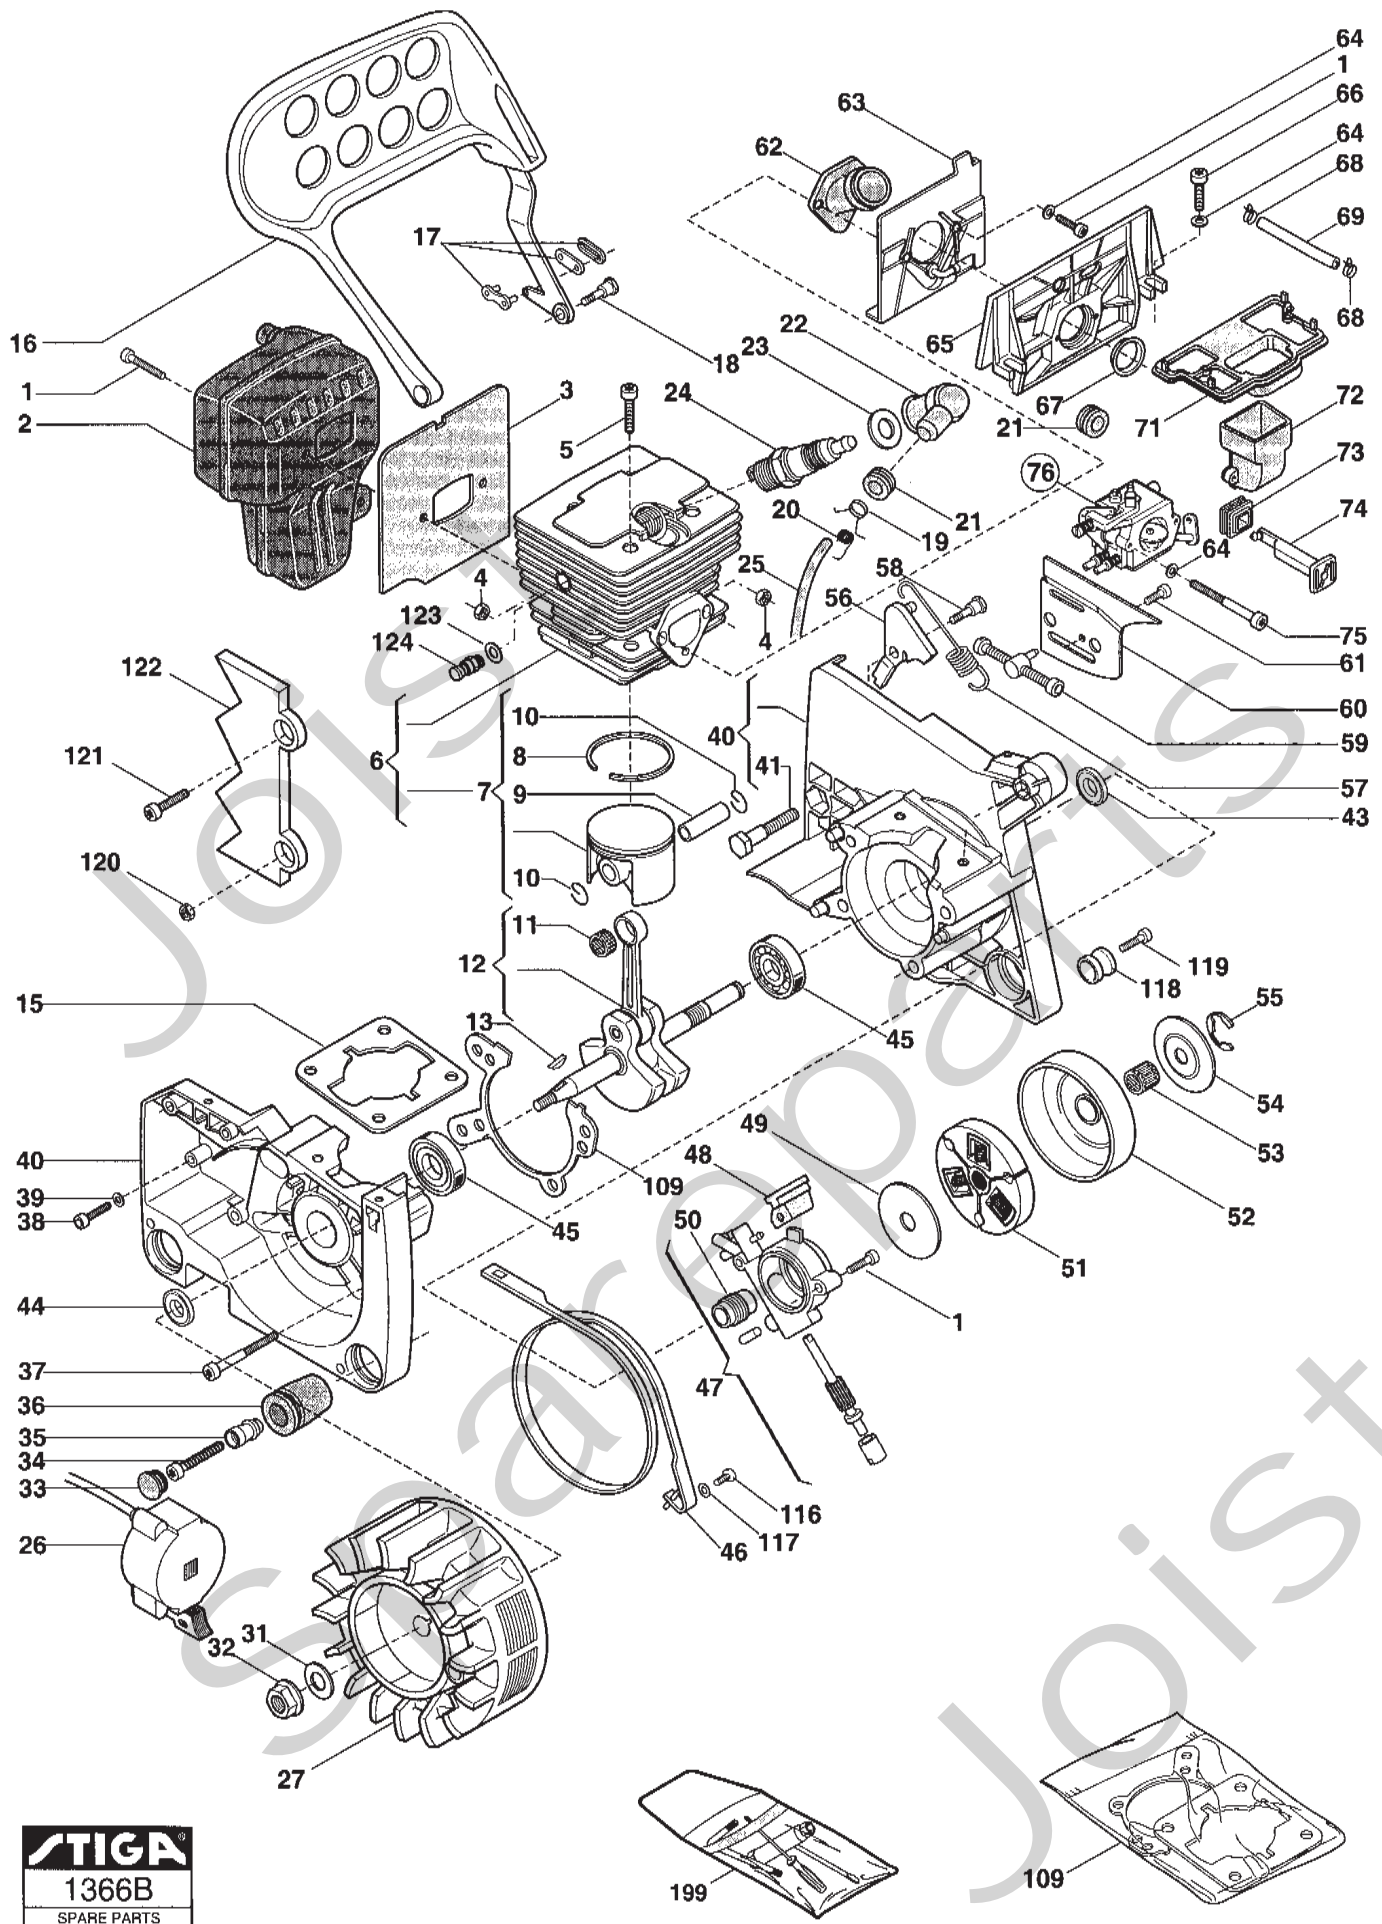

STIGA
1366B
SPARE PARTS

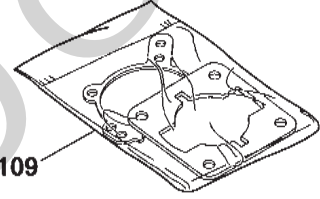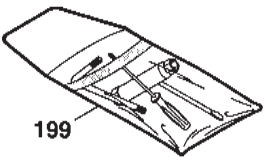

Utgåva Issue 2005-12		Bildnr Picture No 1366B		SP 460- SP 510 MC 443- MC 509 MOTOR		SP 460- SP 510 MC 443- MC 509 ENGINE		Sida Page 370	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4115	4116	MC 443	MC 509					
1	6	6	6	6	1911-3006-01	Skruv	Screw		
2	1	1	1	1	1911-3510-01	Ljuddämpare	Muffler		
3	1	1	1	1	1911-3370-01	• Ljuddämparpackning	• Muffler gasket		
4	4	4	4	4	1911-3022-01	Mutter	Nut		
5	4	4	4	4	1911-3006-01	Skruv	Screw		
6	1	1	1	1	1911-3196-01	Cylinder kpl m.kolv	Cylinder assy w.pist.		Inkl. pos 7
6	1	1	1	1	1911-3596-01	Cylinder kpl m.kolv	Cylinder assy w.pist.		Inkl. pos 7
7	1	1	1	1	1911-3195-01	• Kolv kpl	• Piston assy		Inkl. pos 8 - 10
7	1	1	1	1	1911-3595-01	• Kolv kpl	• Piston assy		Inkl. pos 8 - 10
8	1	1	1	1	1911-3046-01	•• Kolvring	•• Piston ring		
8	1	1	1	1	1911-3303-01	•• Kolvring	•• Piston ring		
9	1	1	1	1	1911-3050-01	•• Kolvbult	•• Piston pin		
9	1	1	1	1	1911-3305-01	•• Kolvbult	•• Piston pin		
10	2	2	2	2	1911-3068-01	•• Låsring	•• Lock ring		
11	1	1	1	1	1911-3300-01	• Nällager	• Needle bearing		
12	1	1	1	1	1911-3586-01	Vevaxel kpl	Crankshaft assy		Inkl. pos 11
13	1	1	1	1	1911-3048-01	Svänghjulskil	Flywheel key		
15	1	1	1	1	1911-3441-01	• Cylinderpackning	• Cylinder gasket		
16	1	1	1	1	1911-3580-01	Handskydd	Hand guard		
17	1	1	1	1	1911-3523-01	Kedjelänk	Chain connection		
18	1	1	1	1	1911-3379-01	Pinnbult	Pin		
19	1	1	1	1	1911-3092-01	Klämma	Clamp		
20	1	1	1	1	1911-3421-01	Fjäder	Spring		
21	2	2	2	2	1911-3116-01	Gummihylsa	Grommet		
22	1	1	1	1	1911-3470-01	Tändstiftshatt	Spark plug cover		
23	1	1	1	1	1911-3433-01	Gummibricka	Rubber washer		
24	1	1	1	1	9400-0258-00	Tändstift	Spark plug		Champion CJ7Y
25	1	1	1	1	1911-3055-01	• Tändstiftskabel	• Spark plug cable		
26	1	1	1	1	1911-3313-01	Elektronikspole	Electronic coil		
27	1	1	1	1	1911-3568-01	Svängjul	Flywheel		
31	1	1	1	1	1911-3268-01	Bricka	Washer		
32	1	1	1	1	1911-3280-01	Mutter	Nut		
33	5	5	5	5	1911-3476-01	Propp	Cap		
34	8	8	8	8	1911-3001-01	Skruv	Screw		
35	5	5	5	5	1911-3393-01	Bussning	Bushing		
36	5	5	5	5	1911-3457-01	Stötdämpare	Shock absorber		
37	4	4	4	4	1911-3010-01	Skruv	Screw		
38	2	2	2	2	1911-3259-01	Skruv	Screw		
39	2	2	2	2	1911-3272-01	Bricka	Washer		
40	1	1	1	1	1911-3592-01	Vevhus kpl	Crankcase assy		Inkl. 41,118,119,121
41	2	2	2	2	1911-3240-01	• Svärdskruv	• Bar screw		
43	1	1	1	1	1911-3044-01	Tätningring	Seal ring		
44	1	1	1	1	1911-3043-01	Tätningring	Seal ring		
45	2	2	2	2	1911-3297-01	Kullager	Ball bearing		
46	1	1	1	1	1911-3347-01	Bromsband	Brake band		
47	1	1	1	1	1911-3587-01	Oljepump kpl	Oil pump assy		Inkl. pos 50
48	1	1	1	1	1911-3459-01	Packning	Gasket		
49	1	1	1	1	1911-3348-01	Kopplingskiva	Clutch disc		
50	1	1	1	1	1911-3308-01	• Skruvhylsa	• Female screw		
51	1	1	1	1	1911-3552-01	Koppling	Clutch		
52	1	1	1	1	1911-3511-01	Kedjedrev	Sprocket		
53	1	1	1	1	1911-3298-01	Nällager	Needle bearing		
54	1	1	1	1	1911-3338-01	Drevbricka	Sprocket washer		
55	1	1	1	1	1911-3330-01	Låsring	Circlip		
56	1	1	1	1	1911-3512-01	Kedjebromsarm	Chain brake lever		
X 57	1	1	1	1	1911-4247-01	Fjäder	Spring		
58	1	1	1	1	1911-3380-01	Pinnbult	Pin		
59	1	1	1	1	1911-3530-01	Kedjesträckare	Chain tensioner		
60	1	1	1	1	1911-3349-01	Svärdplåt	Bar plate		
61	1	1	1	1	1911-3005-01	Skruv	Screw		
62	1	1	1	1	1911-3458-01	Insugningsrör	Intake manifold		
63	1	1	1	1	1911-3531-01	Fläns	Flange		
64	10	10	10	10	1911-3015-01	Bricka	Washer		

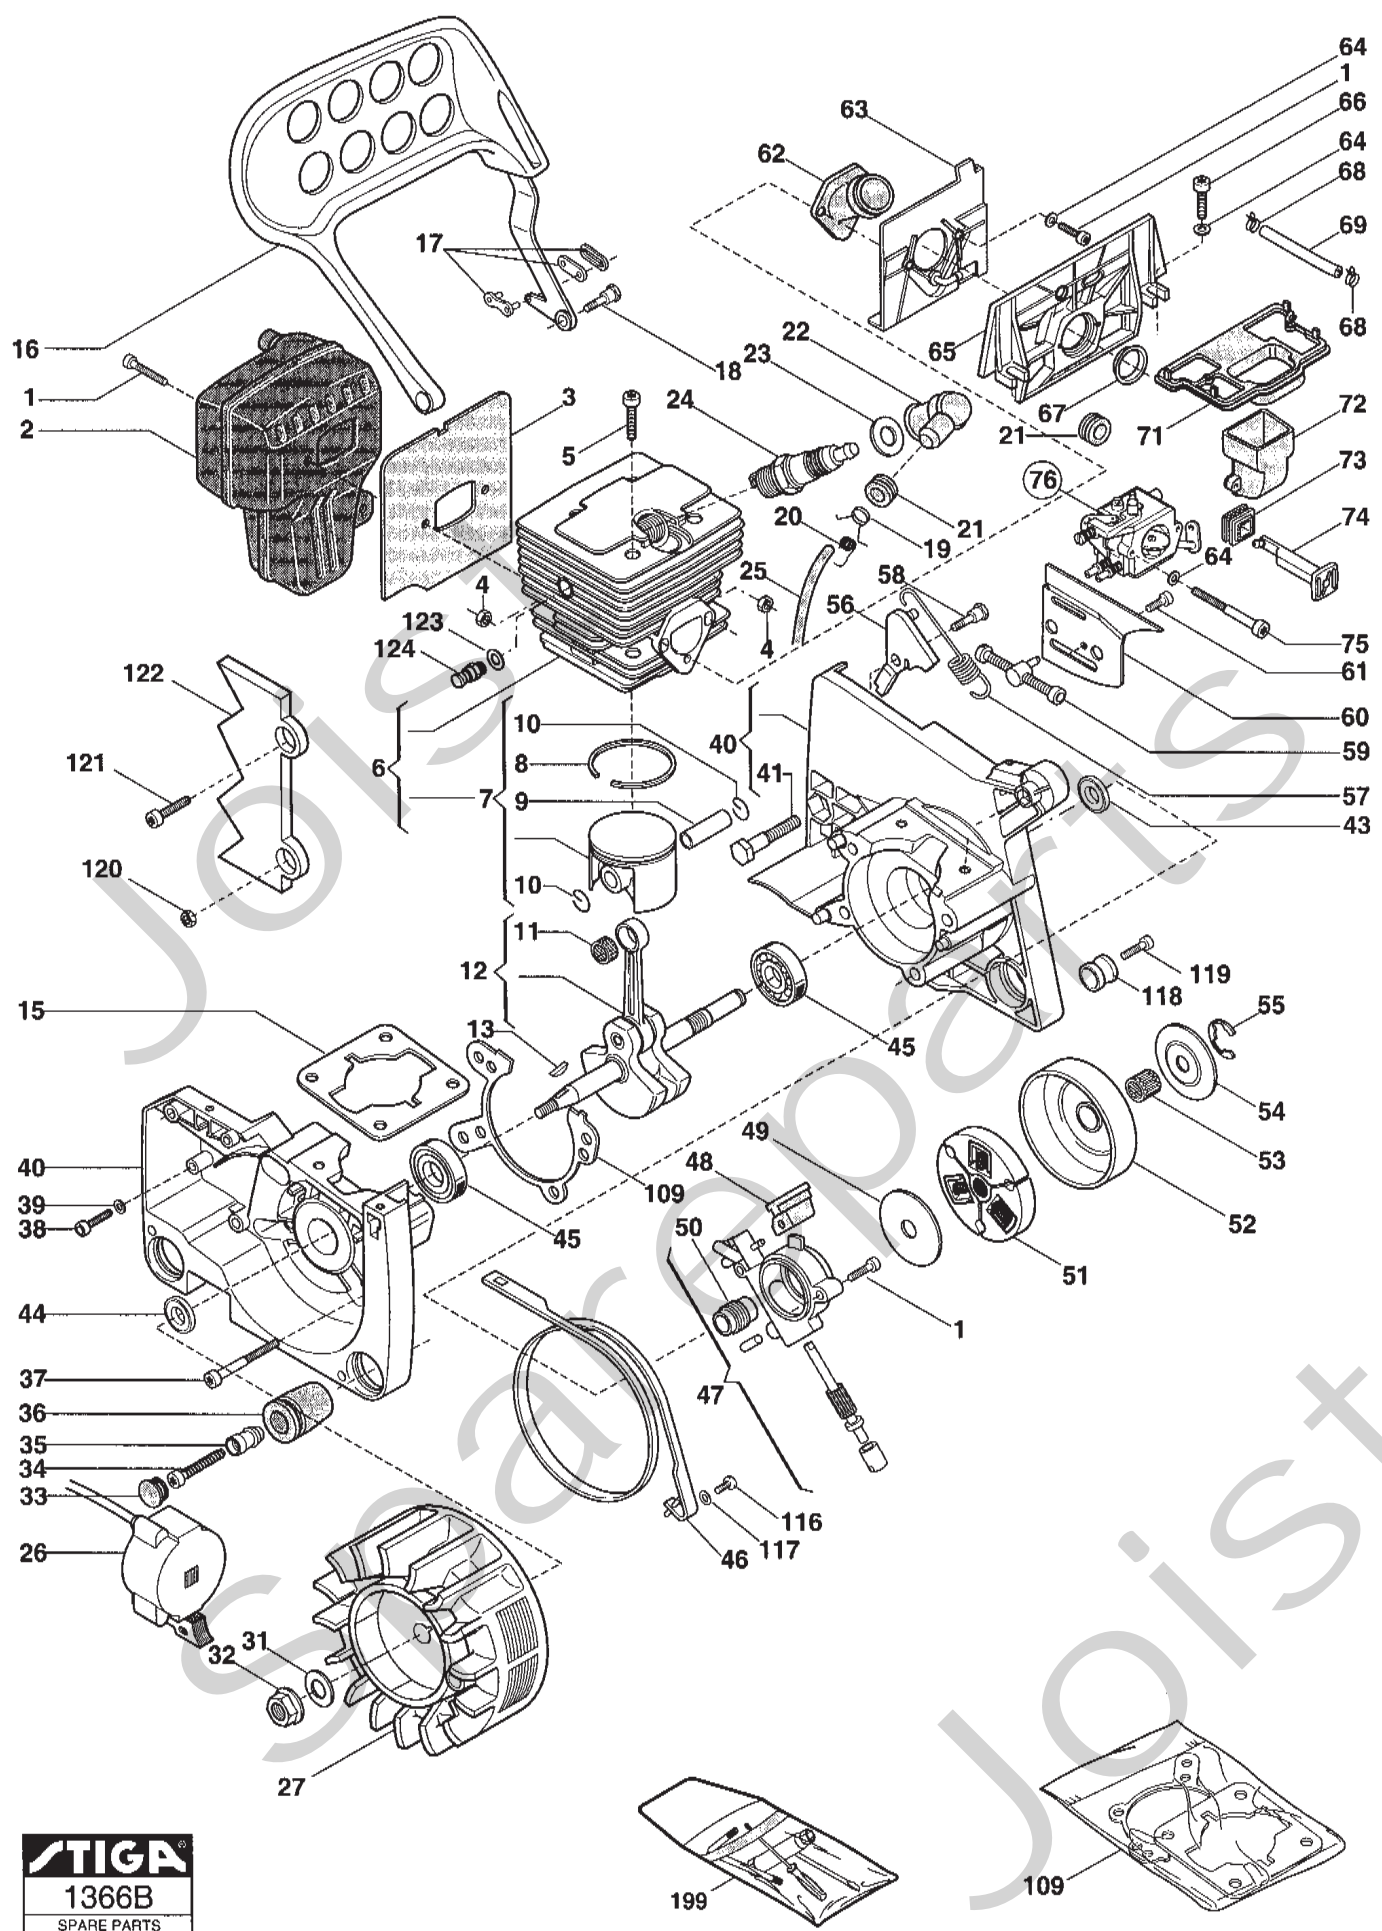

STIGA
 1366B
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		SP 460- SP 510 MC 443- MC 509 MOTOR		SP 460- SP 510 MC 443- MC 509 ENGINE		Sida Page	
2005- 12		1366B						372	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4115	4116	MC 443	MC 509					
65	1	1	1	1	1911-3565-01	Förgasrstöd	Carburettor support		
66	9	9	9	9	1911-3007-01	Skruv	Screw		
67	1	1	1	1	1911-3351-01	Bussning	Bushing		
68	2	2	2	2	1911-3422-01	Slangklämma	Clamp		
69	1	1	1	1	1911-3503-01	Slang	Carb. pulse pipe		
71	1	1	1	1	1911-3497-01	Luftfilterstöd	Air filter support		
72	1	1	1	1	1911-3489-01	Luftfilterhållare	Air filter holder		
73	1	1	1	1	1911-3465-01	Gummihylsa	Grommet		
74	1	1	1	1	1911-3451-01	Chokereglage	Choke lever		
75	2	2	2	2	1911-3262-01	Skruv	Screw		
76	1	1	1	1	1911-3559-01	Förgasare kpl	Carburettor assy		
109	1	1	1	1	1911-3614-01	Packningssats	Gasket set		Walbro WT429 Inkl. pos 3, 15
116	1	1	1	1	1911-3257-01	Skruv	Screw		
117	1	1	1	1	1911-3016-01	Bricka	Washer		
118	1	1	1	1	1911-3471-01	• Kedjestopp	• Chain stop		
119	1	1	1	1	1911-3008-01	• Skruv	• Screw		
120	1	1	1	1	1911-3022-01	Mutter	Nut		
121	1	1	1	1	1911-3260-01	• Skruv	• Screw		
122	1	1	1	1	1911-3362-01	Spikjärn	Spike		
123	1	1	1	1	1911-3276-01	Bricka	Washer		
124	1	1	1	1	1911-3537-01	Dekompression	Decompression		
199	1	1	1	1	1911-3557-01	Tbh- påse	Accessory bag		

Utgåva Issue		Bildnr Picture No		SP 460- SP 510 MC 443- MC 509 FÖRGASARE		SP 460- SP 510 MC 443- MC 509 CARBURETTOR		Sida Page	
2005- 12		1367A						374	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4115 4116	MC 443 509							
76	1	1		1911-3559-01	Förgasare kpl.....	Carburettor assy			
77	1	1		1911-3285-01	• Skruv	• Screw			
78	1	1		1911-3425-01	• Lock.....	• Cover.....			
79	1	1		1911-3407-01	• Fjäder.....	• Spring			
80	1	1		1911-3291-01	• Tomgångsskruv	• Idle speed screw			
83	1	1		1911-3495-01	• Nät.....	• Screen			
84	1	1		1911-3467-01	• Nippel.....	• Fitting			
85	4	4		1911-3284-01	• Skruv	• Screw			
86	1	1		1911-3286-01	• Skruv	• Screw			
87	1	1		1911-3410-01	• Fjäder.....	• Spring			
88	3	3		1911-3283-01	• Skruv	• Screw			
89	1	1		1911-3345-01	• Gasspjäll.....	• Throttle shutter			
90	1	1		1911-3395-01	• Gasspjällaxel.....	• Throttle shaft.....			
91	1	1		1911-3352-01	• Chokespjäll	• Choke shutter.....			
92	1	1		1911-3396-01	• Chokespjällaxel	• Choke shaft			
93	1	1		1911-3496-01	• Filter	• Filter			
94	1	1		1911-3332-01	• Hållare	• Retainer.....			
95	1	1		1911-3289-01	• Justerskruv- min.....	• Mixture screw- idle.....			
96	1	1		1911-3404-01	• Fjäder.....	• Spring			
97	1	1		1911-3293-01	• Justerskruv- max	• Mixture screw- high			
98	1	1		1911-3405-01	• Fjäder.....	• Spring			
99	1	1		1911-3344-01	• Plugg	• Plug.....			
100	1	1		1911-3343-01	• Plugg	• Welch plug			
101	1	1		1911-3381-01	• Nålventil.....	• Inlet needle.....			
102	1	1		1911-3384-01	• Sprint.....	• Pin.....			
103	1	1		1911-3406-01	• Fjäder.....	• Spring			
104	1	1		1911-3337-01	• Ventilarm	• Control lever.....			
107	1	1		1911-3333-01	• Lock.....	• Cover.....			
108	1	1		1911-3612-01	• Membran- packningssats...	• Diaphragm- gasket set			
110	1	1		1911-3394-01	• Bussning.....	• Bushing.....			
111	1	1		1911-3359-01	• Arm.....	• Lever			
112	1	1		1911-3412-01	• Fjäder.....	• Spring			
113	1	1		1911-3360-01	• Arm.....	• Lever			
114	1	1		1911-3478-01	• Bussning.....	• Bushing.....			
115	1	1		1911-3294-01	• Skruv	• Screw			