


Genuine Spare Parts




Spareparts
Joist

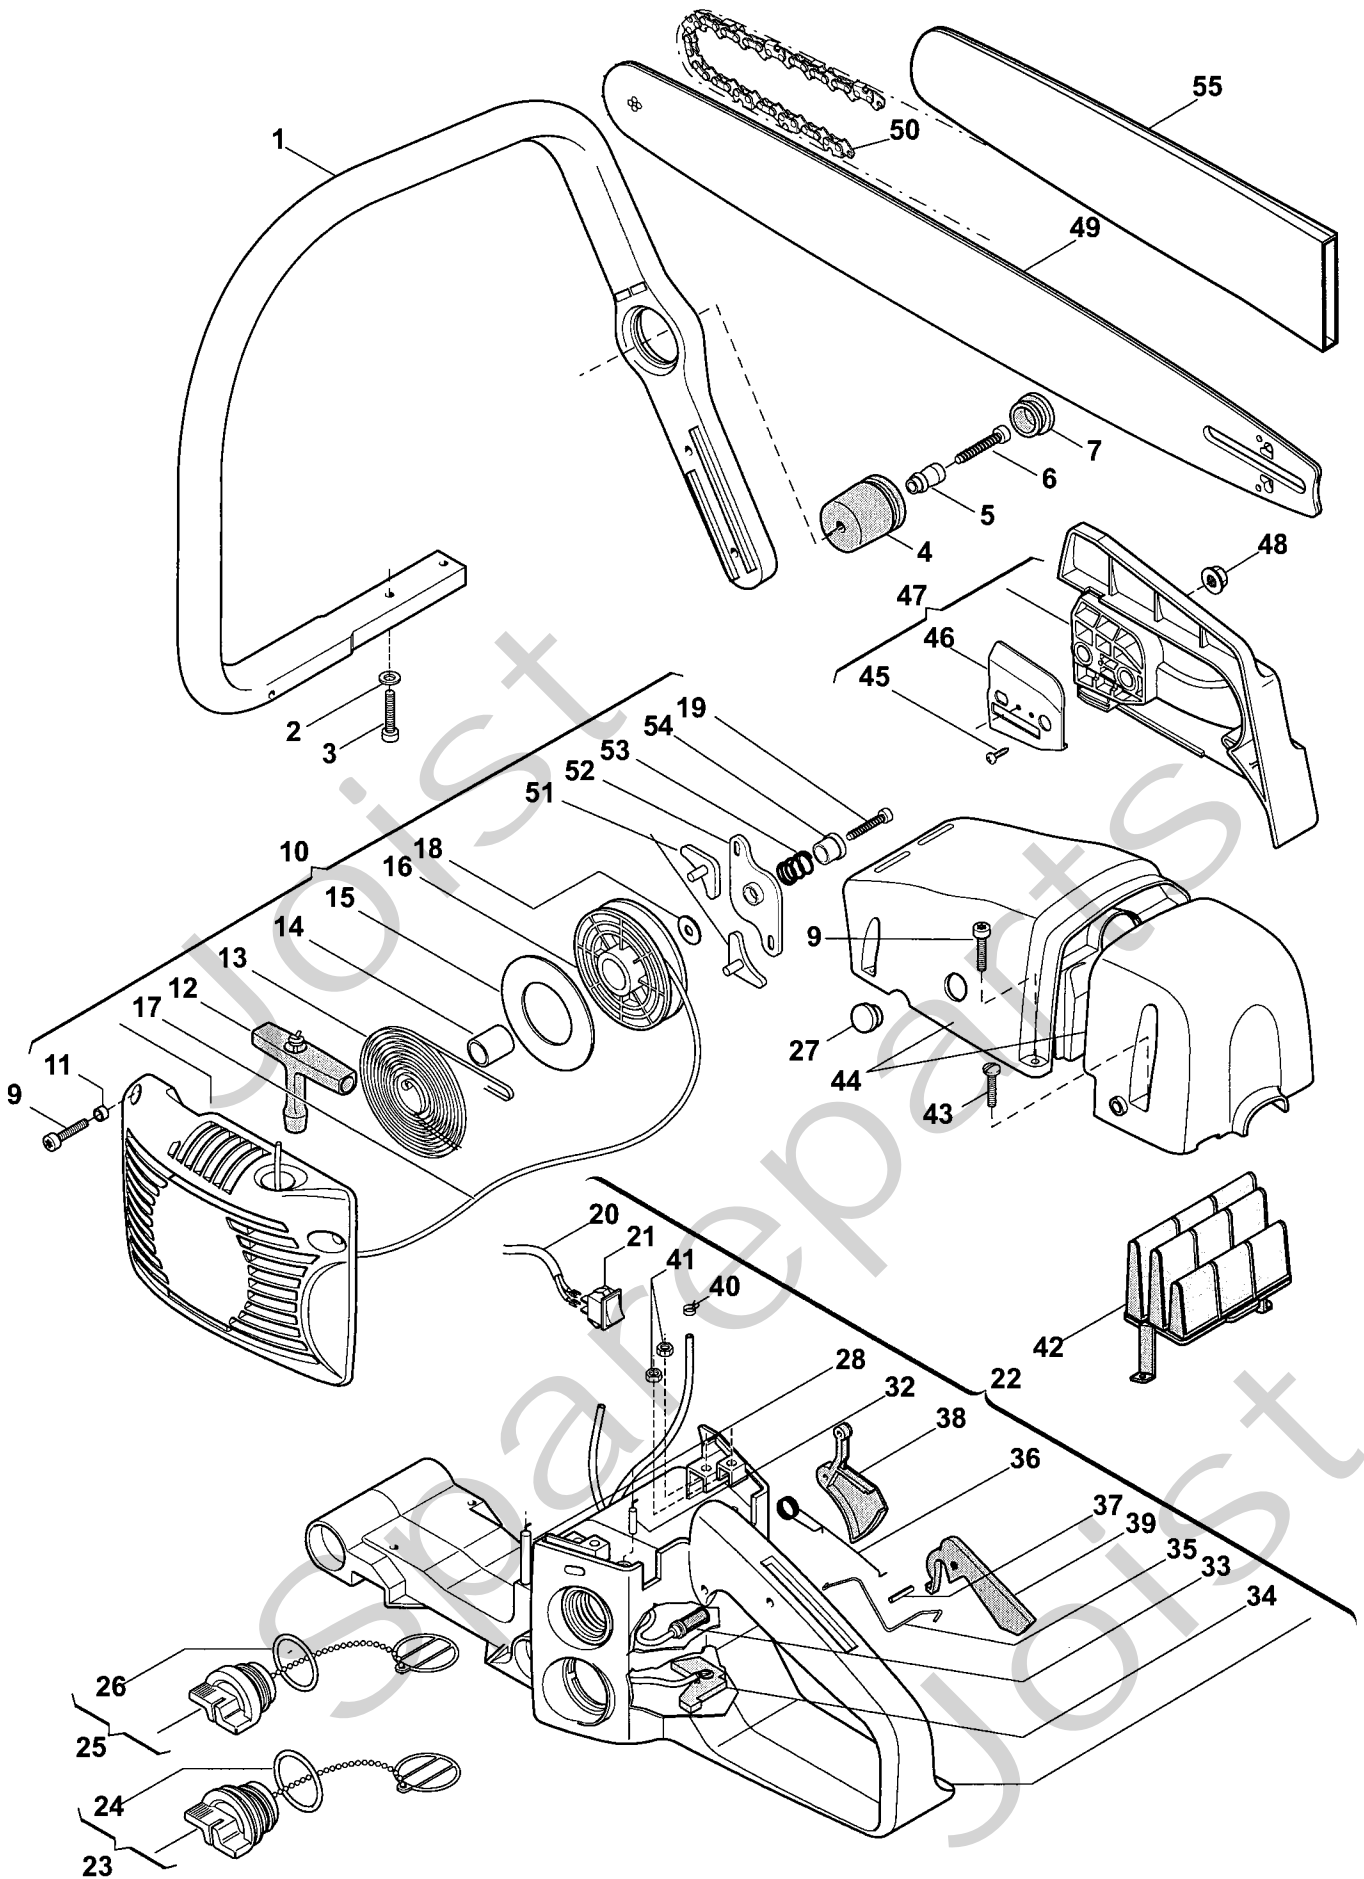


Utgåva Issue 2006-12	Bildnr Picture No 1365B	SP 460- SP 510 CHASSI	SP 460- SP 510 CHASSIS	Sida Page 374
----------------------------	-------------------------------	--------------------------	---------------------------	---------------------

Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4115 -12 -22 -32	4116 -12 -22 -32					
1	1	1	1911-3571-01	Handtag	Handle		
2	10	10	1911-3015-01	Bricka	Washer		
3	4	4	1911-3001-01	Skruv	Screw		
4	5	5	1911-3457-01	Stötdämpare	Shock absorber		
5	5	5	1911-3393-01	Bussning	Bushing		
6	7	7	1911-3006-01	Skruv	Screw		
7	5	5	1911-3476-01	Propp	Cap		
9	9	9	1911-3007-01	Skruv	Screw		
10	1	1	1911-3551-01	Start kpl- gul	Starter assy- yellow		Inkl. 11- 19, 51- 54
11	4	4	1911-3277-01	• Bussning	• Bushing		
12	1	1	1911-3472-01	• Starthandtag	• Starter handle		
13	1	1	1911-3176-01	• Startfjäder	• Starter spring		
14	1	1	1911-3371-01	• Bussning	• Bushing		
15	1	1	1911-3096-01	• Skiva	• Disc		
16	1	1	1911-3572-01	• Linhjul	• Starter pulley		
17	1	1	1911-3129-01	• Startsnöre	• Starter cord		
18	1	1	1911-3071-01	• Bricka	• Washer		
19	1	1	1911-3001-01	• Skruv	• Screw		
20	1	1	1911-3582-01	• Kabel m.hölje	• Cable w.sheath		
21	1	1	1911-3053-01	• Stoppkontakt	• Stop switch		
22	1	1	1911-4213-01	Handtag kpl	Handle assy		Inkl. pos 20- 21, 28- 41
23	1	1	1911-3524-01	Bensintanklock kpl	Fuel cap assy		Inkl. pos 24
24	1	1	1911-3430-01	• O- ring	• O- ring		
25	1	1	1911-3525-01	Oljetanklock kpl	Oil tank cap assy		Inkl. pos 26
26	1	1	1911-3432-01	• O- ring	• O- ring		
27	1	1	1911-3492-01	Lock- gul	Cap- yellow		
28	1	1	1911-3558-01	• Bränslerör	• Fuel tube		
32	1	1	1911-3561-01	• Oljerör	• Oil tube		
33	1	1	1911-3620-01	• Oljefilter	• Oil filter		
34	1	1	1911-3619-01	• Bränslefilter	• Fuel intake filter		
35	1	1	1911-3419-01	• Gasreglagelänk	• Throttle link		
36	1	1	1911-3408-01	• Fjäder	• Spring		
37	2	2	1911-3325-01	• Fjäderpinne	• Spring pin		
38	1	1	1911-3449-01	• Gasreglage	• Throttle lever		
39	1	1	1911-3450-01	• Säkerhetsspärr	• Safety lever		
40	1	1	1911-3327-01	Slangklämma	Clamp		
41	4	4	1911-3278-01	Mutter	Nut		
42	1	1	1911-3498-01	Luftfilter	Air filter		
43	2	2	1911-3287-01	Skruv	Screw		
44	1	1	1911-3604-01	Luftfilterkåpa- gul	Air filter cover- yell		
45	1	1	1911-3249-01	• Skruv	• Screw		
46	1	1	1911-3350-01	• Svärdblåt	• Bar plate		
47	1	1	1911-3553-01	Kopplingshus kpl- gul	Clutch housing- yellow		Inkl. pos 45, 46
48	2	2	1911-3030-01	Mutter	Nut		
49	1	1	1911-3227-01	Svärd	Bar		13" (0.325"x0.058)
49	1	1	1911-3228-01	Svärd	Bar		16" (0.325"x0.058)
49	1	1	1911-3229-01	Svärd	Bar		18" (0.325"x0.058)
50	1	1	1519-9003-56	Kedja (56E)	Chain (56E)		21BP (0.325")
50	1	1	1519-9003-66	Kedja (66E)	Chain (66E)		21BP (0.325")
50	1	1	1519-9003-72	Kedja (72E)	Chain (72E)		21BP (0.325")
51	2	2	1911-3480-01	• Startspärr	• Starter hook		
52	1	1	1911-3481-01	• Hållare- startspärr	• Guide- starter hook		
53	1	1	1911-3413-01	• Fjäder	• Spring		
54	1	1	1911-3397-01	• Bussning	• Bushing		
55	1	1	1911-3519-01	Kedjeskydd	Chain cover		13"
55	1	1	1911-3520-01	Kedjeskydd	Chain cover		16 - 18"

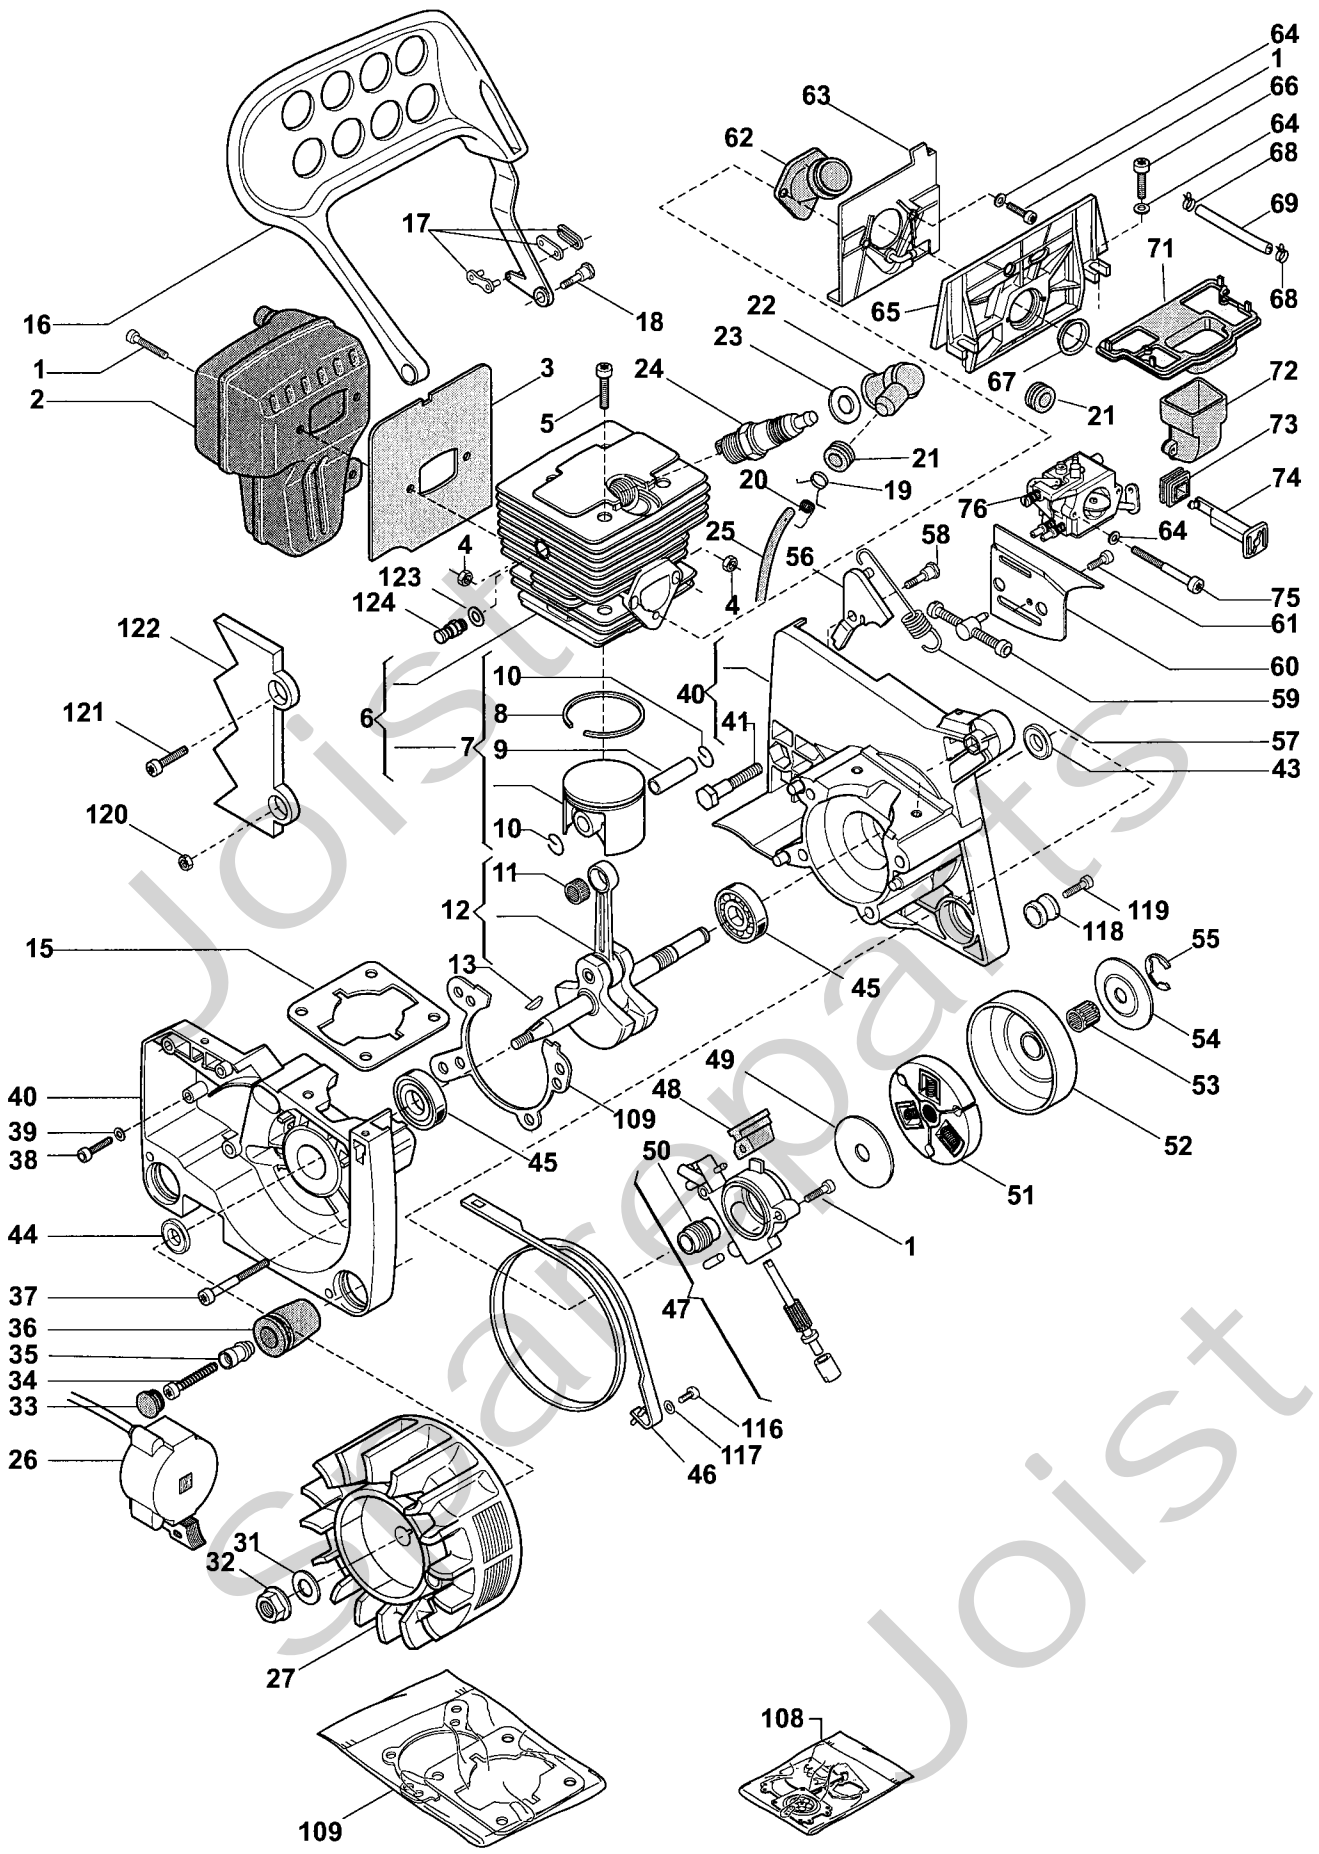

Utgåva Issue		Bildnr Picture No		SP 460- SP 510 MOTOR		SP 460- SP 510 ENGINE		Sida Page
2006- 12		1366C						376
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	4115 -12 -22 -32	4116 -12 -22 -32						
1	6	6	1911-3006-01	Skruv	Screw			
2	1	1	1911-3510-01	Ljuddämpare	Muffler			
3	1	1	1911-3370-01	• Ljuddämparpackning	• Muffler gasket			
4	4	4	1911-3022-01	Mutter	Nut			
5	4	4	1911-3006-01	Skruv	Screw			
6		1	1911-3196-01	Cylinder kpl m.kolv	Cylinder assy w.pist.		Inkl. pos 7	
6	1		1911-3596-01	Cylinder kpl m.kolv	Cylinder assy w.pist.		Inkl. pos 7	
7		1	1911-3195-01	• Kolv kpl	• Piston assy		Inkl. pos 8 - 10	
7	1		1911-3595-01	• Kolv kpl	• Piston assy		Inkl. pos 8 - 10	
8		1	1911-3046-01	•• Kolvring	•• Piston ring			
8	1		1911-3303-01	•• Kolvring	•• Piston ring			
9		1	1911-3050-01	•• Kolvbult	•• Piston pin			
9	1		1911-3305-01	•• Kolvbult	•• Piston pin			
10	2	2	1911-3068-01	•• Låsring	•• Lock ring			
11	1	1	1911-3300-01	• Nållager	• Needle bearing			
12	1	1	1911-3586-01	Vevaxel kpl	Crankshaft assy		Inkl. pos 11	
13	1	1	1911-3048-01	Svånghjulskil	Flywheel key			
15	1	1	1911-3441-01	• Cylinderpackning	• Cylinder gasket			
16	1	1	1911-3580-01	Handskydd	Hand guard			
17	1	1	1911-3523-01	Kedjelänk	Chain connection			
18	1	1	1911-3379-01	Pinnbult	Pin			
19	1	1	1911-3092-01	Klämma	Clamp			
20	1	1	1911-3421-01	Fjäder	Spring			
21	2	2	1911-3116-01	Gummihylsa	Grommet			
22	1	1	1911-3470-01	Tändstiftshatt	Spark plug cover			
23	1	1	1911-3433-01	Gummibricka	Rubber washer			
24	1	1	9400-0258-00	Tändstift	Spark plug		Champion CJ7Y	
25	1	1	1911-3055-01	• Tändstiftskabel	• Spark plug cable			
26	1	1	1911-3313-01	Elektronikspole	Electronic coil			
27	1	1	1911-3568-01	Svånghjul	Flywheel			
31	1	1	1911-3268-01	Bricka	Washer			
32	1	1	1911-3280-01	Mutter	Nut			
33	5	5	1911-3476-01	Propp	Cap			
34	8	8	1911-3001-01	Skruv	Screw			
35	5	5	1911-3393-01	Bussning	Bushing			
36	5	5	1911-3457-01	Stötdämpare	Shock absorber			
37	4	4	1911-3010-01	Skruv	Screw			
38	2	2	1911-3259-01	Skruv	Screw			
39	2	2	1911-3272-01	Bricka	Washer			
40	1	1	1911-3592-01	Vevhus kpl	Crankcase assy		Inkl. 41	
41	2	2	1911-3240-01	• Svärdskruv	• Bar screw			
43	1	1	1911-3044-01	Tätningring	Seal ring			
44	1	1	1911-3043-01	Tätningring	Seal ring			
45	2	2	1911-3297-01	Kullager	Ball bearing			
46	1	1	1911-3347-01	Bromsband	Brake band			
47	1	1	1911-3587-01	Oljepump kpl	Oil pump assy			
48	1	1	1911-3459-01	Packning	Gasket			
49	1	1	1911-3348-01	Kopplingsskiva	Clutch disc			
50	1	1	1911-3308-01	Skruvhylsa	Female screw			
51	1	1	1911-3552-01	Koppling	Clutch			
52	1	1	1911-3511-01	Kedjedrev	Sprocket			
53	1	1	1911-3298-01	Nållager	Needle bearing			
54	1	1	1911-3338-01	Drevbricka	Sprocket washer			
55	1	1	1911-3330-01	Låsring	Circlip			
56	1	1	1911-3512-01	Kedjebromsarm	Chain brake lever			
57	1	1	1911-4247-01	Fjäder	Spring			
58	1	1	1911-3380-01	Pinnbult	Pin			
59	1	1	1911-3530-01	Kedjesträckare	Chain tensioner			
60	1	1	1911-3349-01	Svärdplåt	Bar plate			
61	1	1	1911-3005-01	Skruv	Screw			
62	1	1	1911-3458-01	Insugningsrör	Intake manifold			
63	1	1	1911-3531-01	Fläns	Flange			
64	10	10	1911-3015-01	Bricka	Washer			

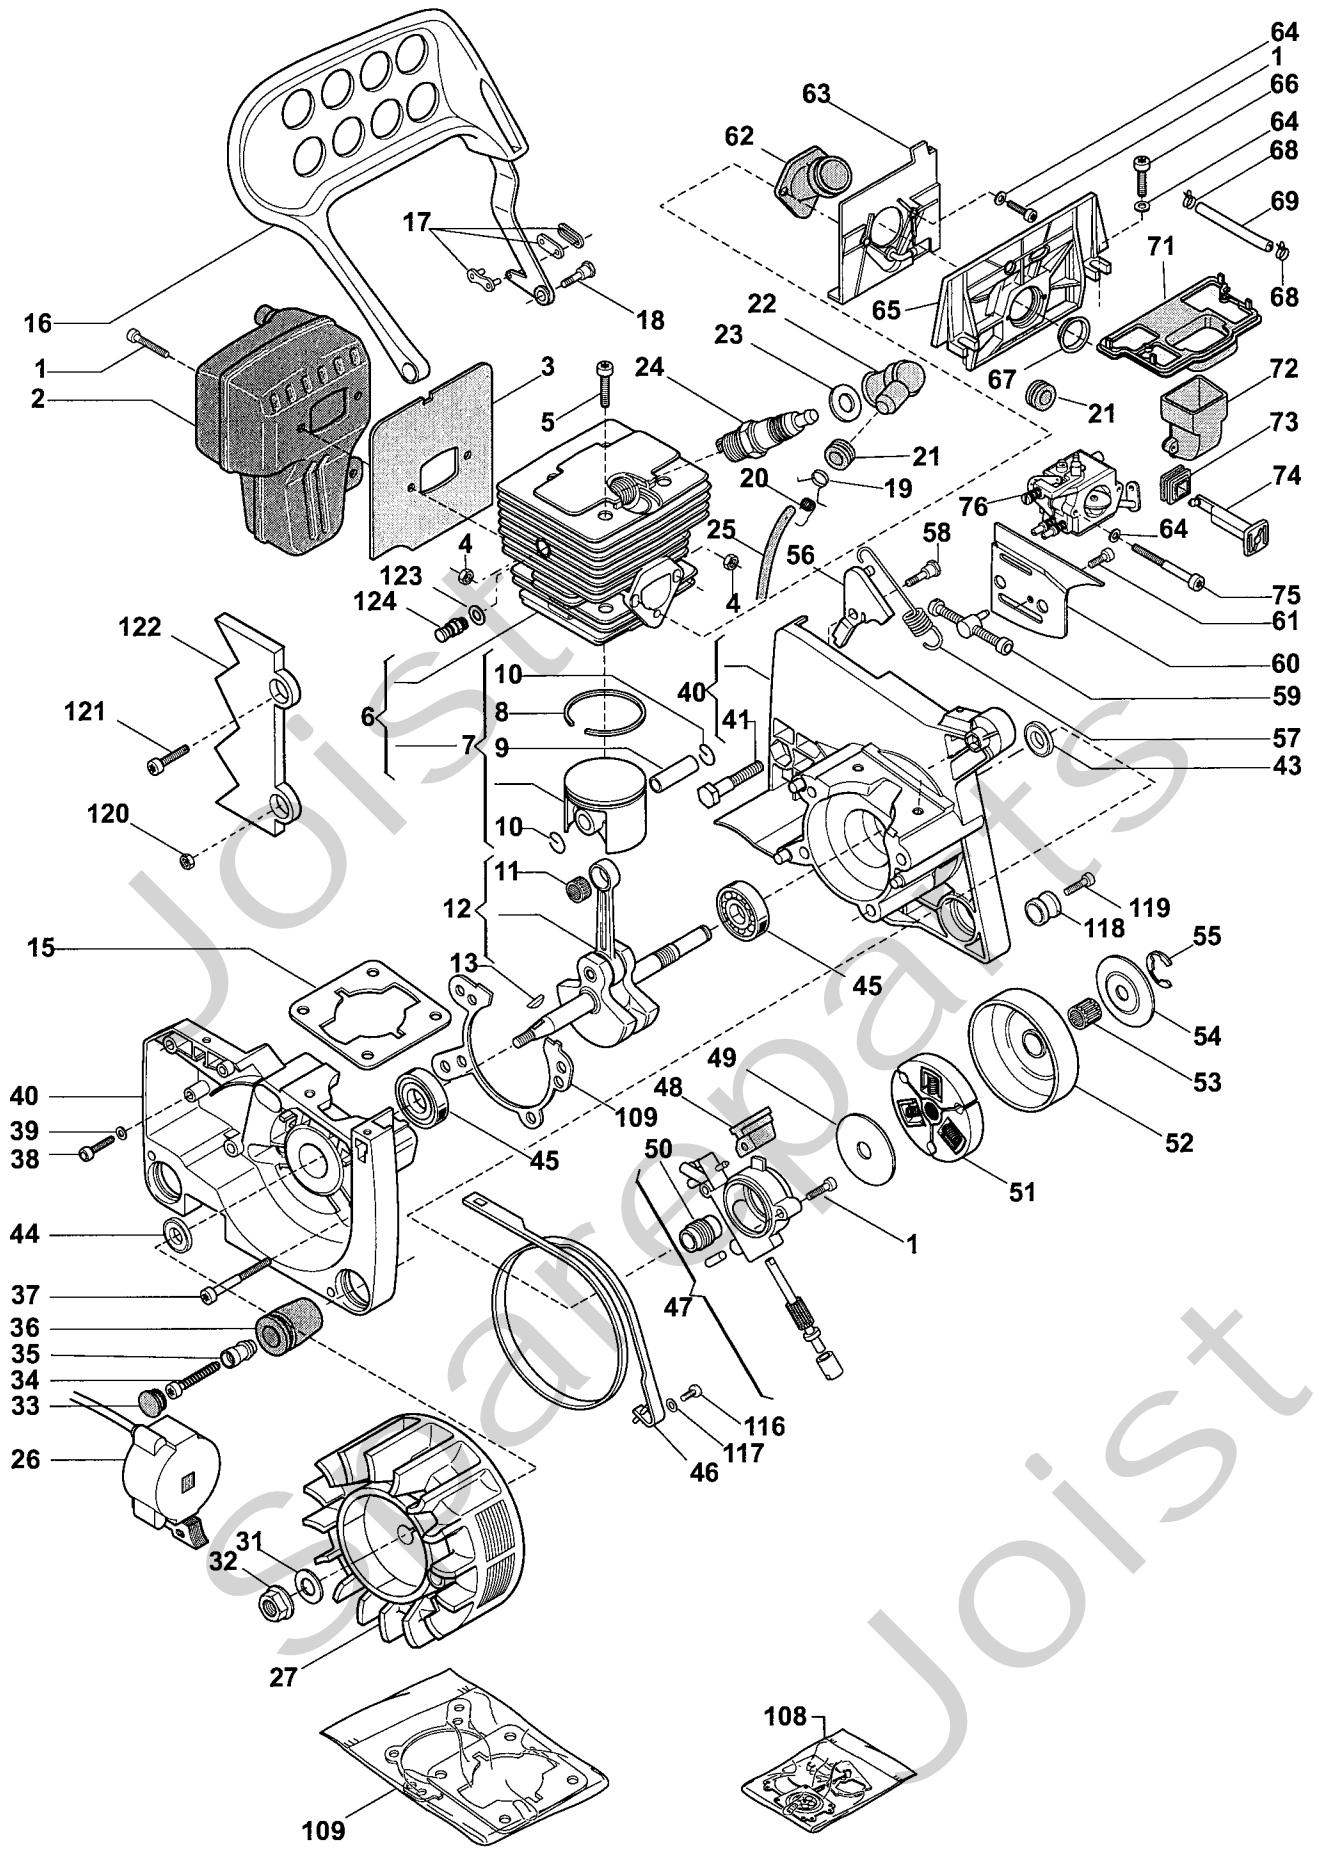

Utgåva Issue 2006-12	Bildnr Picture No 1366C	SP 460- SP 510 MOTOR	SP 460- SP 510 ENGINE	Sida Page 378
----------------------------	-------------------------------	-------------------------	--------------------------	---------------------

Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4115 -12 -22 -32	4116 -12 -22 -32					
65	1	1	1911-3565-01	Förgasarstöd	Carburettor support		
66	9	9	1911-3007-01	Skruv	Screw		
67	1	1	1911-3351-01	Bussning	Bushing		
68	2	2	1911-3422-01	Slangklämma	Clamp		
69	1	1	1911-3503-01	Slang	Carb. pulse pipe		
71	1	1	1911-3497-01	Luftfilterstöd	Air filter support		
72	1	1	1911-3489-01	Luftfilterhållare	Air filter holder		
73	1	1	1911-3465-01	Gummihylsa	Grommet		
74	1	1	1911-3451-01	Chokereglage	Choke lever		
75	2	2	1911-3262-01	Skruv	Screw		
X 76	1	1	1911-4446-01	Förgasare kpl	Carburettor assy		WT-717B
108	1	1	1911-3612-01	Membran- packningssats	Diaphragm- gasket set		
109	1	1	1911-3614-01	Packningssats	Gasket set		Inkl. pos 3, 15
116	1	1	1911-3257-01	Skruv	Screw		
117	1	1	1911-3016-01	Bricka	Washer		
118	1	1	1911-3471-01	Kedjestopp	Chain stop		
119	1	1	1911-3008-01	Skruv	Screw		
120	1	1	1911-3022-01	Mutter	Nut		
121	1	1	1911-3260-01	Skruv	Screw		
122	1	1	1911-3362-01	Spikjärn	Spike		
123	1	1	1911-3276-01	Bricka	Washer		
124	1	1	1911-3537-01	Dekompression	Decompression		