


# Genuine Spare Parts


---




JOIST  
Spareparts

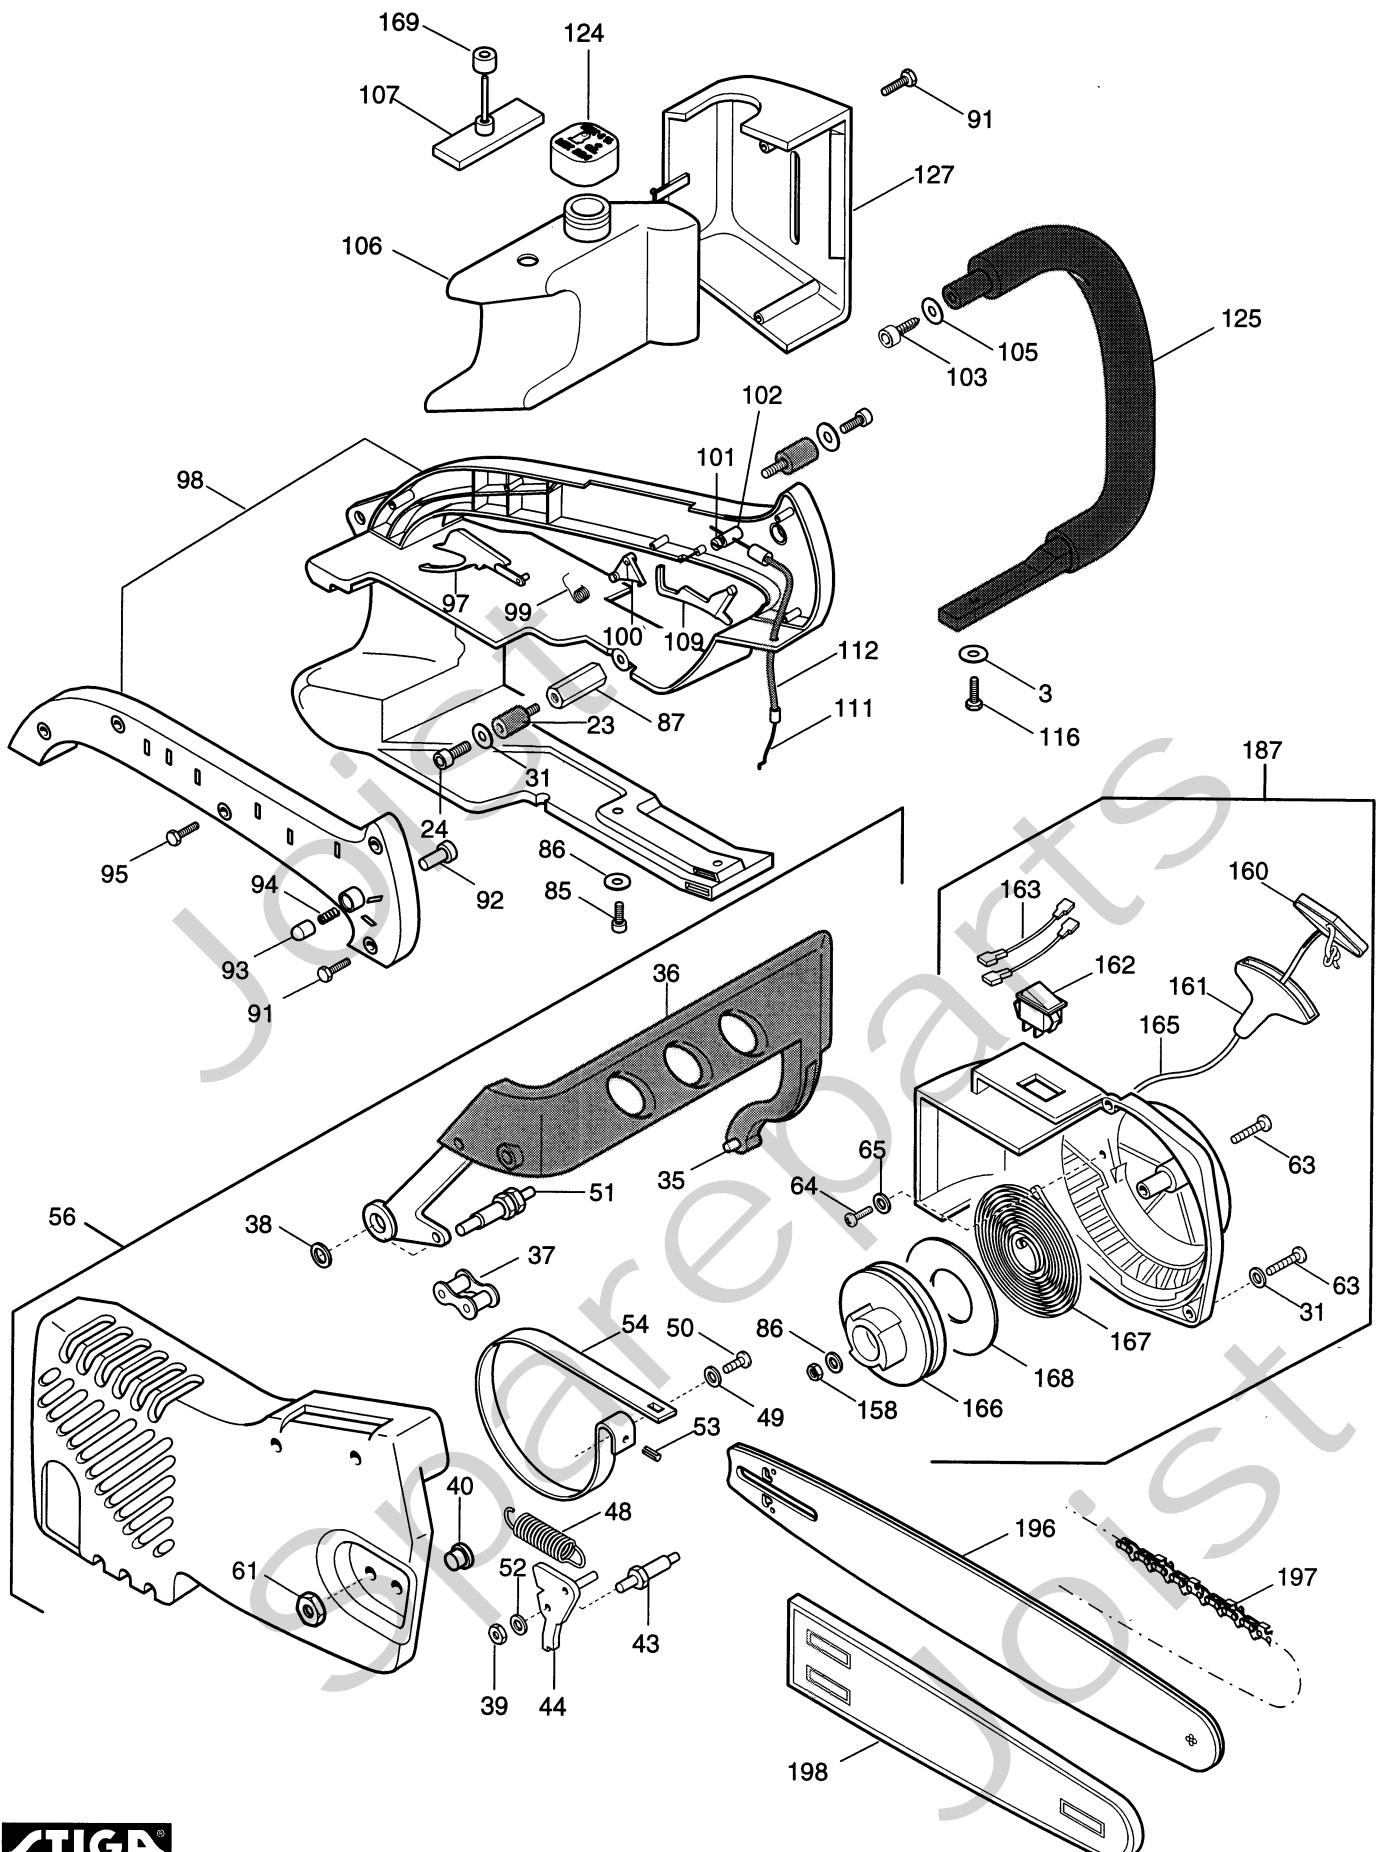


Utgåva Issue		Bildnr Picture No		SPR 350 KÅPOR			SPR 350 HOUSING		Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning		Description	Sats Kit	Anmärkning Notes		
	4117										
3	2			1911-3015-01	Bricka .....		Washer.....				
23	6			1911-3456-01	Stötdämpare .....		Shock absorber.....				
24	5			1911-3261-01	Skruv .....		Screw.....				
31	10			1911-3273-01	Bricka .....		Washer.....				
35	1			1911-3388-01	.. Sprint .....		.. Pin .....				
36	1			1911-3599-01	• Handskydd kpl .....		• Hand guard assy .....		Inkl. pos 35, 37		
37	1			1911-3523-01	.. Kedjelänk .....		.. Chain connection .....				
38	1			1911-3270-01	Bricka .....		Washer .....				
39	1			1911-3279-01	Mutter .....		Nut .....				
40	2			1911-3392-01	Bussning .....		Bushing .....				
43	1			1911-3383-01	Pivotaxel .....		Pivot pin .....				
44	1			1911-3509-01	Bromsarm .....		Brake lever .....				
48	1			1911-3402-01	Fjäder .....		Spring .....				
49	1			1911-3269-01	Bricka .....		Washer .....				
50	1			1911-3249-01	Skruv .....		Screw .....				
51	1			1911-3382-01	Pimbul .....		Stud .....				
52	1			1911-3267-01	Bricka .....		Washer .....				
53	1			1911-3323-01	Elastisk plugg .....		Elastic plug .....				
54	1			1911-3341-01	Bromsband .....		Brake band .....				
56	1			1911-3544-01	Kopplingshus kpl .....		Clutch housing assy .....		Inkl. pos 35 - 37		
61	2			1911-3378-01	Svårdmutter .....		Bar nut .....				
63	1			1911-3265-01	• Skruv .....		• Screw .....				
64	1			1911-3249-01	• Skruv .....		• Screw .....				
65	1			1911-3016-01	• Bricka .....		• Washer .....				
85	4			1911-3007-01	Skruv .....		Screw .....				
86	1			1911-3216-01	• Bricka .....		• Washer .....				
87	1			1911-3377-01	Sexkantsinsats .....		Hexagonal insert .....				
91	3			1911-3253-01	Skruv .....		Screw .....				
92	1			1911-3385-01	Spärpinne .....		Pin .....				
93	1			1911-3475-01	Spärknapp .....		Knob .....				
94	1			1911-3400-01	Spärrfjäder .....		Spring .....				
95	4			1911-3252-01	Skruv .....		Screw .....				
97	1			1911-3448-01	Säkerhetsspärr .....		Safety lever .....				
98	1			1911-3598-01	Handtag kpl .....		Handle assy .....				
99	1			1911-3401-01	Returfjäder .....		Spring .....				
100	1			1911-3446-01	Gasarm .....		Throttle lever .....				
101	1			1911-3245-01	Skruv .....		Screw .....				
102	1			1911-3386-01	Klämma .....		Clip .....				
103	1			1911-3251-01	Skruv .....		Screw .....				
105	1			1911-3266-01	Bricka .....		Washer .....				
106	1			1911-3585-01	Bränsletank kpl .....		Fuel tank assy .....		Inkl. pos 124		
107	1			1911-3621-01	Bränslefilter .....		Fuel intake filter .....				
109	1			1911-3447-01	Gasreglage .....		Throttle lever .....				
111	1			1911-3517-01	Gaswire .....		Throttle wire .....				
112	1			1911-3326-01	Ytterhölje- gaswire .....		Throttle cable sheath .....				
116	5			1911-3009-01	Skruv .....		Screw .....				
124	1			1911-3515-01	• Tanklock .....		• Fuel tank cap .....				
125	1			1911-3570-01	Handtag .....		Handrail .....				
127	1			1911-3569-01	Tankkåpa .....		Fuel tank cover .....				
158	1			9747-0531-02	• Mutter .....		• Nut .....				
160	1			1911-3469-01	Inlägg- starthandtag .....		• Insert- starter handle .....				
161	1			1911-3468-01	• Starthandtag .....		• Starter handle .....				
162	1			1911-3053-01	Stoppkontakt .....		Stop switch .....				
163	2			1911-3322-01	Jordkabel .....		Ground cable .....				
165	1			1911-3130-01	• Startsöre .....		• Starter cord .....				
166	1			1911-3527-01	• Linjhjul .....		• Starter pulley .....				
167	1			1911-3176-01	• Startfjäder .....		• Starter spring .....				
168	1			1911-3096-01	• Skiva .....		• Disc .....				
169	3			1911-3463-01	Gummihylsa .....		Grommet .....				
187	1			1911-3600-01	Start kpl .....		Starter assy .....				
196	1			1911-3224-01	Svärd .....		Bar .....		12" (3/8"x0.050)		
197	1			1911-3232-01	Kedja (44E) .....		Chain (44E) .....		91VG (3/8")		
198	1			1911-3519-01	Kedjeskydd .....		Chain cover .....		14"		

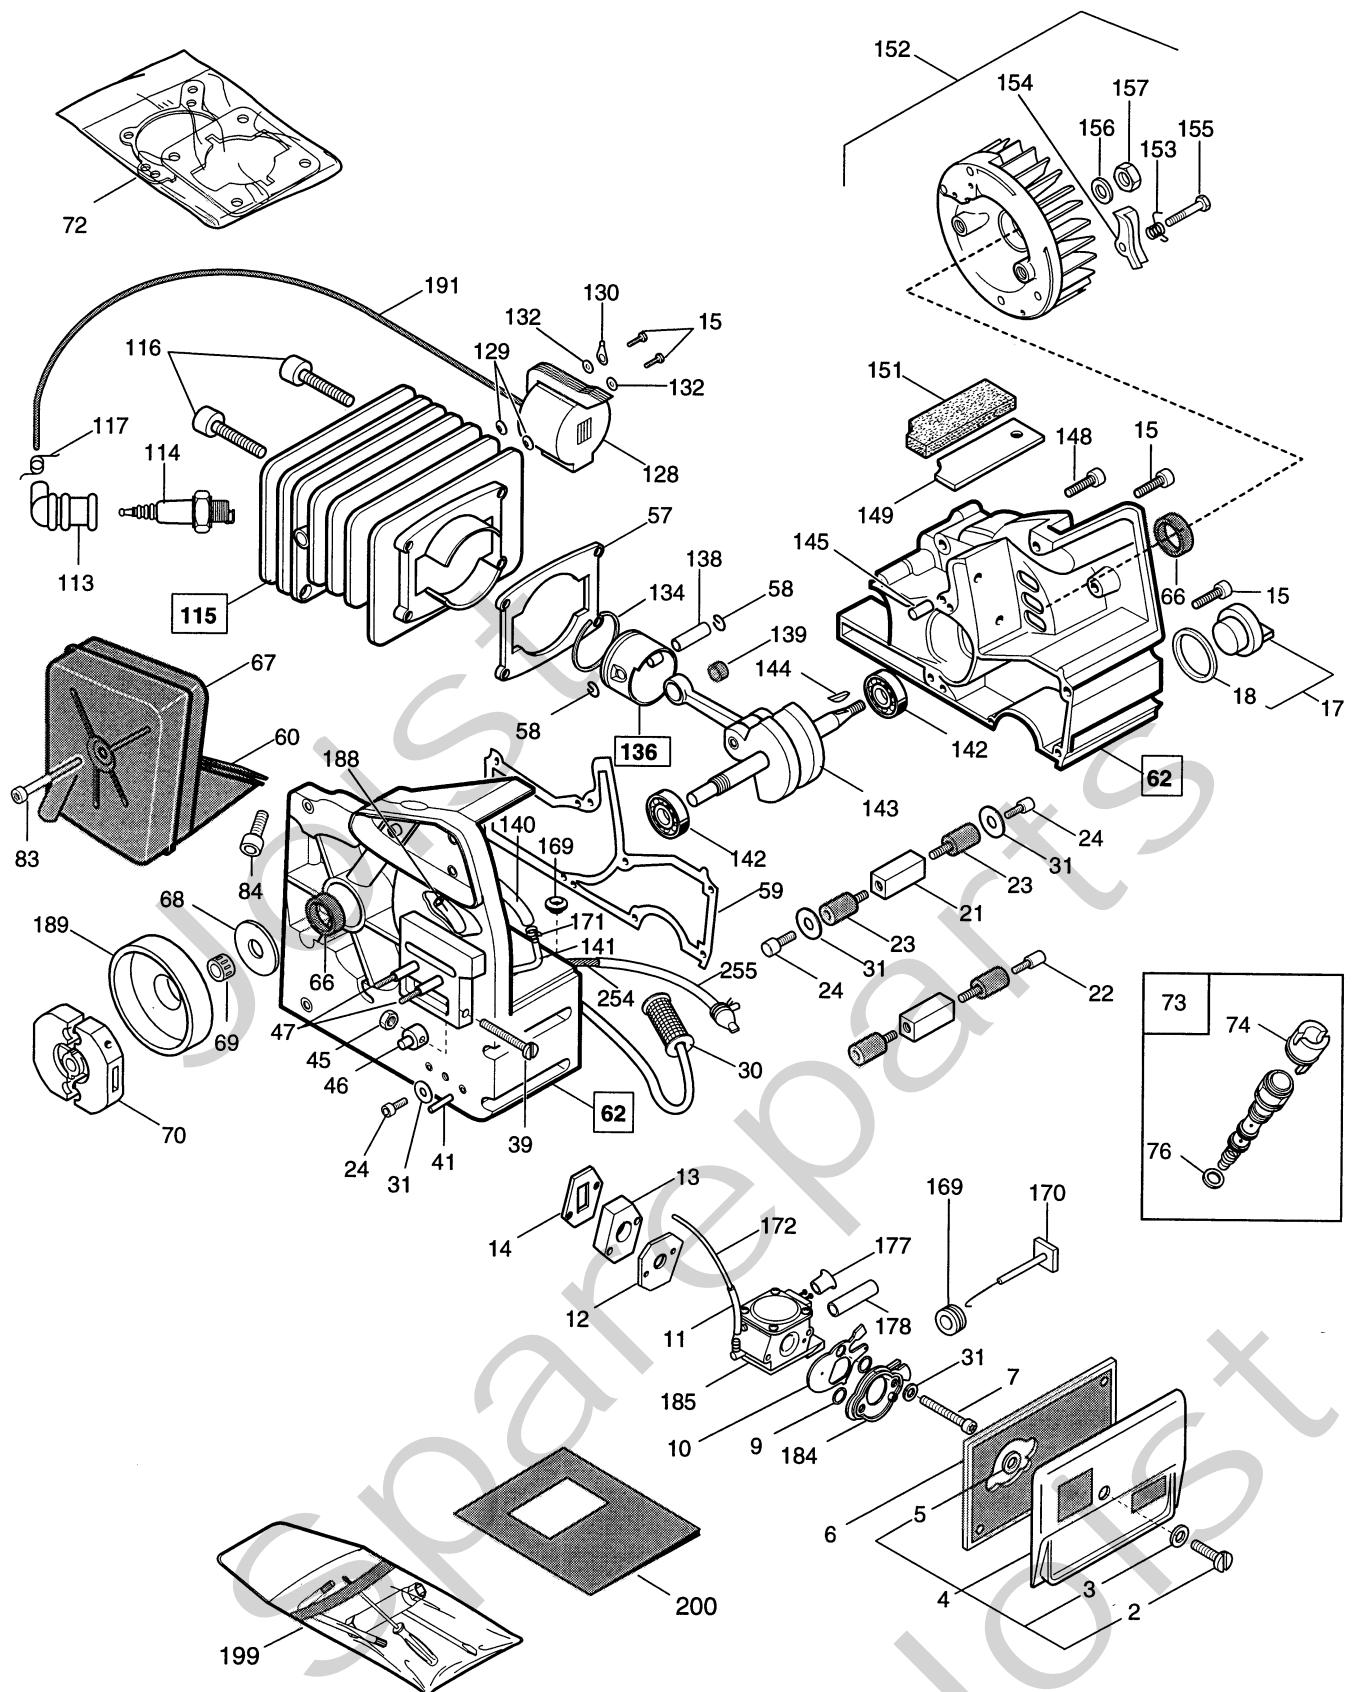

Utgåva Issue		Bildnr Picture No		SPR 350 MOTOR		SPR 350 ENGINE		Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes		
	4117									
2	1			1911-3243-01	• Skruv .....	• Screw .....				
3	2			1911-3015-01	• Bricka .....	• Washer .....		Inkl. pos 2, 3, 5		
4	1			1911-3601-01	Luftfilterlock kpl.....	Air filter cover assy .....				
5	1			1911-3429-01	• Packning .....	• Gasket .....				
6	1			1911-3493-01	Luftfilter .....	Air filter .....				
7	2			1911-3014-01	Skruv .....	Screw .....				
9	2			1911-3339-01	Bricka .....	Washer .....				
10	1			1911-3342-01	Chokespjäll .....	Choke valve .....				
11	1			1911-3501-01	Slang .....	Tube .....				
12	1			1911-3443-01	• Förgasarpackning .....	• Carburettor gasket .....				
13	1			1911-3521-01	Stöd .....	Support .....				
14	1			1911-3437-01	• Packning .....	• Gasket .....				
15	8			1911-3259-01	Skruv .....	Screw .....				
17	1			1911-3526-01	Oljetanklock kpl .....	Oil tank cap assy .....		Inkl. pos 18		
18	1			1911-3428-01	• Tätningsring .....	• Tank cap seal .....				
21	2			1911-3376-01	Stöd .....	Support .....				
22	1			1911-3292-01	Skruv .....	Screw .....				
23	6			1911-3456-01	Stötdämpare .....	Shock absorber .....				
24	5			1911-3261-01	Skruv .....	Screw .....				
30	1			1911-3529-01	Oljefilter .....	Oil filter .....				
31	3			1911-3273-01	Bricka .....	Washer .....				
39	1			1911-3246-01	Skruv .....	Screw .....				
41	1			1911-3324-01	Fjäderpinne .....	Spring pin .....				
45	1			1911-3022-01	Mutter .....	Nut .....				
46	1			1911-3387-01	Kedjespännares .....	Chain tensioner .....				
47	2			1911-3281-01	Pinnbult .....	Stud .....				
57	1			1911-3438-01	• Packning .....	• Gasket .....				
58	2			1911-3068-01	• Låsring .....	• Lock ring .....				
60	1			1911-3436-01	• Packning .....	• Gasket .....				
62	1			1911-3591-01	Vevhus kpl .....	Crankcase assy .....				
66	2			1911-3043-01	Tätningsring .....	Seal ring .....				
67	1			1911-3508-01	Ljuddämpare .....	Muffler .....				
68	1			1911-3340-01	Drevbricka .....	Sprocket washer .....				
69	1			1911-3299-01	Nållager .....	Needle bearing .....				
70	1			1911-3522-01	Koppling kpl .....	Clutch assy .....				
72	1			1911-3611-01	Packningssats .....	Gasket set .....		Inkl. 12,14,57,59,60		
73	1			1911-3607-01	Oljepump kpl .....	Oil pump assy .....		Inkl. pos 74, 76		
74	1			1911-3474-01	• Bussning .....	• Bushing .....				
76	3			1911-3431-01	• Tätningsring .....	• Seal .....				
83	1			1911-3263-01	Skruv .....	Screw .....				
84	2			1911-3013-01	Skruv .....	Screw .....				
113	1			1911-3470-01	Tändstiftshatt .....	Spark plug cover .....				
114	1			9400-0258-00	Tändstift .....	Spark plug .....		Champion CJ7Y		
115	1			1911-3594-01	Cylinder kpl .....	Cylinder assy .....		Inkl 58,134,136,138		
116	5			1911-3009-01	Skruv .....	Screw .....				
117	1			1911-3421-01	Fjäder .....	Spring .....				
128	1			1911-3312-01	Elektronikspole .....	Electronic coil .....				
129	2			1911-3271-01	Bricka .....	Washer .....				
130	1			1911-3335-01	Jordanslutning .....	Ground terminal .....				
132	2			1911-3272-01	Bricka .....	Washer .....				
134	1			1911-3047-01	• Kolvring .....	• Piston ring .....				
136	1			1911-3593-01	• Kolv kpl .....	• Piston assy .....		Inkl. pos 58,134,138		
138	1			1911-3306-01	• Kolvbult .....	• Piston pin .....				
139	1			1911-3300-01	• Nållager .....	• Needle bearing .....				
140	1			1911-3502-01	Gummisläng .....	Rubber tube .....				
141	1			1911-3373-01	Anslutning .....	Connection .....				
142	2			1911-3297-01	Kullager .....	Ball bearing .....				
143	1			1911-3584-01	Vevaxel kpl .....	Crankshaft assy .....				
144	1			1911-3048-01	Svänghjulskil .....	Flywheel key .....				
145	2			1911-3307-01	Styrpinne .....	Pin .....				
148	3			1911-3258-01	Skruv .....	Screw .....				
149	1			1911-3473-01	Förgasarskydd .....	Carb. protection .....				
151	1			1911-3439-01	Packning .....	Gasket .....				

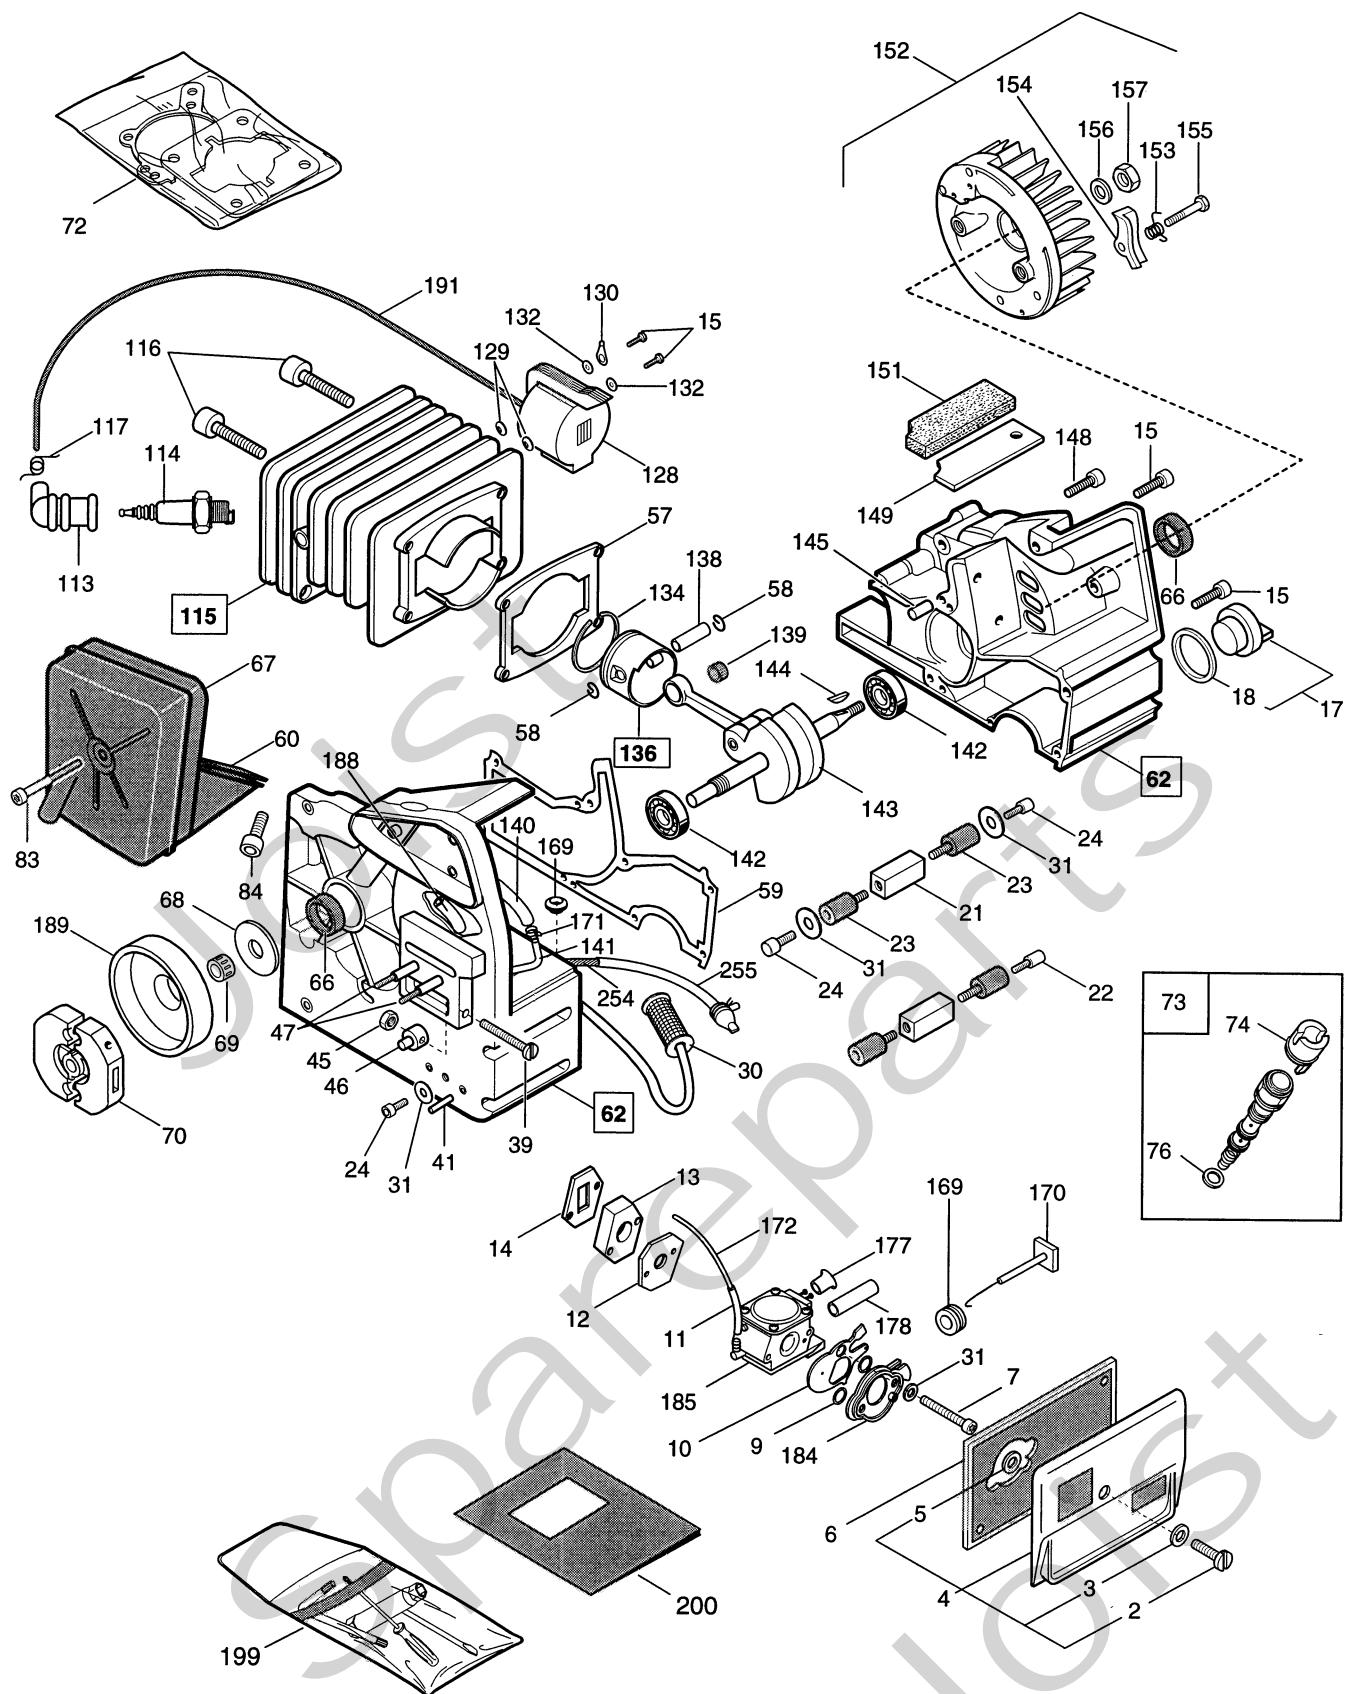

Utgåva Issue		Bildnr Picture No		SPR 350 MOTOR			SPR 350 ENGINE		Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description		Sats Kit	Anmärkning Notes		
	4117										
152	1			1911-3516-01	Svänghjul kpl.....	Flywheel assy .....			Inkl. pos 153 - 155		
153	2			1911-3398-01	• Fjäder.....	• Spring .....					
154	2			1911-3466-01	• Startspärr .....	• Starter hook .....					
155	2			1911-3282-01	• Skruv .....	• Screw .....					
156	1			1911-3268-01	Bricka .....	Washer .....					
157	1			1911-3280-01	Mutter .....	Nut .....					
169	3			1911-3463-01	Gummihylsa .....	Grommet .....					
170	1			1911-3528-01	Chokearm .....	Choke lever .....					
171	2			1911-3327-01	Slangklämma .....	Clamp .....					
172	1			1911-3500-01	Slang .....	Tube .....					
177	1			1911-3464-01	Gummipackning .....	Rubber gasket .....					
178	1			1911-3499-01	Rör-tomgångsjust .....	Guide tube-idle .....					
184	1			1911-3566-01	Insugningsfläns .....	Intake flange .....					
185	1			1911-3555-01	Förgasare kpl .....	Carburettor assy .....			Walbro WT272		
188	2			1911-3374-01	Oljeslangförbindning .....	Oil tube connection .....					
189	1			1911-3507-01	Kedjedrev .....	Sprocket .....					
191	1			1911-3055-01	Tändstiftskabel .....	Spark plug cable .....					
199	1			1911-3557-01	Tbh- påse .....	Accessory bag .....					
200	1			8215-3206-01	Bruksanvisning .....	Owner's manual .....					
254	1			1911-3373-01	Anslutning .....	Connection .....					
255	1			1911-3536-01	Oljeslang .....	Oil tube .....					

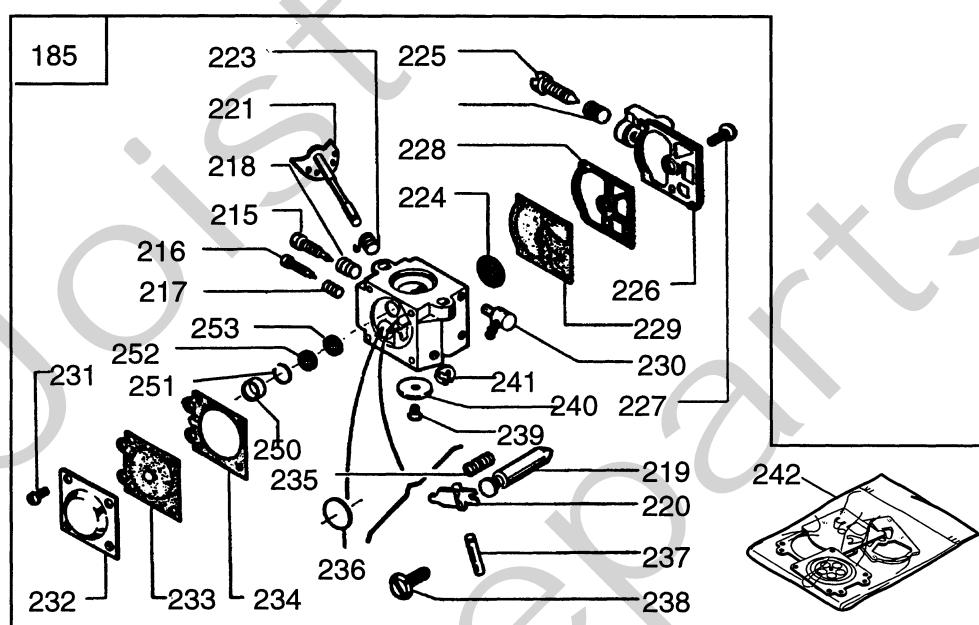

Utgåva Issue 2003-21	Bildnr Picture No 1355	SPR 350 FÖRGASARE WALBRO WT272	SPR 350 CARBURETTOR WALBRO WT272	Sida Page 10			
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4117						
185	1		1911-3555-01	Förgasare kpl.....	Carburettor assy .....		
215	1		1911-3290-01	• Justerskruv- max .....	• Mixture screw- high .....		
216	1		1911-3288-01	• Justerskruv- tomgång.....	• Mixture screw- idle .....		
217	1		1911-3404-01	• Fjäder.....	• Spring .....		
218	1		1911-3405-01	• Fjäder.....	• Spring .....		
219	1		1911-3375-01	• Nålvencil.....	• Inlet needle.....		
220	1		1911-3337-01	• Ventilarm .....	• Control lever.....		
221	1		1911-3389-01	• Spjällarm .....	• Throttle shaft.....		
223	1		1911-3410-01	• Fjäder.....	• Spring .....		
224	1		1911-3495-01	• Nät .....	• Screen.....		
225	1		1911-3291-01	• Tomgångsskruv .....	• Idle speed screw .....		
226	1		1911-3424-01	• Lock.....	• Cover.....		
227	4		1911-3285-01	• Skruv .....	• Screw .....		
230	1		1911-3346-01	• Nippel .....	• Fitting .....		
231	4		1911-3284-01	• Skruv .....	• Screw .....		
232	1		1911-3333-01	• Lock.....	• Cover.....		
235	1		1911-3403-01	• Fjäder.....	• Spring .....		
236	1		1911-3343-01	• Plugg .....	• Welch plug .....		
237	1		1911-3384-01	• Sprint.....	• Pin.....		
238	1		1911-3286-01	• Skruv .....	• Screw .....		
239	1		1911-3283-01	• Skruv .....	• Screw .....		
240	1		1911-3345-01	• Gasspjäll .....	• Throttle shutter .....		
241	1		1911-3329-01	• Hållare .....	• Retainer.....		
242	1		1911-3612-01	• Membran- packningssats...	• Diaphragm- gasket set .....		
250	1		1911-3391-01	• Plugg .....	• Plug .....		
251	1		1911-3332-01	• Hållare .....	• Retainer .....		
252	1		1911-3494-01	• Filter .....	• Filter .....		
253	1		1911-3390-01	• Ventil .....	• Valve .....		Inkl. 228,229,233,234