



Genuine Spare Parts




Joist
Spareparts
Joist

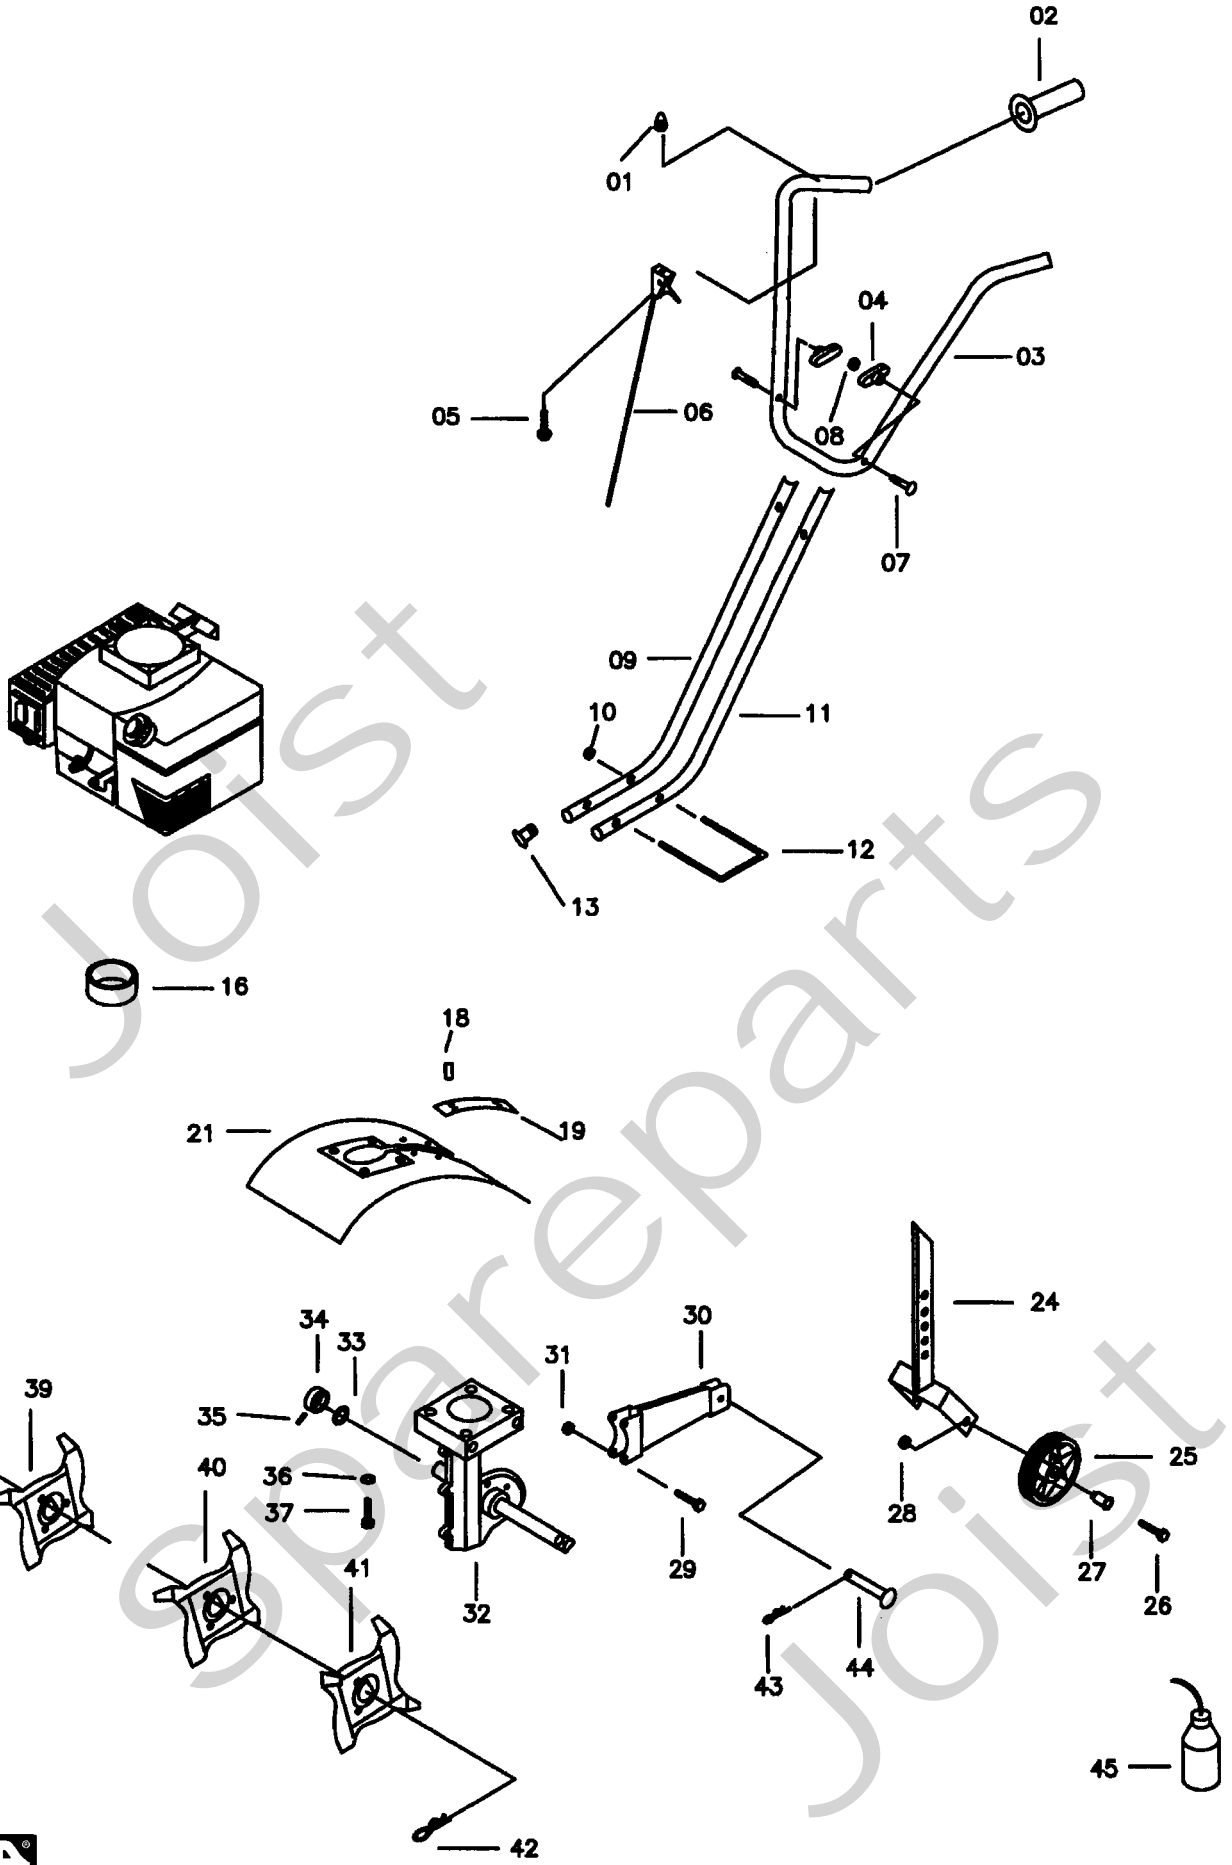

Utgåva Issue		Bildnr Picture No		JB 240 CHASSI		JB 240 CHASSIS		Sida Page	
2006- 12		1848						200	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2224 -12								
1	1			1482- 1099- 01	Mutter.....	Nut.....			
2	2			1482- 0947- 01	Handtag.....	Plast grip.....			
3	1			1482- 1086- 01	Styre- överdel.....	Handle- upper.....			
4	2			1482- 1100- 01	Vingmutter.....	Wing nut.....			
5	1			1482- 1081- 01	Skruv.....	Screw.....			
6	1			1482- 1042- 01	Gasreglagekabel.....	Throttle cable.....			
7	2			1482- 0968- 01	Bult.....	Bolt.....			
8	2			9799- 0631- 02	Mutter.....	Nut.....			
9	1			1482- 1085- 01	Styrrör- hö.....	Handlebar- RH.....			
10	2			1482- 0983- 01	Mutter.....	Nut.....			
11	1			1482- 1084- 01	Styrrör- vä.....	Handlebar- LH.....			
12	1			1482- 1087- 01	Bygel.....	Clamp.....			
13	2			1482- 1103- 01	Plugg.....	Plug.....			
16	1			1482- 1097- 01	Kopplingskål.....	Clutch bowl.....			
18	4			1482- 1082- 01	Nit.....	Rivet.....			
19	1			1482- 1096- 01	Skärmförbindning.....	Sheet connector.....			
21	1			1482- 1094- 01	Skärm- gul.....	Sheet- yellow.....			
24	1			1482- 1083- 01	Bromssporre/hjulfäste.....	Depth skid/wheel supp.....			
25	2			1482- 1102- 01	Stödhjul.....	Support wheel.....			
26	2			1482- 0968- 01	Bult.....	Bolt.....			
27	2			1482- 1104- 01	Bussning.....	Bushing.....			
28	2			1482- 0983- 01	Mutter.....	Nut.....			
29	4			1482- 1080- 01	Skruv.....	Screw.....			
30	1			1482- 1088- 01	Konsol.....	Console.....			
31	4			1482- 0983- 01	Mutter.....	Nut.....			
32	1			1482- 1089- 01	Växelhus kpl.....	Transmission assy.....			
33	2			1482- 1098- 01	Packning.....	Gasket.....			
34	2			1482- 1101- 01	Dammskydd.....	Dust cover.....			
35	2			9915- 0610- 15	Stoppsskruv.....	Set screw.....			
36	4			9683- 0025- 02	Låsbricka.....	Lock washer.....			
37	4			9997- 0640- 12	Skruv.....	Screw.....			
38	1			1482- 1093- 01	Rotor, hö- ytter.....	Rotor, RH- outer.....			
39	1			1482- 1092- 01	Rotor, hö- inre.....	Rotor, RH- inner.....			
40	1			1482- 1091- 01	Rotor, vä- inre.....	Rotor, LH- inner.....			
41	1			1482- 1090- 01	Rotor, vä- yttre.....	Rotor, LH- outer.....			
42	2			1482- 0712- 01	Låsnål.....	Hair pin.....			
43	1			9598- 0002- 02	Låsnål.....	Pin lock.....			
44	1			1482- 0917- 01	Sprint.....	Cotter bolt.....			
45	1			1482- 0536- 01	Växelhusolja (0.5 l).....	Gear case oil (0.5 l).....		Multifak EP00	

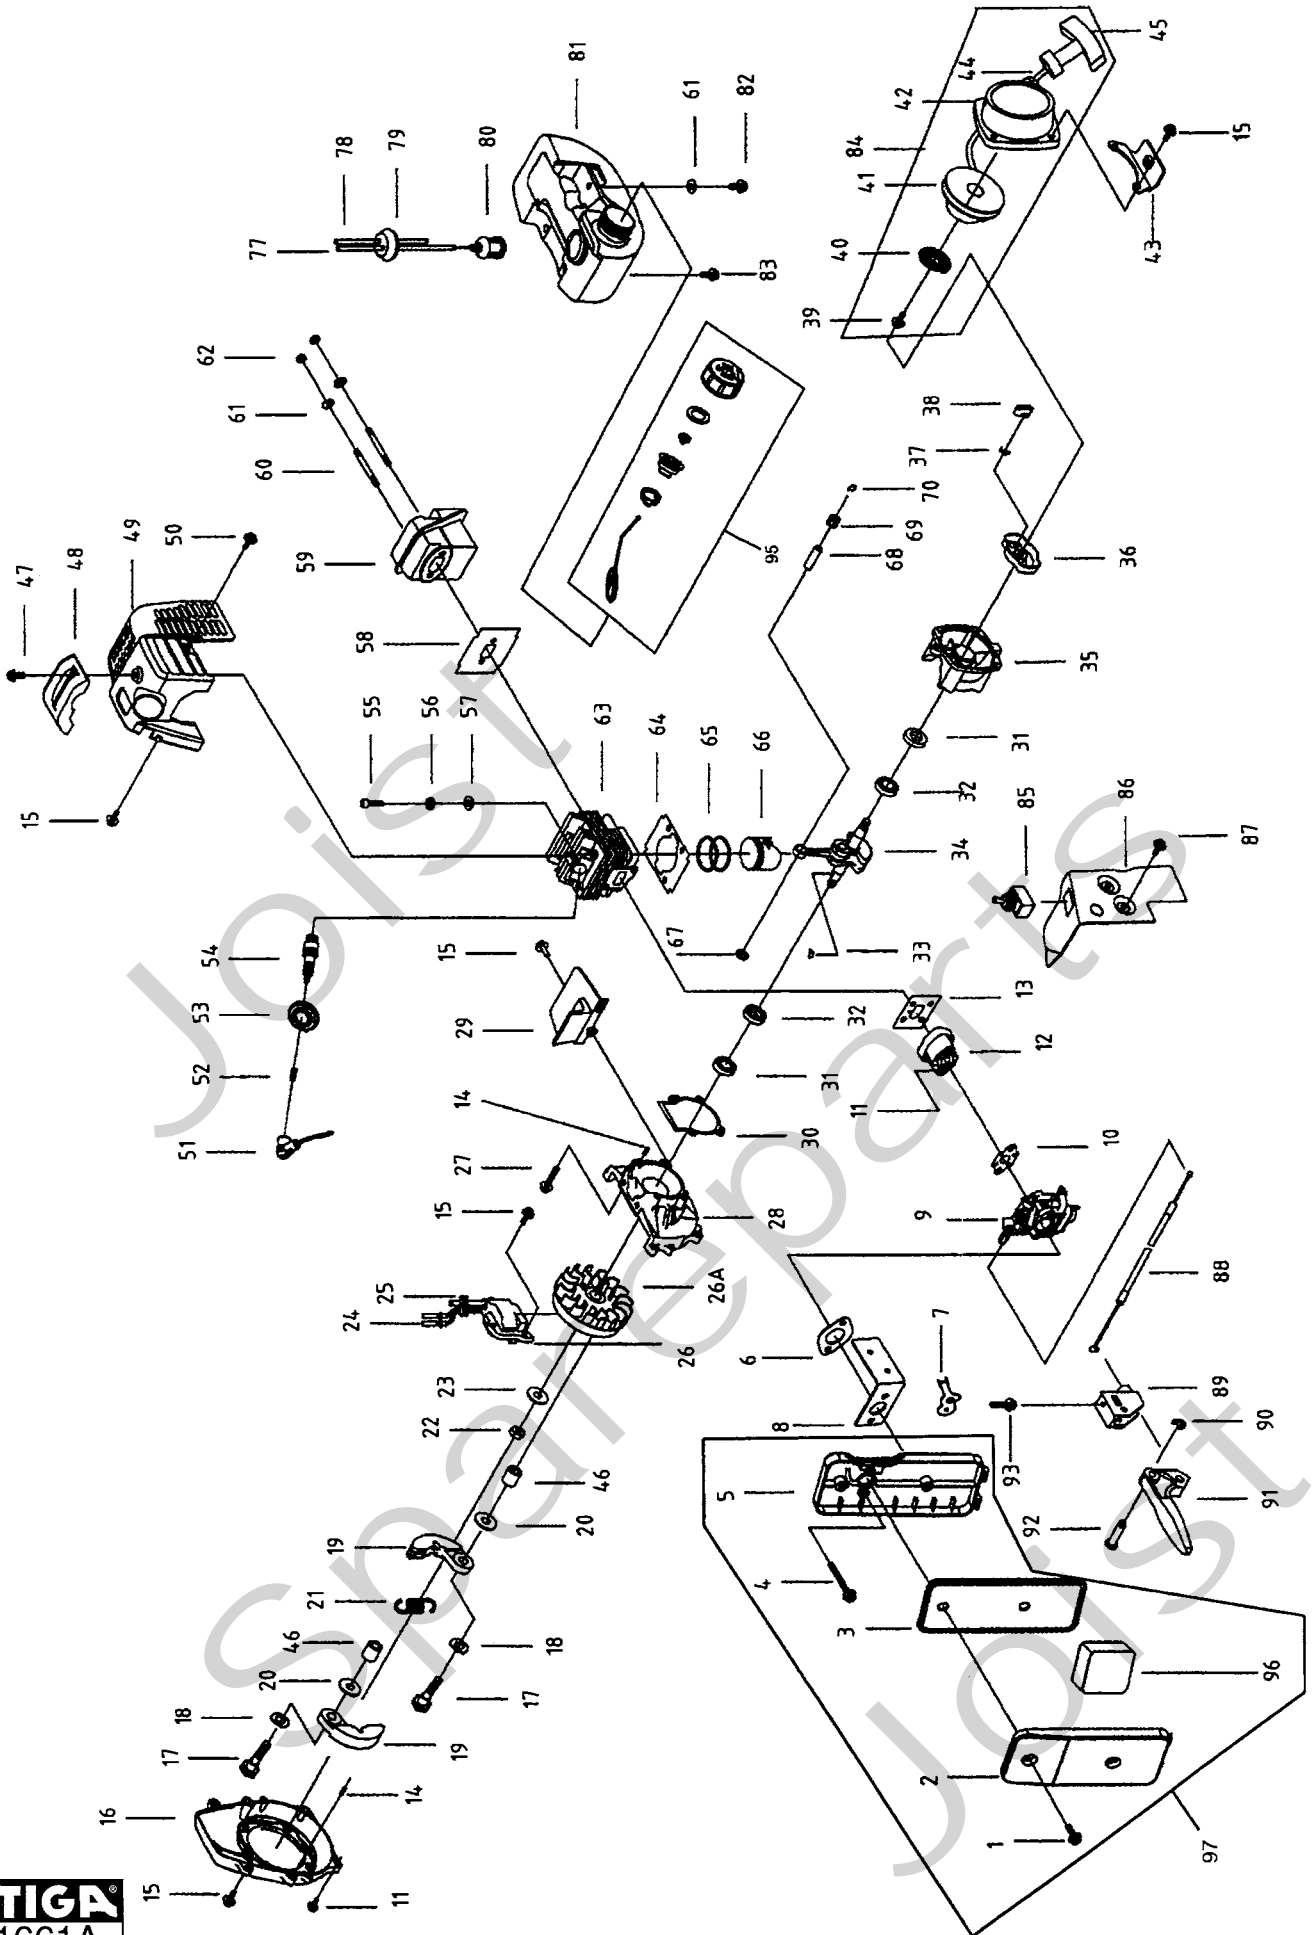

Utgåva Issue		Bildnr Picture No		JB 240 MOTOR	JB 240 ENGINE	Sida Page		
2006-12		1661A				202		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2224 -12							
1	2			1482-1079-01	• Skruv	• Screw		
3	1			1482-1076-01	• Filterelem. (papper)	• Cleaner elem. (paper)		
4	2			1482-1066-01	• Skruv	• Screw		
5	1			1482-1077-01	• Luftfilterhus	• Cleaner inside cover		
6	1			1482-1051-01	Packning	Gasket		
7	1			1482-1037-01	Chokespjäll	Choke		
8	1			1482-1028-01	Fäste	Joint board		
9	1			1482-1052-01	Förgasare	Carburettor		
10	1			1482-0987-01	Packning	Gasket		
11	6			1482-1064-01	Skruv	Screw		
12	1			1482-1000-01	Insugningsrör	Inlet manifold		
13	1			1482-0998-01	Packning	Gasket		
14	4			1482-1053-01	Styrpinne	Guide pin		
15	9			1482-1061-01	Skruv	Screw		
16	1			1482-1024-01	Flätkåpa	Fan cover		
17	2			1482-1031-01	Ansatsbult	Shoulder screw		
18	2			1482-0996-01	Bricka	Washer		
19	2			1482-0988-01	Kopplingssko	Clutch shoe		
20	2			1482-0990-01	Bricka	Washer		
21	1			1482-0989-01	Fjäder	Spring		
22	1			1482-1054-01	Mutter	Nut		
23	1			1482-1071-01	Bricka	Washer		
24	1			1482-1032-01	Stoppkabel	Stop cord		
25	1			1482-1002-01	Gummihylsa	Grommet		
26	1			1482-1033-01	Tändspole	Magneto stator		
26A	1			1482-1034-01	Svänhjul	Flywheel		
27	4			1482-1065-01	Skruv	Screw		
28	1			1482-1013-01	Vevhushalva	Crank case half		
29	1			1482-1001-01	Ledplåt	Guide plate		
30	1			1482-1014-01	Packning	Gasket		
31	2			1482-1047-01	Tätningssring	Oil seal		
32	2			1482-1072-01	Kullager	Ball bearing		
33	1			1482-1050-01	Kil	Key		
34	1			1482-1006-01	Vevaxel	Crankshaft		
35	1			1482-1015-01	Vevhushalva	Crank case half		
36	1			1482-1016-01	Hållare-startspärr	Holder-starter pawl		
37	1			1482-1019-01	Fjäder	Spring		
38	1			1482-1018-01	Startspärr	Starter pawl		
39	1			1482-1068-01	• Skruv	• Screw		
40	1			1482-0992-01	• Returfjäder	• Recoil spring		
41	1			1482-0993-01	• Linhjul	• Starter pulley		
42	1			1482-0991-01	• Starthus	• Starter body		
43	1			1482-1035-01	Stöd	Stand		
44	1			1482-0994-01	• Startsnöre	• Starter rope		
45	1			1482-1046-01	• Starthandtag	• Starter handle		
46	2			1482-1030-01	Distanshylsa	Sleeve		
47	1			1482-1062-01	Skruv	Screw		
48	1			1482-1005-01	Lock	Cover		
49	1			1482-1027-01	Cylinderkåpa	Cover		
50	1			1482-1060-01	Skruv	Screw		
51	1			1482-1003-01	Tändstiftshatt	Spark plug cap		
52	1			1482-1049-01	Fjäder	Click spring		
53	1			1482-1004-01	Tändstiftslock	Spark plug cover		
54	1			1482-1074-01	Tändstift	Spark plug		
55	4			1482-1056-01	Skruv	Screw		
56	4			1482-1069-01	Bricka	Washer		
57	4			1482-1057-01	Bricka	Washer		
58	1			1482-0999-01	Packning	Gasket		
59	1			1482-1029-01	Ljuddämpare	Muffler		
60	2			1482-0997-01	Pinnbult	Stud		
61	3			1482-1070-01	Bricka	Washer		
62	2			1482-1055-01	Mutter	Nut		
63	1			1482-1017-01	Cylinder	Cylinder		

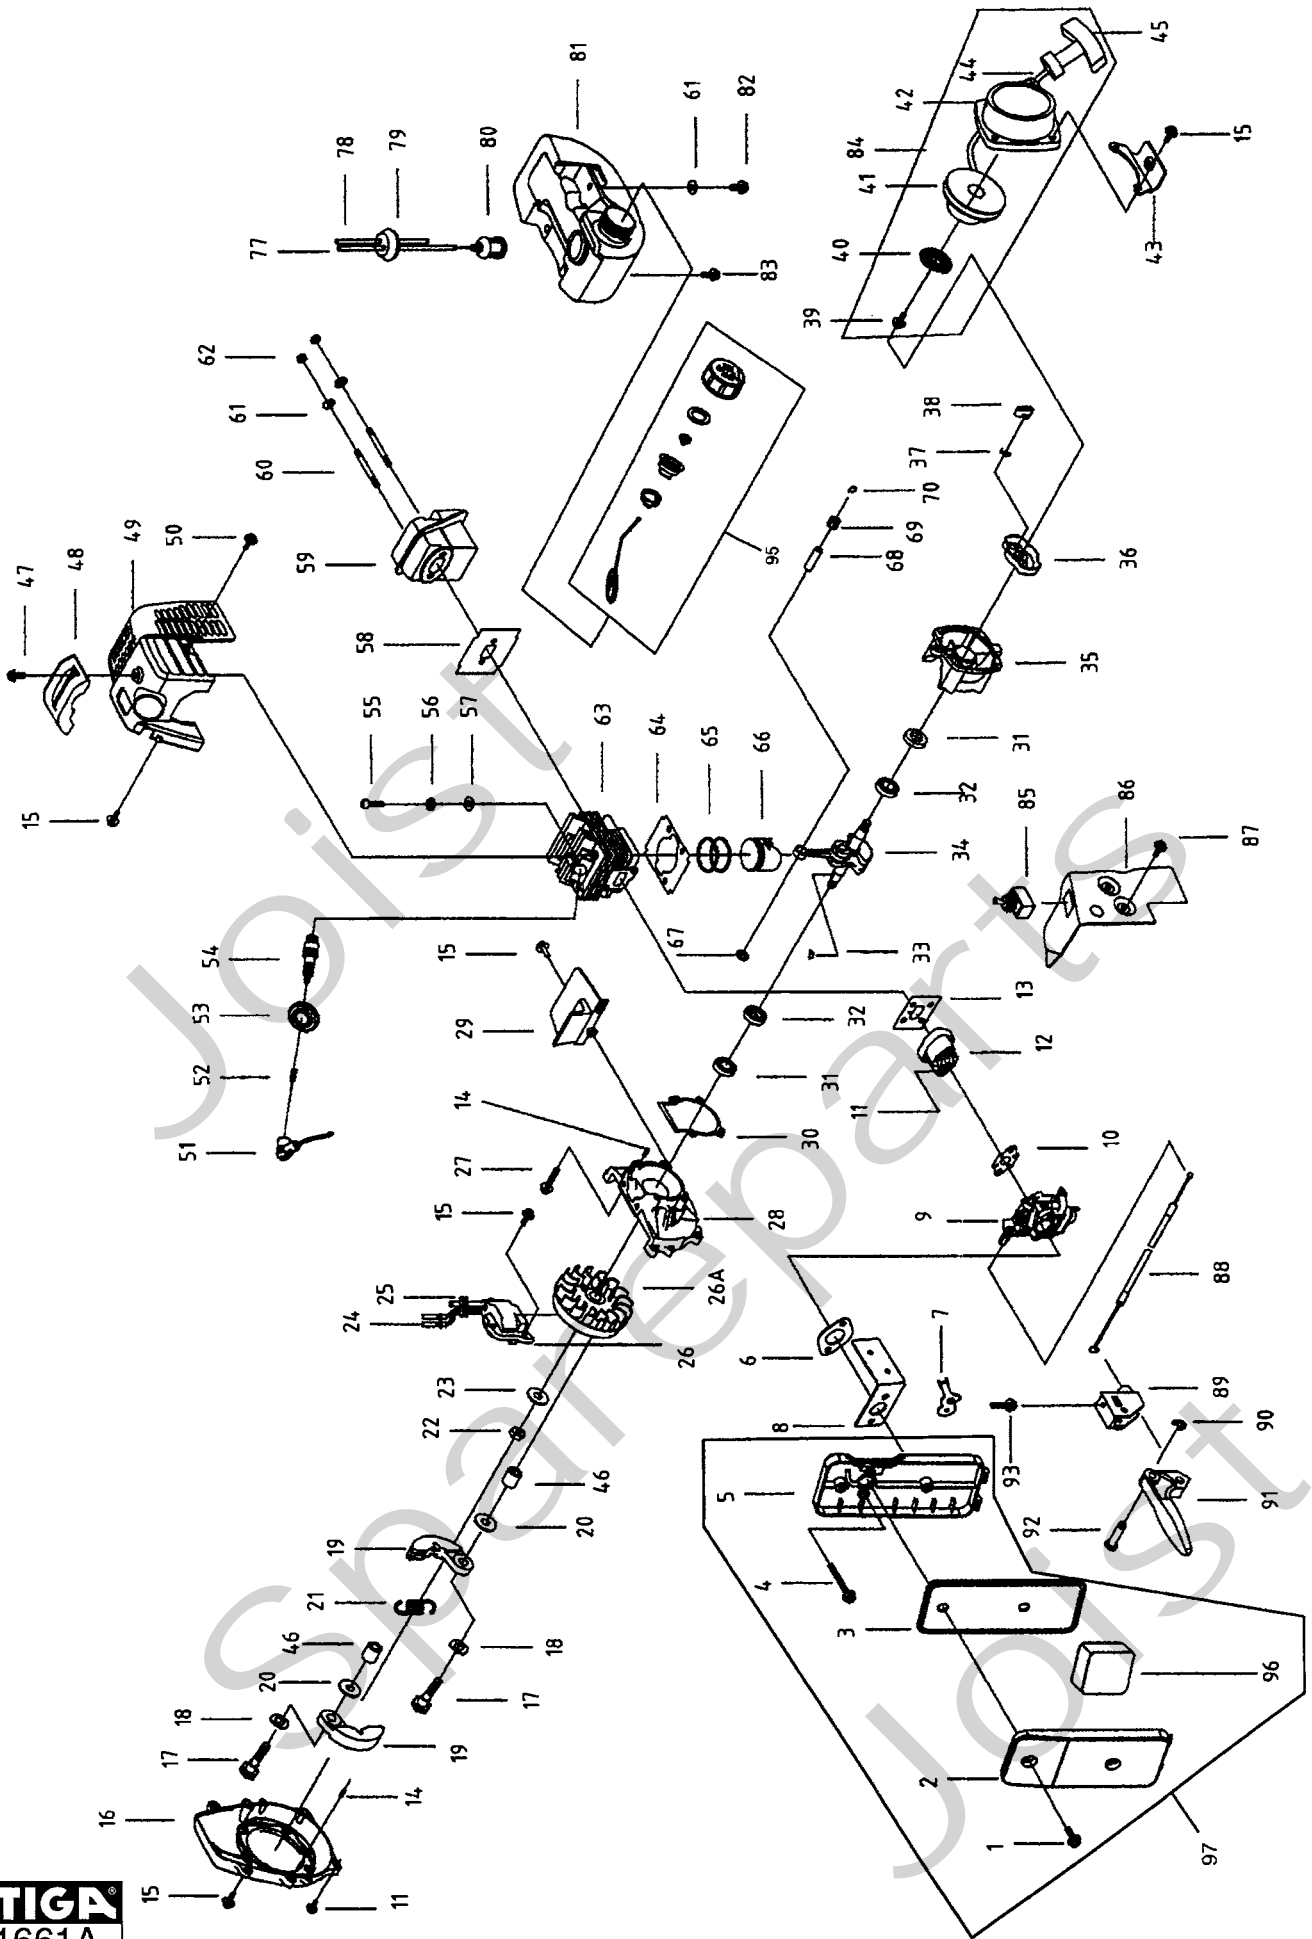

Utgåva Issue		Bildnr Picture No		JB 240 MOTOR		JB 240 ENGINE		Sida Page	
2006- 12		1661A						204	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2224 -12								
64	1			1482-1020-01	Packning.....	Gasket.....			
65	2			1482-1011-01	Kolvring.....	Piston ring.....			
66	1			1482-1012-01	Kolv.....	Piston.....			
67	2			1482-1007-01	Låsring.....	Stop ring.....			
68	1			1482-1009-01	Kolvbult.....	Piston pin.....			
69	1			1482-1010-01	Nållager.....	Needle bearing.....			
70	2			1482-1008-01	Låsring.....	Piston pin circlet.....			
77	1			1482-1022-01	Bränslerör.....	Outlet fuel pipe.....			
78	1			1482-1021-01	Bränslerör.....	Inlet fuel pipe.....			
79	1			1482-1048-01	Gummihylsa.....	Grommet.....			
80	1			1482-1023-01	Bränslefilter.....	Fuel filter.....			
81	1			1482-1036-01	Bränsletank.....	Fuel tank.....			
82	1			1482-1059-01	Skruv.....	Screw.....			
83	2			1482-1063-01	Skruv.....	Screw.....			
84	1			1482-0995-01	Start kpl.....	Starter assy.....		Inkl pos 39- 42, 44- 45	
85	1			1482-1025-01	Stoppknapp (metall).....	Stop button (metal).....			
85	1			1482-1025-02	Stoppknapp (plast).....	Stop button (plastic).....			
86	1			1482-1026-01	Förgasarskydd.....	Carburettor guard.....			
87	1			1482-1067-01	Skruv.....	Screw.....			
88	1			1482-1042-01	Gasreglagekabel.....	Throttle cable.....			
89	1			1482-1044-01	Fäste-gasreglage.....	Throttle control base.....			
90	1			1482-1058-01	Låsring.....	Stop ring.....			
91	1			1482-1043-01	Gasreglage.....	Thr. control handle.....			
92	1			1482-1045-01	Axel.....	Locking pin.....			
93	1			1482-1073-01	Skruv.....	Screw.....			
95	1			1482-0986-01	Tanklock kpl.....	Fuel tank cap assy.....			
96	1			1482-1078-01	• Filterelement (skum).....	• Cleaner elem. (foam).....			
97	1			1482-1075-01	Lufffilter kpl.....	Air cleaner assy.....		Inkl. pos 1- 5, 96	