



Section: TORNADO WHEEL SUSPENSION

Pos.	Quantity					Spare part No	Description	Kit	Notes	New
		2225								
		2535	2322							
	2112	2712	2727	2827						
1	4	4	4	4	9739-0831-22	Nut				
3	2	1	1	1	1111-1269-01	Wheel shaft				
4	4	2	2	2	9595-0182-00	Slotted pin				
6	4	4	4	4	1111-2057-01	Bushing				
7	4	4	4	4	1111-0497-00	Hole plate				
8		2	2	2	9699-0108-02	Washer				
10	4	4	4	4	1111-1268-01	Axle mounting				
11	4	4	4	4	1111-1337-01	Control lever				
12	4	4	4	4	9694-0001-00	Washer				
13	4	4	4	4	1111-0545-00	Shoulder bolt				
14			2	2	1111-0797-01	Engaging plate				
15			2	2	1111-0794-02	Wheel bush				
16			2	2	1111-1903-01	Wheel				
17			2	2	1111-0794-01	Wheel bush				
20	1	1	1		1111-9042-01	Wheel lock kit				
20	4	4	4	4	9675-0017-02	.Lock washer				
21			4	4	1111-9033-01	Hub caps				
22		2			1111-1271-02	Front wheel w.bushi				
23		1			1111-1274-02	.Traction wheel pla				
24	4	4			1111-1181-01	Hub cap				
25			2	2	1111-0466-00	Seal grease				
26			2	2	1111-0023-00	Spacer washer				
27			4	4	9549-0015-00	Ball bearing				
30			2	2	1111-0817-04	Wheel w/o bearing				
31	4	2	4	4	9699-0069-02	Flat washer				
32	4	2			1111-1180-03	Wheel cover				
35	4	2			1111-1138-01	Spring				
40	4	2			1111-2665-01	Wheel assy				
41	1	1			1111-9047-01	.Ball bearing kit				
42	2	2			1111-1184-01	..Bearing cone				
50		1	1	1	1111-2030-01	Transmission assy				
51		2	2	2	1111-2382-02	Pin				
55		1	1	1	1111-9053-01	Drive belt				
56		1		1	1151-0589-02	Blade holder				
56		1	1		1111-2433-01	Engine belt pulley				
57		1	1	1	9600-0014-00	Key				
58		1	1		9907-0610-16	Screw		2225, 2712		
60		1	1		1111-2033-01	Protection cover		2225, 2712		
62		2	2		1111-2111-01	Guard		2225, 2712		
64		1	1	1	1111-1955-01	Support kit				
65		6	6	2	9942-0512-16	Screw		2535 - 2 st		
66		1	1		9699-0100-02	Washer		2225, 2712		
70		1	1	1	1111-1666-01	Transm. cover-yello				
70		1			1111-1666-02	Transm. cover-black				
71		2	2	2	9848-8013-16	Screw				
74		1	1	1	1111-2034-01	Spring				
75		1	1	1	1111-1993-04	Control wire				