



## Section: 828, 1232 AUGER ASSY

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	1817	1822					
1	14	14	9795-3631-02	Nut			
2	14	14	9683-0030-02	Lock washer			
3	14	14	9699-0028-02	Flat washer			
4	7	7	9899-3622-16	Screw			
5	6	6	1812-0388-01	Screw			
6	6	6	1812-0389-01	Locking nut			
7	3	3	1812-0423-01	Holder			
8	1	1	1812-0255-01	Flange			
9	1	1	1812-0231-01	Chute protection			
10	2	2	1812-1143-01	Push nut			
11	1		1812-0551-01	Auger housing			
11		1	1812-0552-01	Augerhousing			
12	4	4	1812-0387-01	Screw			
13	2	2	1812-0831-01	Height adjustor			
14	1	1	9743-3521-32	Nut			
15	1	1	1812-0883-01	Bearing			
16	1	1	1812-0626-01	Key			
17		1	1812-0419-01	Scraper bar			
17	1		1812-0206-01	Scraper bar			
18	1	1	9988-3625-16	Screw			
19	1	1	1812-0663-01	Gear box brace			
20		1	1812-0239-01	Gear box assy			
20	1		1812-0243-01	Gear box assy			
21		1	1812-0650-01	Auger-L.H.			
21	1		1812-0654-01	Auger-L.H.			
22		1	1812-0651-01	Auger-R.H.			
22	1		1812-0655-01	Auger-R.H.			
23	1	1	1812-9006-01	Shear bolt kit			
26	2	2	1812-0274-01	Grease fitting			
27	2	2	1812-0347-01	Bearing			
28	2	2	1812-0301-01	Spacer			
29	2	2	1812-0640-01	Spacer			
30	2	2	9988-3619-16	Screw			
31	1	1	1812-0308-01	Pulley		8.4"	
32	1	1	1812-0315-01	Clean out stick		Tyskland	
33	2	2	1812-0316-01	Clamp			
34	2	2	1812-0728-01	Bolt			
35	4	4	9899-3632-12	Screw			
36	4	4	1812-0730-01	Spacer			
44	1	1	9988-3525-16	Screw			