



## Section: 828, 1232 AUGER GEAR BOX

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
------	----------	---------------	-------------	-----	-------	-----

1817 1822

0	1		1812-0243-01		Gear box assy	
0	1		1812-0239-01		Gear box assy	
1	2	2	1812-0344-01		..Ring	
2	1	1	1812-0227-01		..Gear case-LH	
3	2	2	1812-0343-01		..Bearing	
4	1	1	1812-0227-01		Gear case-LH	Inkl.pos 1,2,3
5	2	2	1812-0345-01		..Washer	
6	1	1	1812-0409-01		..Woodruffkey	
7	1	1	1812-0335-01		..Worm gear	
8	1	1	1812-0226-01		..Gasket	
9	1	1	1812-0228-01		..Gear case-RH	Inkl.pos 1,3,25
10		1	1812-0238-01		..Shaft	
10	1		1812-0242-01		..Shaft	
11	1	1	9987-5145-12		..Screw	
12	1	1	1812-0341-01		..Ring	
13	1	1	1812-0340-01		..Bearing	
14	1	1	1812-0339-01		..Washer	
15	1	1	1812-0338-01		..Needle bearing	
16	1	1	1812-0337-01		..Washer	
17	1	1	1812-0307-01		..Key	
18	1	1	1812-0336-01		..Gear	
19	1	1	1812-0284-01		..Washer	
20	1	1	1812-0286-01		..Retainer ring	
21	1	1	1812-0297-01		..Bearing	
22	1	1	1812-0346-01		..Oil plug	
23	1	1	1812-0237-01		..Impeller shaft	
24	1	1	1812-0426-01		..Fan	
25	1	1	1812-0228-01		..Gear case-RH	
26	7	7	9987-5125-16		..Screw	
27	8	8	9743-5121-02		..Nut	
28	2	2	9988-3557-12		..Screw	
29	2	2	9699-0026-02		..Flat washer	
30	2	2	9743-3521-32		..Nut	