



## Section: 1642H-TRM107 ENGINE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	8119	8131				
1	1	1	1132-0262-01		Fuel tank pad	
2	1	1	1132-0825-01		Fuel tank gauge	
3	1	1	1132-0850-01		Fuel tank	
4	1	1	1132-0542-01		Fuel line	
5	2	2	1132-0475-01		Hose clamp	
6	1	1	1132-0658-01		Heat shield-R.H.	
7	1	1	1132-0657-01		Heat shield-L.H.	
8	2	2	1132-0712-01		Knob	
9	1	1	1132-0810-01		Throttle control	
10	1	1	1132-0809-01		Choke control	
11	8	8	1811-0138-01		Screw	
12	4	4	1811-0191-01		Nut	
13	1	1	1132-0549-01		Heat shield	
14	1	1	1132-0111-01		Fuel filter	
15	1	1	1132-0659-01		Heat shield	
17	4	4	9795-3631-02		Nut	
18	4	4	9683-0030-02		Lock washer	
19	1	1	1132-0129-01		Sealing strip	
20	5	5	1811-0350-01		Cableholder	
21	2	2	1132-0336-01		J-clip	
22	3	3	1132-0278-01		Cable hanger	
23	1	1	1132-0220-01		Elbow	
24	1	1	1132-0222-01		Pipe nipple	
25	1	1	1132-0221-01		Street elbow	
26	1	1	1132-0267-01		Special washer	
27	1	1	9683-0045-02		Washer	
28	1	1	1132-0680-01		Exhaust pipe	
29	1	1	1132-0266-01		Screw	
30	5	5	1132-0033-01		Nut	
31	1	1	1132-0660-01		Trim	
32	4	4	1811-0170-01		Screw	
33	1	1	9988-3651-12		Screw	51 mm
34	3	3	9988-3638-12		Screw	38 mm
35	1	1	1132-0360-01		Key	
36		1	1132-0191-01		Sheave	
36	1		1132-0296-01		Sheave	
37	1	1	1132-0685-01		Electric clutch	
38	1	1	1132-0679-01		Clutch retainer	
39	1	1	9699-0028-02		Flat washer	
40	1	1	9678-0009-02		Lock washer	
45	4	4	1132-0488-01		Screw	
56	4	4	1132-0689-01		Screw	
57	2	2	9727-3541-22		Nut	