



## Section: VILLA STEERING SEAT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2812	2816				
	2832	2836				
		2858				
1	1	1	1134-1967-01	Steering wheel+colu		
2	1	1	9595-0262-00	.Locating pin		
3	1	1	9699-0103-02	.Flat washer	0.5 mm	
3	1	1	9699-0114-02	.Flat washer	1.0 mm	
4	1	1	9595-0262-00	Locating pin		
5	1	1	1134-1424-01	Steering column		
6	2	2	1134-1901-01	Bearing		
8	1	1	1134-1933-01	Steering pulley		
9	4	4	1134-0041-01	Bushing		
10	4	4	1134-9025-01	Steering pulley-kit		
11	4	4	1134-3022-01	Cable holder		
12	4	4	9942-1030-16	Screw		
13	1	1	1134-9023-01	Steering wire		
14	1	1	9747-0831-02	Lock nut		
15	1	1	9699-0090-02	Flat washer		
16	1	1	1134-1310-01	Compression spring		
17	5	5	9959-0816-16	Screw		
18	8	8	9739-0831-22	Nut		
19	2	2	1134-9024-01	Bearing		
20	1	1	1134-0341-01	Washer		
21	1	1	9650-0020-04	Circlip		
22	4	4	9799-0831-02	Nut		
23	1	1	1134-1500-01	Steering pulley		
24	4	4	9570-0002-00	Elbow link		
25	2	2	1134-1427-01	Tie rod		
30	1	1	9959-0825-16	Screw		
32	1	1	1134-0022-00	Control rod		
33	2	2	9672-0004-02	Lock washer		
34	1	1	1134-2163-01	Rod		
35	1	1	1134-2166-01	Spacer		
42	1	1	1134-3252-02	Seat bracket-yellow		
43	1	1	1134-2846-01	Tube		
44	1	1	1134-1883-01	Axle		
45	1	1	1134-0015-00	Seat spring		
48	1	1	1134-1652-01	Spring shackle		
49	1	1	1134-0050-00	Seat rod		
50	1	1	1134-0493-00	Spring nut		
52	2	2	1134-1650-01	Tie bar		
53	4	4	9675-0017-02	Lock washer		
54	2	2	1134-2961-01	Seat adapter		
55	2	2	9898-0820-16	Screw		
56	4	4	9988-3616-16	Screw		
57	2	2	9699-0062-02	Flat washer		
58	2	2	1134-1711-01	Knob		
63	1	1	1134-3618-01	Seat bracket-R.H.		
64	1	1	1134-3618-02	Seat bracket-L.H.		
65	1	1	1134-0800-06	Seat		
65			1134-2541-01	Seat	Tyskland	
67	1	1	1134-2454-01	Shaft		
68	2	2	9672-0006-02	Lock washer		
69	1	1	1134-2847-01	Shaft		