



Section: TORNADO WHEEL SUSPENSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New	
	2125	2225	2322				
	2428	2525	2727	2827			
1	4	4	4	4	9739-0831-22	Nut	
3	2	1	1	1	1111-1269-01	Wheel shaft	
4	4	2	2	2	9595-0182-00	Slotted pin	
6	4	4	4	4	1111-2057-01	Bushing	
7	4	4	4	4	1111-0497-00	Hole plate	
8		2	2	2	9699-0108-02	Washer	
10	4	4	4	4	1111-1268-01	Axle mounting	
11	4	4	4	4	1111-1337-01	Control lever	
12	4	4	4	4	9694-0001-00	Washer	
13	4	4	4	4	1111-0545-00	Shoulder bolt	
14			2	2	1111-0797-01	Engaging plate	
15			2	2	1111-0794-02	Wheel bush	
16			2	2	1111-1903-01	Wheel	
17			2	2	1111-0794-01	Wheel bush	
20	1	1	1		1111-9042-01	Wheel lock kit	
20	4	4	4	4	9675-0017-02	.Lock washer	
21	4		4	4	1111-9033-01	Hub caps	2428
22		2			1111-1271-02	Front wheel w.bushi	
23		1			1111-1274-02	Traction wheel plat	
24	4	4			1111-1181-01	Hub cap	2125
25	4		2	2	1111-0466-00	Seal grease	2428
26	4		2	2	1111-0023-00	Spacer washer	2428
27	8		4	4	9549-0015-00	Ball bearing	2428
30	4		2	2	1111-0817-04	Wheel w/o bearing	2428
31	4	2	2	2	9699-0069-02	Flat washer	
32	4	2			1111-1180-03	Wheel cover	2125
35	4	2			1111-1138-01	Spring	2125
40	4	2			1111-2665-01	Wheel assy	2125
41	1	1			1111-9047-01	.Ball bearing kit	2125
42	2	2			1111-1184-01	..Bearing cone	2125
50		1	1	1	1111-2030-01	Transmission assy	
51		2	2	2	1111-2382-02	Pin	
55		1	1	1	1111-9053-01	Drive belt	
56		1	1	1	1111-2433-01	Engine belt pulley	
57		1	1	1	9600-0014-00	Key	
58		1	1	1	9907-0610-16	Screw	
60		1	1	1	1111-2033-01	Protection cover	
64		1	1	1	1111-1955-01	Support kit	
65		6	6	6	9942-0512-16	Screw	
66		1	1	1	9699-0100-02	Washer	
70		1	1	1	1111-1666-01	Transm. cover-yello	
70		1	1	1	1111-1666-02	Transm. cover-black	
71		2	2	2	9848-8013-16	Screw	
74		1	1	1	1111-2034-01	Spring	
75		1	1	1	1111-1993-06	Clutch cable	