



## Section: JB 50 TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1115					
10	1	1482-9001-01	V-belt			
11	1	1482-0016-02	Pulley			
12	2	9915-0810-15	.Set screw			
13	1	9600-0016-00	Key			
14	1	1482-0483-01	Chain case assy			
15	2	1482-0458-01	.Seal			
16	1	1482-0474-01	.Axle w chain wheel			
17	2	1482-0459-01	.Lock ring			
18	2	9549-0017-00	.Ball bearing			
20	1	9594-0055-00	.Locating pin			
21	1	9594-0015-00	.Locating pin			
22	1	1482-0475-01	.Spacer-short			
23	1	1482-0478-01	.Spacer-long			
25	1	9589-0004-00	.Chain			
25	1	1482-0476-01	.Chain lock			
26	1	1482-0477-01	.Chain lock			
26	1	9589-0005-00	.Chain			
30	2	1482-0473-01	.Needle bearing			
31	1	9589-1002-00	.Sprocket			
32	1	1482-0452-01	.Spacer			
33	1	9660-0200-00	.Spacer			
34	1	9939-0860-12	.Screw			
35	2	9699-0028-02	.Flat washer			
36	1	9747-0831-02	.Lock nut			
37	1	1482-0456-01	.Washer			
40	2	1482-0485-01	.Needle bearing			
41	1	9915-1020-15	.Screw			
42	1	9589-1003-00	.Sprocket			
44	2	1482-0214-01	.Oil-seal			
45	1	1482-0048-01	.Shaft			
61	1	1482-0480-01	.Oil drain plug			
62	1	1482-0479-01	.Gasket			
63	1	1482-0216-01	Oil spreader			
64	1	1482-0308-01	Cover			
65	1	1482-0248-01	Plastic plug			
66	2	9997-0620-16	Screw			
80	2	1482-0052-01	Spacer			
87	4	9997-0875-12	Screw			
88	4	9677-0009-02	Lock washer			
89	4	9799-0831-02	Nut			
96	1	9987-5116-16	Screw			
97	2	9677-0009-02	Lock washer			
98	1	1482-0315-01	Belt guide			
100	1	1482-0020-00	Pulley			
101	2	9915-0808-15	.Set screw			
102	1	1482-0040-01	Key			
103	1	9847-8016-16	Screw			
104	1	1482-0143-00	Spring			
105	1	1482-0300-01	Belt tensioner			
114	1	9987-5145-12	Screw			
202	1	1482-0289-01	Sleeve			
219	2	9677-0006-02	Lock washer			
220	1	9699-0090-02	Flat washer			
221	1	1482-0250-01	Spring			
435	1	1482-0453-02	Plate			
999	1	1482-0536-01	Gear case oil (0.5		Texaco Multifak	