



Section: TURBO 46-460S WHEEL SUSPENSION

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	6225	6425	6518				
1	1	1	1	1111-2146-01		Front axle	
2	2	2	2	1111-1067-02		.Bushing	
3	2	2	2	1111-1706-01		Clamp	
4	4	4	4	9943-0512-16		Screw	
5	1	1	1	1111-2148-01		Rear axle	
6	2	2	2	1111-1072-01		Clamp rear	
7	1	1	1	1111-2445-01		Grip	
8	1	1	1	1111-1074-01		Spring-height adjus	
9	1	1	1	1111-2444-02		Lever	
10	1	1	1	9997-0612-16		Screw	
11	1	1	1	9739-0631-22		Nut	
12	1	1	1	1111-1068-01		Tension rod	
13	2	2	2	9675-0008-02		Locking washer	
14	1	1	1	9836-9530-12		Screw	
15	4	4	4	9997-0612-16		Screw	
16		4	4	9699-0037-02		Washer	
17	2	4	2	1111-1180-03		Wheel cover	
18	4	4	4	1111-1138-01		Spring	
19	2		2	1111-1180-04		Wheel cover	
20	4	4	4	1111-2665-01		Wheel assy	
21	1	1	1	1111-9047-01		.Ball bearing kit	
21A	2	2	2	1111-1184-01		..Bearing cone	
22	4	4	4	9699-0100-02		Washer	
23	4	4	4	1111-1181-01		Hub cap	
24	2	2	2	1111-1638-01		Washer	
25	2	2	2	1111-1016-01		Locking handle	
26	2	2	2	9595-0235-00		Locating pin	
27	2	2	2	1111-1087-02		Tensioning rod	
28	2	2	2	9739-0831-22		Nut	
29	4	4	4	9942-0816-16		Screw	
30	2	2	2	1111-1078-01		Handle attachment	
31	2	2	2	1111-1019-01		Adjusting plate	
32	2	2	2	9997-0816-16		Screw	
33	2	2	2	9747-0831-02		Lock nut	
34	2	2	2	1111-0035-01		.Locking knob	
35	2	2	2	1111-0178-00		.Reinforcement	
36	2	2	2	9699-0025-02		.Washer	
37	2	2	2	9899-3551-12		.Screw	
38	1	1	1	1111-2018-01		Cable holder	
39	1	1	1	9836-9216-12		Screw	
40	1	1	1	1111-1076-01		Handle-lower part	
41	1	1	1	1111-2003-01		Handlebar	
44	1			1111-1413-02		Side guard-L.H.	
44	1			1111-1414-02		Side guard-R.H.	
48	1	1	1	1111-2365-02		Gas control	
72	2		2	9594-0009-00		.Locating pin	
73	2		2	1111-1456-01		Washer	
75	1		1	1111-2010-01		Attachment plate	
76	1		1	9849-7909-16		Screw	
77	1		1	1111-1197-02		Clutch cable	
78	1		1	9739-0631-22		Nut	
79	1		1	1482-0160-01		Spring	
80	1		1	1111-1998-01		Control handle	
81	2	2	2	9948-0645-16		Screw	
82	2		2	9799-0631-02		Nut	
82		2		9747-0631-02		Lock nut	