



## Section: PARK 10-12-12HST ENGINE BRAKE SYSTEM

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	1118	1258	1358				
1	3	3	3	9997-0835-12	Screw		
2	1			9997-0865-12	Screw		
2		1	1	9997-0870-16	Screw		
3	1	1	1	9600-0250-00	Key		
4	9	8	8	9739-0831-22	Nut		
5	1	1	1	1134-0433-00	Muffler gasket		
6	1	1		1134-2013-01	Exhaust pipe		
6			1	1134-2718-01	Exhaust pipe		
7	2	2		1134-0345-00	Spacer for silencer		
7			2	1134-1565-01	Spacer		
8	1	1	1	1134-2462-01	Lock		
9	2	2		9988-3632-12	Screw		
9			2	9988-3651-12	Screw		
10	1	1	1	1134-2733-01	Heat protection		
11	1			9997-0850-16	Screw		
12	2	2	2	9942-0612-16	Screw		
13	1	1		1134-3243-01	Silencer		
13			1	1134-3244-01	Silencer		
14	1	1	1	9578-0011-00	Clamp		
15	2	2	2	9799-0831-02	.Nut		
16	1	1	1	1134-2212-01	Oil drain pipe assy		
17	1	1	1	9404-0020-00	.O-ring		
18	1	1	1	1134-0995-01	.Plug		
19	1	1	1	1134-0997-01	.Fibre gasket		
22	1	1	1	1134-2941-01	Protection strip		
23	1	1	1	1134-2886-01	Fuel tank		
24	1	1	1	1134-2877-02	Fuel tank cap		
25	1	1	1	9997-0812-02	Screw		
26	1	1	1	9747-0831-02	Lock nut		
27	1	1		1134-2170-02	Brake pedal (R. H.)		
27			1	1134-3450-01	Brake pedal (L. H.)		
28	1	1	1	1134-9024-01	.Bearing		
30	1	1	1	1134-1975-11	Gas control		
31	1	1	1	9403-0035-10	Handle		
32	2	2	2	9849-8013-16	Screw		
33	3	3	3	9959-0820-16	Screw		
34	1	1	1	1134-0245-00	Shoulder screw		
36	1	1		1134-2151-01	Stop		
36			1	1134-2151-02	Stop		
37	1	1	1	1134-1184-02	Bracket		
38	1	1	1	9646-0036-22	Rivet		
39	1	1	1	9675-0008-02	Locking washer		
40	1	1		1134-3573-02	Brake cable		
40			1	1134-2030-10	Brake cable		
44	1			1134-3280-01	Spring		
44		1	1	1134-1242-02	Spring		
45	1	1	1	1131-1506-00	Spring		
46	1	1		1134-2045-01	Brake stop		
47	1	2		9942-0820-16	Screw		
52	1	1	1	1134-2998-01	Hose clamp		
53	1	1	1	1131-1497-01	Spring		
54	1	1	1	1134-2975-02	Fuel hose	140 mm	
57	3	3	3	9578-0016-00	Clamp		
58	1	1	1	1134-0269-00	Pedal rubber		
59	1	1	1	1134-3223-01	Fuel shut-off		
60	1	1	1	1134-2975-03	Fuel hose	40 mm	
61	1			9959-0816-16	Screw		