



Section: 524-827-827T-1030 AUGER GEAR BOX

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
		2825	2834	2835	2841		
0	1	1		1812-1278-01		Gear box assy	
0			1	1812-1301-01		Gear box assy	
0	1			1812-1277-01		Gear box assy	
1	2	2	2	1812-0344-01		.Ring	
3	2	2	2	1812-0343-01		.Bearing	
4	1	1	1	1812-0227-01		Gear case-LH	Inkl.pos. 1,2,3
5	2	2	2	1812-0345-01		.Washer	
6	1	1	1	1812-0409-01		.Woodruffkey	
7	1	1	1	1812-0335-01		.Worm gear	
8	1	1	1	1812-0226-01		.Gasket	
9	1	1	1	1812-0228-01		Gear case-RH	Inkl.pos. 1,3,25
10	1			1812-1181-01		Auger shaft	
10			1	1812-1251-01		Auger shaft	
10		1	1	1812-1276-01		Auger shaft	
11	1	1	1	9987-5145-12		.Screw	
12	1	1	1	1812-0341-01		.Ring	
13	1	1	1	1812-1259-01		.Flange bearing	
14	1	1	1	1812-1167-01		.Key	
15	1	1	1	1812-0285-01		.Needle bearing	
16	2	2	2	1812-0857-01		.Thrust washer	
17	1	1	1	1812-0307-01		.Key	
18	1	1	1	1812-0336-01		.Gear	
19			2	9699-0026-02		.Flat washer	
20			2	1812-0812-01		.Locking nut	
21	1	1	1	1812-0297-01		.Bearing	
22	1	1	1	1812-0346-01		.Oil plug	
23			1	1812-1295-01		.Impeller shaft	
24			1	1812-0426-01		.Fan	
24	1	1	1	1812-1264-01		.Impeller	
26	7	7	7	9987-5125-16		.Screw	
27	8	8	8	9743-5121-02		.Nut	
28			2	9988-3557-12		.Screw	