



Section: JB51-J51-JB921 ENGINE BELT TENSIONER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1113					
	1312	1129				
1	4	4	9997-0845-12	Screw		
2	4	4	9683-0030-02	Lock washer		
3	4	4	9699-0028-02	Flat washer		
3	2	2	9915-0808-15	Set screw		
4	4	4	9799-0831-02	Nut		
9		1	1482-0582-01	Engine hood		
10		1	1482-0576-01	Wing nut		
11		1	1482-0641-01	Console		
12		1	9699-0028-02	Flat washer		
13		1	9942-0620-16	Screw		
14	1	1	1482-0648-01	Heat shield		
15	1	1	1482-0306-01	Belt tensioner assy		
16	1	1	9799-1031-02	.Nut		
17	1	1	9683-0040-02	.Lock washer		
19	1	1	1482-0596-01	.Spacer		
20	1	1	1482-0550-01	.Tension roller-rev		
21	1	1	9997-1025-16	.Screw		
22	1	1	1482-0307-02	.Spring		
23	1	1	9699-0035-02	.Flat washer		
24	1	1	9650-0010-04	.Lock ring		
25	1	1	1482-0643-01	Belt guide		
26	2	2	9915-0606-15	Set screw		
27		1	1482-0437-01	Pulley		
27	1		1482-0644-01	Pulley-reverse		
28	1	1	9600-0053-00	Key		
29	1	1	1482-0681-01	Guide-inner		
30	1	1	1482-0680-01	Guide-outer		
31	1	1	1482-0680-01	Guide-outer		
33	2	2	9915-0808-15	Set screw		
34		1	1482-0564-01	Engine belt pulley		
34	1		1482-0488-01	Belt pulley		
35	1	1	1482-0040-01	Key		
36	1	1	9997-0635-12	Screw		
37	1	1	1482-0557-01	Mounting plate		
39	1	1	9799-0631-02	Nut		
40	1	1	9683-0025-02	Lock washer		
41	2	2	9683-0030-02	Lock washer		
42	2	2	9987-5116-16	Screw		
43	1	1	9898-0625-16	Screw		
44	1	1	1482-0545-01	Console		
45	1	1	9699-0028-02	Flat washer		
46	1	1	9683-0025-02	Lock washer		
47	1	1	9747-0631-02	Lock nut		
48	1	1	9699-0028-02	Flat washer		
49	1	1	9683-0030-02	Lock washer		
50	1	1	9997-0816-16	Screw		
51	1	1	1482-0561-01	Belt tensioner assy		
52	1	1	1482-0559-01	.Spring		
54	1	1	9650-0016-04	.Lock ring		
55	1	1	1482-0553-01	.Bushing		
56	1	1	1482-0552-01	.Bushing		
57	1	1	1482-0551-01	.Tension roller		
58	1	1	9683-0040-02	.Lock washer		
59	1	1	9683-0040-02	.Lock washer		
60	1	1	9997-1025-16	.Screw		