



Section: PRO 511S TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
		8724				
	8718	8824				
1	2	2	1111-2108-01		Cover plate	
2	2	2	1111-2141-01		Cover plate	
4	2	2	1111-2109-01		Gear ring	
6	4	4	9699-0025-02		Washer	
7	4	4	9943-0610-16		Screw	
8	8	8	9841-0410-16		Screw	
9	2	2	1111-2247-01		Wheel w/o bearing	
10	2	2	1111-2248-01		Wheel w/o bearing	
11	8	8	9549-0001-00		Ball bearing	
12	6	6	9699-0100-02		Washer	
13	4	4	1111-2183-01		Spring	
14	6	6	9943-0612-16		Screw	
15	4	4	1111-2077-01		Hub cap	
16	2	2	1111-2337-01		Bearing	
17	2	2	9699-0069-02		Flat washer	
18	2	2	1111-2083-01		Gear wheel	
19	4	4	9699-0037-02		Washer	
20	1	1	1111-2079-01		Front axle	
21	2	2	1111-2076-01		Clamp	
22	4	4	9943-0612-16		Screw	
24	2	2	9675-0012-02		Locking washer	
25	1	1	1111-2459-01		Tension rod	
26	1	1	1111-2139-01		Rear axle	
27	1	1	1111-1842-01		Spring	
28	1	1	1111-1844-01		Holder	
29	1	1	9943-0510-16		Screw	
36	1	1	1111-1839-01		Lever	
37	1	1	9403-0036-70		Lever knob	
38	1	1	1111-1519-02		Spacer	
39	1	1	9997-0830-16		Screw	
42	1	1	9739-0831-22		Nut	
56	1	1	9799-0831-02		Nut	
57	1	1	9997-0616-16		Screw	
58	1	1	9699-0060-02		Flat washer	
59	1	1	1111-2081-01		Belt pulley	
60	1	1	9600-0007-00		Key	
61	1	1	9595-0208-00		Locating pin	
62	1	1	1111-2097-01		Shaft	
63	2	2	1111-2382-01		Pin	
70	2	2	9942-0616-16		Screw	
71	1	1	1111-2128-01		Console	
75	1	1	1111-2692-01		Transmission cover	
76	2	2	9943-0530-16		Screw	
77		1	9944-0510-16		Screw	
80	1	1	1111-1993-05		Clutch cable	
81	1	1	1111-9052-01		Drive belt	
82	1	1	1111-2433-02		Belt pulley	25 mm
83	1	1	9915-0612-15		Screw	
91	1	1	1111-2130-01		Transmission assy	
92	1	1	9695-0004-00		Washer	