



## Section: JB30-J30-JB51-J51 BELT PULLEY

| Pos. | Quantity  | Spare part No | Description  | Kit | Notes               | New           |
|------|-----------|---------------|--------------|-----|---------------------|---------------|
|      | 1112 1113 |               |              |     |                     |               |
|      | 1311 1312 |               |              |     |                     |               |
| 300  | 1         | 1             | 1482-0041-00 |     | Cotter bolt         |               |
| 301  | 1         | 1             | 9799-0631-02 |     | Nut                 |               |
| 302  | 1         | 1             | 1482-0666-01 |     | Depth skid          |               |
| 303  | 1         | 1             | 9997-0635-12 |     | Screw               |               |
| 304  | 1         | 1             | 9598-0002-02 |     | Pin lock            |               |
| 305  | 2         | 2             | 9915-0808-15 |     | Set screw           |               |
| 306  |           | 1             | 1482-0670-01 |     | Belt pulley         |               |
| 306  | 1         |               | 1482-0687-01 |     | Belt pulley         |               |
| 307  |           | 1             | 9585-0042-00 |     | V-belt, reverse     |               |
| 308  | 1         | 1             | 9600-0016-00 |     | Key                 |               |
| 309  | 1         | 1             | 1482-9001-01 |     | V-belt              | =9585-0019-00 |
| 310  | 2         | 2             | 9799-0631-02 |     | Nut                 |               |
| 311  | 2         | 2             | 9683-0025-02 |     | Lock washer         |               |
| 312  | 1         | 1             | 1482-0662-01 |     | Side member-R.H.,ye |               |
| 312  | 1         | 1             | 1482-0662-02 |     | Side member-R.H.,gr |               |
| 313  | 2         | 2             | 1482-0501-01 |     | Spacer              |               |
| 314  | 1         | 1             | 1482-0663-01 |     | Side member-L.H.,ye |               |
| 314  | 1         | 1             | 1482-0663-02 |     | Side member-L.H.,gr |               |
| 315  | 2         | 2             | 9997-0635-12 |     | Screw               |               |
| 316  |           | 1             | 1482-0683-01 |     | Belt guard          |               |
| 316  | 1         |               | 1482-0682-01 |     | Belt guard          |               |
| 317  | 2         | 2             | 1482-0580-01 |     | Rubber loop         |               |
| 319  | 1         | 1             | 9699-0025-02 |     | Washer              |               |
| 320  | 1         | 1             | 9799-0631-02 |     | Nut                 |               |
| 321  | 1         | 1             | 1482-0674-01 |     | Nut guard           |               |
| 322  | 3         | 3             | 9865-0512-16 |     | Screw               |               |
| 323  | 1         | 1             | 1482-0638-01 |     | Outer sheet-R.H.    |               |
| 324  | 3         | 3             | 9739-0531-22 |     | Nut                 |               |
| 325  | 1         | 1             | 1482-0665-01 |     | Rotor guard-yellow  |               |
| 325  | 1         | 1             | 1482-0665-02 |     | Rotor guard-grey    |               |
| 326  | 2         | 2             | 9997-0616-16 |     | Screw               |               |
| 327  | 2         | 2             | 9699-0025-02 |     | Washer              |               |
| 330  | 2         | 2             | 9683-0025-02 |     | Lock washer         |               |
| 331  | 2         | 2             | 9799-0631-02 |     | Nut                 |               |
| 332  | 1         | 1             | 1482-0672-01 |     | Torx spanner        |               |
| 333  | 3         | 3             | 9865-0512-16 |     | Screw               |               |
| 334  | 1         | 1             | 1482-0639-01 |     | Outer sheet-L.H.    |               |
| 335  | 3         | 3             | 9739-0531-22 |     | Nut                 |               |