



Section: TURBO 480S-480SE HANDLEBAR

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	5211 5605	5221 5213				
	5212 5606	5223 5222				
1	1	1	1111-2805-01		Front axle	
2	2	2	1111-1504-01		Retainer	
3	2	2	9947-0616-16		Screw	
4	1	1	1111-2818-01		Height adj.rod	
5	2	2	9675-0011-00		Starlock	
6	1	1	1111-2819-01		Spring	
10	2	2	1111-1138-01		Spring	
11	2	2	1111-2784-01		Wheel assy	
12	1	1	1111-9047-01		.Ball bearing kit	
13	2	2	1111-1184-01		..Bearing cone	
14	2	2	1111-2785-01		Wheel cover	
15	2	2	9699-0100-02		Washer	
16	2	2	9946-0616-16		Screw	
17	2	2	1111-2657-01		Hub cap-yellow	
17		2	1111-2657-04		Hub cap-grey	12-5606-62
18	2	2	1111-2675-01		Wheel cup-yellow	
18		2	1111-2675-04		Wheel cup-grey	12-5606-62
22	1	1	1111-2970-01		Handlebar lower par	
23	4	4	1111-0035-01		Locking knob	
24	2	2	9988-3551-12		Screw	
25	2	2	1111-0178-00		Reinforcement	
26	2	2	9699-0025-02		Washer	
30	2	2	9899-3576-12		Screw	
33	2	2	1111-2575-01		Handle holder-inner	
34	2	2	1111-2574-01		Compr.spring	
35	2	2	1111-2955-01		Hand holder	
36	2	2	9943-0612-16		Screw	
43	1	1	1111-2957-01		Handle-upper	
44	1	1	1111-3062-01		Eyelink	
45	1	1	1111-2611-03		Throttle control	
45		1	1111-2611-09		Throttle control	12-5605-12
46	2	1	9948-0645-16		Screw	45 mm
47	1	1	9948-0660-16		Screw	60 mm
48	2	2	9747-0631-02		Lock nut	
52	1	1	1111-2953-01		Control handle	
53	1	1	1111-2968-02		Engine brake cable	
54	1	1	1111-2969-01		Cable attachment	
56	1	1	1111-2018-01		Cable holder	12-5222-12, 4 st.
57	1	1	9836-9216-12		Screw	12-5222-12, 4 st.
62			9400-0218-00		Battery	
63	1	1	1111-2927-01		Battery holder	
64			9400-0219-00		Charger	
65			9838-9540-12		Screw	12-5213-12
66			1111-2020-01		Housing	12-5213-12
67			1111-2021-01		Cover	12-5213-12
68			9838-9216-12		Screw	12-5213-12
69			1111-2825-01		Harness	
70			9400-0186-00		Starting switch ass	
71			1134-2848-01		.Ignition key	
74			9838-9522-12		Screw	12-5222-12
75			1111-2705-01		Cover	12-5222-12
78			1111-2707-01		Housing	12-5222-12