



## Section: 320 AUGER CHUTE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1211					
480	1	1133-0994-01	Auger housing			
481	3	9988-3519-16	Screw			
482	3	9699-0026-02	Flat washer			
483	3	9743-3521-32	Nut			
486	1	9988-3516-16	Screw			
487	1	1133-0993-01	Stop bracket			
488	1	9699-0078-02	Washer			
489	1	9743-3521-32	Nut			
490	1	1133-0999-01	Scraper blade			
491	3	1133-0948-01	Rivet			
492	1	9988-3519-16	Screw			
493	1	9727-3541-22	Nut			
510	1	1133-0950-01	Flange bearing			
511	2	9988-3525-16	Screw			
512	2	9699-0026-02	Flat washer			
513	2	9727-3541-22	Nut			
520	1	1133-0966-01	Auger assy			
521	4	1133-0964-01	Auger blade			
522	20	1133-0940-01	Rivet			
523	2	1133-0960-01	Centre blade			
530	1	1133-0947-01	Bearing & plate			
531	1	1133-1000-01	Retainer plate			
532	2	9988-3516-16	Screw			
533	2	9699-0026-02	Flat washer			
534	2	9743-3521-32	Nut			
540	1	1133-0946-01	Spacer			
541	1	1133-0985-01	Pulley			
580	1	1133-0987-01	Chute ring			
581	4	1133-0965-01	Screw			
582	4	1133-0943-01	Chute guide			
590	1	1133-1004-01	Lower chute			
591	2	9988-3513-16	Screw			
592	2	9727-3541-22	Nut			
600	1	1133-0967-01	Upper chute			
601	1	1133-0969-01	Hinge wire			
602	1	9899-3632-12	Screw			
603	1	9699-0028-02	Flat washer			
604	1	1133-0932-01	T-knob			
605	1	9795-3631-02	Nut			
606	1	9863-3619-16	Screw			
607	1	9699-0028-02	Flat washer			
608	1	9743-3621-32	Nut			