



Section: 522-725-827E-1030E BELT TRANSMISSION

| Pos. | Quantity | | Spare part No | Description | Kit | Notes | New |
|------|----------|------|---------------|-------------|--------------|---------------------|-----|
| | | 2823 | 2831 | 2836 | 2843 | | |
| 2 | 4 | 4 | 4 | 4 | 9988-3632-16 | Screw | |
| 3 | 6 | 6 | 6 | 6 | 9683-0030-02 | Lock washer | |
| 4 | | | 1 | 1 | 1812-1299-01 | Motor mount | |
| 4 | 1 | 1 | | | 1812-1365-01 | Motor mount | |
| 5 | 1 | 1 | 1 | 1 | 1812-1228-01 | Belt cover | |
| 6 | 4 | 4 | 4 | 4 | 1812-0384-01 | Screw | |
| 7 | 3 | 3 | 3 | 3 | 9699-0026-02 | Flat washer | |
| 8 | 1 | 1 | 1 | 1 | 1812-1257-01 | Bottom panel | |
| 9 | 1 | 1 | 1 | 1 | 1812-0404-01 | Retainer | |
| 10 | 2 | 2 | 2 | 2 | 1812-0328-01 | Bushing | |
| 11 | 1 | 1 | 1 | 1 | 1812-1203-01 | Cable eye lever | |
| 12 | 1 | 1 | 1 | 1 | 1812-0401-01 | Pin | |
| 13 | 1 | 1 | 1 | 1 | 1812-1212-01 | Auger clutch cable | |
| 14 | 1 | 1 | 1 | 1 | 1812-1290-01 | Auger clutch assy | |
| 16 | 1 | 1 | 1 | 1 | 1812-1205-01 | Spool | |
| 17 | 1 | 1 | 1 | 1 | 9988-3545-12 | Screw | |
| 18 | 1 | 1 | 1 | 1 | 9743-3521-32 | Nut | |
| 19 | 2 | 2 | 2 | 2 | 1812-0533-01 | Belt guide | |
| 20 | 2 | 2 | 2 | 2 | 1812-1128-01 | Bolt | |
| 21 | 1 | 1 | 1 | 1 | 9988-3732-12 | Screw | |
| 22 | 1 | 1 | 1 | 1 | 1812-1211-01 | Idler lever | |
| 23 | 2 | 2 | 2 | 2 | 1812-0305-01 | Tension roller | |
| 24 | 2 | 2 | 2 | 2 | 9743-3721-32 | Nut | |
| 25 | 1 | 1 | 1 | 1 | 9743-3621-32 | Nut | |
| 26 | 1 | 1 | 1 | 1 | 1812-1208-01 | Idler lever bushing | |
| 27 | 1 | 1 | 1 | 1 | 9699-0062-02 | Flat washer | |
| 28 | 1 | 1 | 1 | 1 | 9988-3619-16 | Screw | |
| 29 | 2 | 2 | 2 | 2 | 1812-0329-01 | Spring | |
| 30 | 2 | 2 | 2 | 2 | 1812-1201-01 | Traction pulley | |
| 31 | 1 | 1 | 1 | 1 | 1812-1202-01 | Crankshaft washer | |
| 32 | 2 | 2 | 2 | 2 | 1812-1206-01 | Pulley spacer | |
| 33 | 1 | 1 | 1 | 1 | 1812-9016-01 | Drive belt | |
| 34 | 1 | 1 | 1 | 1 | 1812-1236-01 | Traction pulley | |
| 35 | 1 | 1 | 1 | 1 | 1812-1237-01 | Wave washer | |
| 36 | 1 | 1 | 1 | 1 | 1812-1190-01 | Flat washer | |
| 37 | 1 | 1 | 1 | 1 | 9683-0025-02 | Lock washer | |
| 38 | 1 | 1 | 1 | 1 | 9988-3516-16 | Screw | |
| 39 | 1 | 1 | 1 | 1 | 1812-1239-01 | Square key | |
| 41 | 1 | 1 | 1 | 1 | 9699-0038-02 | Flat washer | |
| 42 | 1 | 1 | 1 | 1 | 1812-1289-01 | Brake arm clutch bu | |
| 43 | 1 | 1 | 1 | 1 | 1812-0404-01 | Retainer | |
| 44 | | | | 1 | 1812-9018-01 | V-belt | |
| 44 | | 1 | | | 1812-9021-01 | Auger belt | |
| 44 | 1 | | | | 1812-9019-01 | V-belt | |
| 44 | | | 1 | | 1812-9020-01 | Drive belt | |
| 45 | 1 | 1 | 1 | 1 | 1812-1350-01 | Spacer | |
| 46 | 2 | 2 | 2 | 2 | 1812-1351-01 | Engine pulley | |
| 47 | 1 | 1 | 1 | 1 | 1812-0283-01 | Washer | |
| 48 | 1 | 1 | 1 | 1 | 9683-0035-02 | Lock washer | |
| 49 | 1 | 1 | 1 | 1 | 9987-5225-16 | Screw | |
| 56 | 2 | 2 | 2 | 2 | 1812-0385-01 | Screw | |
| 63 | 1 | 1 | 1 | 1 | 9699-0115-02 | Washer | |
| 86 | 1 | 1 | 1 | 1 | 9899-3732-16 | Screw | |
| 91 | 1 | 1 | 1 | 1 | 1812-1358-01 | Spring washer | |
| 91 | 1 | | | | 1812-1319-01 | Muffler guard | |
| 91 | | 1 | 1 | 1 | 1812-1348-01 | Muffler guard | |