



Section: 725 AUGER ASSY

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2831					
1	33	9795-3631-02	Nut			
2	33	9683-0030-02	Lock washer			
3	34	9699-0028-02	Flat washer			
4	29	9899-3622-16	Screw			
5	2	1812-0667-01	Plastic washer			
6	2	1812-1163-01	Plastic washer			
7	1	9743-3621-32	Nut			
8	1	9699-0069-02	Flat washer			
9	1	1812-0273-01	Screw			
10	1	1812-1108-01	Knob			
11	1	9988-3619-16	Screw			
12	1	1812-0662-01	Chute deflector			
13	1	1812-1161-01	Chute extension			
14	1	1812-0869-01	Side plate-R.H.			
15	1	1812-0868-01	Side plate-L.H.			
16	1	1812-1370-01	Auger housing			
17	1	1812-1379-01	Gear box assy			
19	1	1812-1374-01	Auger l.h.			
20	1	1812-1375-01	Auger r.h.			
25	2	1812-0347-01	Bearing			
26	2	1812-0397-01	Spacer			
27	1	1812-9005-01	Shear bolt kit		Inkl. pos 28,29	
28	2	1812-0531-01	Spacer			
29	2	1812-0812-01	.Locking nut			
30	3	1812-1221-01	Impeller stud			
31	2	1812-1176-01	Mounting bracket			
32	8	9988-3719-16	Screw			
33	6	9683-0035-02	Lock washer			
34	6	9795-3731-02	Nut			
35	1	9743-3721-32	Nut			
36	1	1812-1349-01	Brake arm stud			
37	1	1812-1244-01	Brake pad			
38	1	1812-0401-01	Pin			
39	1	1812-1286-01	Brake arm			
40	1	1812-1364-01	Return spring			
41	1	1812-1344-01	Jam nut			
42	1	1812-1287-01	Brake arm pivot bol			
43	1	1812-1285-01	Brake arm adj.bolt			
44	1	1812-1167-01	Key			
45	1	1812-1229-01	Ball bearing			
46	1	1812-1250-01	Retainer bearing			
47	1	9699-0038-02	Flat washer			
48	2	9743-5421-32	Nut			
49	1	1812-1261-01	Auger pulley			
50	1	1812-1265-01	Spacer impeller			
51	2	1812-0420-01	Skid			
52	4	1812-0387-01	Screw			
53	1	1812-1373-01	Scraper bar			
54	4	9988-3519-16	Screw			
55	8	9699-0026-02	Flat washer			
56	4	9743-3521-32	Nut			
57	3	9743-3621-32	Nut			
58	3	9899-3625-16	Screw			
59	1	1812-1366-01	Chute rotate ring-inn			
60	1	1812-1336-01	Chute rotate collar			
61	1	1812-1332-01	Chute rot. ring-out			