



Section: PARK 16HST-18HST ENGINE BRAKE SYSTEM

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1458	1818				
	1446	1448				
1	1	1	1134-2878-01		Fan cover	
2	4	4	9997-0512-16		Screw	
3	4	4	9699-0099-02		Washer	
4	1	1	1134-3355-01		Oil drain pipe assy	
5	1	1	1134-0997-01		.Fibre gasket	
6	1	1	1134-0995-01		.Plug	
7	1	1	9404-0020-00		.O-ring	
8	1	1	9997-0840-16		Screw	40 mm
9	2	2	9997-0840-16		Screw	40 mm
10	1	1	9997-0865-12		Screw	65 mm
11	1	1	1134-3380-01		Spacer	
12	4	4	9739-0831-22		Nut	
13	1	1	1134-3455-01		Exhaust pipe	
14	2	2	1134-2988-01		Gasket-exhaust	
15	1	1	1134-3244-01		Silencer	
15	1	1	1134-3574-01		Catalytic converter	Tillbehör/Accessory
16	1	1	9959-0816-16		Screw	
17	1	1	9739-0831-22		Nut	
18	1	1	9578-0011-00		Clamp	
19	1	1	9600-0250-00		Key	
19		1	9600-0251-00		Key	
20	1	1	9579-0003-00		Cable holder	
27	1	1	9747-0631-02		Lock nut	
28	1	1	1134-3377-01		Control rod	
29	1	1	9675-0008-02		Locking washer	
30	1	1	1134-1889-01		Eyebolt	
31	1	1	1134-1023-00		Spring	
32	2	2	1134-3456-01		Bushing	
33	1	1	9747-0631-02		Lock nut	
41	1	1	1134-3593-01		Fuel tank	
42	1	1	1134-2877-02		Fuel tank cap	
43	2	2	1134-2941-01		Protection strip	
44	1	1	9997-0812-02		Screw	
45	1	1	9747-0831-02		Lock nut	
46	1	1	1134-3224-01		Fuel shut-off valve	
47	1	1	1134-3225-01		Grommet	
48	1	1	1134-2975-04		Fuel line	L=710 mm
49	2	2	1134-3499-01		Hose clamp	
58	1	1	1134-3450-01		Brake pedal (L. H.)	
59	1	1	1134-9024-01		.Bearing	
60	1	1	1134-0269-00		Pedal rubber	
61	1	1	1131-1506-00		Spring	
62	1	1	1134-3584-01		Brake/clutch wire	
63	1	1	1134-3387-01		Attachment	
64	1	1	9959-0816-16		Screw	
65	1	1	9739-0831-22		Nut	
66	1	1	1134-1184-02		Bracket	
67	1	1	1134-2151-02		Stop	
68	1	1	1131-1497-01		Spring	
69	1	1	1134-0245-00		Shoulder screw	
70	1	1	9739-0831-22		Nut	
78	1	1	1134-1975-10		Gas control	
79	1	1	9403-0035-10		Handle	
80	2	2	9849-8013-16		Screw	
81	1	1	1134-2872-01		Choke control	
82	1	1	9699-0028-02		Flat washer	8.4 X 16 X 1.5
83	1	1	9699-0062-02		Flat washer	8.4 X 22 X 1.5