



## Section: PARK 18HST POWER TAKE-OFF

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1818	1448				
1	2	2	9739-0831-22	Nut		
2	1	1	1134-3638-01	Electric pto-clutch		
3	1	1	1134-3712-01	Support stay		
4	2	2	9959-0820-16	Screw		
5	2	2	9739-0831-22	Nut		
8	1	1	1134-2871-03	Relay		
9	1	1	9997-0520-16	Screw		
10	1	1	9739-0531-22	Nut		
16		1	1134-2857-01	Switch		
17		1	1134-2902-02	Symbol plate-green		
23	1		1134-3379-01	Spring		
25	1	1	1134-1565-01	Spacer		
27	1	1	1134-3658-01	Tensioning arm		
28	1	1	9997-1040-12	Screw		
30	1	1	1134-3663-01	Tension wheel		
31	1	1	9739-1031-22	Nut		
34	1	1	9997-0850-16	Screw		
35	1	1	9699-0056-02	Flat washer		
36	2	2	1134-0052-00	Bearing spacer		
37	1	1	1134-1769-02	Belt pulley assy		
38	2	2	9651-0040-04	.Retaining ring		
40	1	1	1134-0051-09	.Spacer		
41	2	2	9549-0019-00	.Ball bearing		
42	1	1	1134-0057-00	Centre shaft		
43	1	1	9699-0109-02	Flat washer		
44	1	1	1134-0222-00	Washer		
45	1	1	9959-1025-16	Screw		
46	1	1	1134-1730-01	Tension wheel arm		
47	2	2	1134-1888-01	Spacer		
48	1	1	1134-1770-01	Tension roller		
52	1	1	1134-1893-01	Spring attachment		
53	2	2	9699-0062-02	Flat washer		
54	1	1	9997-0865-12	Screw		
55	1	1	1134-1322-01	Spring		
56	1	1	9987-5357-12	Screw		
57	1	1	1134-9047-01	V-belt	=9585-0088-00	
60	1		1134-3654-01	Finger guard		
61	2		9739-0631-22	Nut		
62	2		9959-0612-16	Screw		
91	1	1	9739-1031-22	Nut		
92	1	1	1134-0041-03	Collar		
93	1	1	9997-1070-12	Screw		