



Section: JB 51 ENGINE BELT TENSIONER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1113					
1	4	9997-0845-12	Screw			
2	4	9699-0028-02	Flat washer			
3	4	9683-0030-02	Lock washer			
4	4	9799-0831-02	Nut			
8	1	1482-0648-01	Heat shield			
9	1	1482-0550-01	Tension roller-reve			
10	1	1482-0698-01	.Screw			
11	1	1482-0689-01	.Bushing			
12	1	1482-0550-01	.Tension roller-rev			
13	1	9799-1031-02	.Nut			
14	1	1482-0690-01	Spring			
15	2	9915-0606-15	Set screw			
16	1	1482-0644-01	Pulley-reverse			
17	1	9600-0053-00	Key			
18	1	1482-0681-01	Guide-inner			
19	1	1482-0680-01	Guide-outer			
21	1	1482-0680-01	Guide-outer			
22	2	9915-0808-15	Set screw			
23	1	1482-0488-01	Belt pulley			
24	1	1482-0040-01	Key			
26	1	1482-0688-01	Fitting plate			
27	1	9997-0635-12	Screw			
28	1	9683-0025-02	Lock washer			
29	1	9799-0631-02	Nut			
30	2	9683-0030-02	Lock washer			
31	2	9987-5116-16	Screw			
32	1	9898-0625-16	Screw			
33	1	1482-0545-01	Console			
34	1	9699-0028-02	Flat washer			
35	1	9683-0025-02	Lock washer			
36	1	9799-0631-02	Nut			
37	1	9699-0028-02	Flat washer			
38	1	9683-0030-02	Lock washer			
39	1	9997-0816-16	Screw			
40	1	1482-0559-01	.Spring			
41	1	1482-0699-01	.Washer			
42	1	9997-1030-16	.Screw			
43	1	1482-0701-01	.Idle pulley forwar			
44	1	1482-0689-01	.Bushing			
46	1	9650-0016-04	.Lock ring			
47	1	9699-0035-02	.Flat washer			
48	1	9799-1031-02	.Nut			
49	1	1482-0695-01	Tension roller assy			