



## Section: 928e-928eT AUGER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2837	2838				
480	1	1	1812-1261-01	Auger pulley		
482	1	1	1812-1167-01	Key		
483	1	1	9699-0038-02	Flat washer		
484	1	1	9743-5421-32	Nut		
485	1	1	1812-1397-01	Spacer		
490	1	1	1812-1250-01	Retainer bearing		
491	1	1	1812-1383-01	Ball bearing		
493	3	3	9988-3619-16	Screw		
499	3	3	9795-3631-02	Nut		
500	1		1812-1531-01	Auger housing		
500		1	1812-1548-01	Auger housing		
509	2	2	1812-1430-01	Plug		
510	1	1	1812-1449-01	Scraper blade		
511	5	5	9899-3622-16	Screw		
514	5	5	9795-3631-02	Nut		
520	1	1	1812-1445-01	Auger-LH		
521	1	1	1812-1454-01	Auger-RH		
522	1	1	1812-9005-01	Shear bolt kit		
523	3	3	1812-0531-01	.Spacer		
524	3	3	1812-0812-01	.Locking nut		
525	2	2	1812-0347-01	Bearing		
527	4	4	1133-0057-01	Screw		
540	2	2	1812-1426-01	Height adjust skid		
541	4	4	9899-3622-16	Screw		
542	4	4	9699-0029-02	Flat washer		
543	4	4	9683-0030-02	Lock washer		
544	4	4	9795-3631-02	Nut		

test