



## Section: SPREADER ART.NO 13-1987-11

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
1987						
1	1	1319-3024-01	O-ring			
2	2	1319-3038-01	Washer			
3	2	9743-3521-32	Nut			
4	1	1319-3036-01	Agitator spring			
5	1	9599-0070-02	Split pin			
6	5	1319-3033-01	Screw			
7	11	9699-0026-02	Flat washer			
8	1	1319-3025-01	O-ring			
9	1	1319-3031-01	Fan shaft bearing			
10	1	1319-3047-01	Hopper			
11	1	1319-3046-01	Shutter plate			
12	1	9652-0015-04	Retaining ring			
13	4	9988-3519-16	Screw			
14	1	1319-3050-01	Hopper support			
15	1	1319-3037-01	Fan			
16	1	1319-3039-01	Fan driver			
17	1	1319-3040-01	Lock clip			
18	1	1319-3041-01	Gearbox and axle as			
18A	1	1319-3026-01	.Pinion			
18B	1	1319-3027-01	.Gear			
18C	1	1319-3028-01	.Pinion carrier			
18D	2	1319-3029-01	.Housing half			
18E	1	1319-3032-01	.Fan shaft			
18F	1	1319-3034-01	.Gearbox cap			
18G	1	9594-0009-00	.Locating pin			
18H	1	9594-0105-00	.Locating pin			
18I	4	1319-3035-01	.Screw			
18J	1	1319-3042-01	.Axle			
19	2	1319-3030-01	Axle bearing			
20	7	9699-0038-02	Flat washer			
21	2	1319-3044-01	Hairpin cotter			
22	2	1319-3043-01	Wheel			
23	2	1319-3045-01	E-ring			
24	4	9988-3538-12	Screw			
25	2	9988-3545-12	Screw			
26	2	1319-3052-01	Brace			
27	2	1319-3051-01	Tow tube			
28	11	9743-3521-32	Nut			
29	2	9988-3564-12	Screw			
30	1	1319-3055-01	Cross bar			
31	1	1319-0283-00	Hitch pin			
32	1	1319-1692-01	Spring pin			
33	1	9988-3525-16	Screw			
34	1	1319-3049-01	Shutter handle			
35	1	1319-3017-01	Vinyl grip			
36	1	1319-3048-01	Gage plate			
37	1	9899-3622-16	Screw			
38	1	1319-3056-01	Curved spring washe			
39	1	1319-3054-01	Gage stop			
40	1	1319-3053-01	Knob			