



## Section: PARK PRESIDENT 16 PARK MILLENIUM SEAT

| Pos. | Quantity | Spare part No | Description | Kit          | Notes               | New |
|------|----------|---------------|-------------|--------------|---------------------|-----|
|      | 1416     | 1359          | 1360        |              |                     |     |
| 1    | 1        | 1             | 1           | 1134-3800-01 | Seat bracket-yellow |     |
| 2    | 1        | 1             | 1           | 1134-2163-01 | Rod                 |     |
| 3    | 1        | 1             | 1           | 1134-2166-01 | Spacer              |     |
| 4    | 1        | 1             | 1           | 1134-0019-00 | Spring nut          |     |
| 5    | 1        | 1             | 1           | 9595-0160-00 | Locating pin        |     |
| 6    | 2        | 2             | 2           | 9799-0831-02 | Nut                 |     |
| 7    | 1        | 1             | 1           | 1134-2847-01 | Shaft               |     |
| 8    | 1        | 1             | 1           | 1134-2846-01 | Tube                |     |
| 9    | 2        | 2             | 2           | 1134-1650-01 | Tie bar             |     |
| 10   | 1        | 1             | 1           | 1134-3871-02 | Pivot shaft         |     |
| 11   | 2        | 2             | 2           | 9997-0816-02 | Screw               |     |
| 12   | 4        | 4             | 4           | 9699-0062-02 | Flat washer         |     |
| 13   | 2        | 2             | 2           | 9747-0831-02 | Lock nut            |     |
| 14   | 1        | 1             | 1           | 1134-3878-01 | Seat bracket-R.H.   |     |
| 15   | 1        | 1             | 1           | 1134-3878-02 | Seat bracket-L.H.   |     |
| 16   | 1        | 1             | 1           | 1134-3876-01 | Spring shackle      |     |
| 17   | 1        | 1             | 1           | 1134-3879-01 | Seat spring         |     |
| 18   | 1        | 1             | 1           | 1134-1883-01 | Axle                |     |
| 19   | 1        | 1             | 1           | 1134-0022-00 | Control rod         |     |
| 20   | 2        | 2             | 2           | 9672-0004-02 | Lock washer         |     |
| 21   | 1        | 1             | 1           | 1134-0050-00 | Seat rod            |     |
| 22   | 1        | 1             | 1           | 1134-2454-01 | Shaft               |     |
| 23   | 2        | 2             | 2           | 9672-0006-02 | Lock washer         |     |
| 30   | 2        | 2             | 2           | 1134-2961-01 | Seat adapter        |     |
| 31   | 2        | 2             | 2           | 1134-1711-01 | Knob                |     |
| 32   | 2        | 2             | 2           | 9699-0062-02 | Flat washer         |     |
| 33   | 2        | 2             | 2           | 9898-0820-16 | Screw               |     |
| 34   | 4        | 4             | 4           | 9988-3616-16 | Screw               |     |
| 35   | 1        |               |             | 1134-2541-01 | Seat                |     |
| 36   |          | 1             | 1           | 1134-3286-01 | Seat                |     |

test