


4 - SPEED

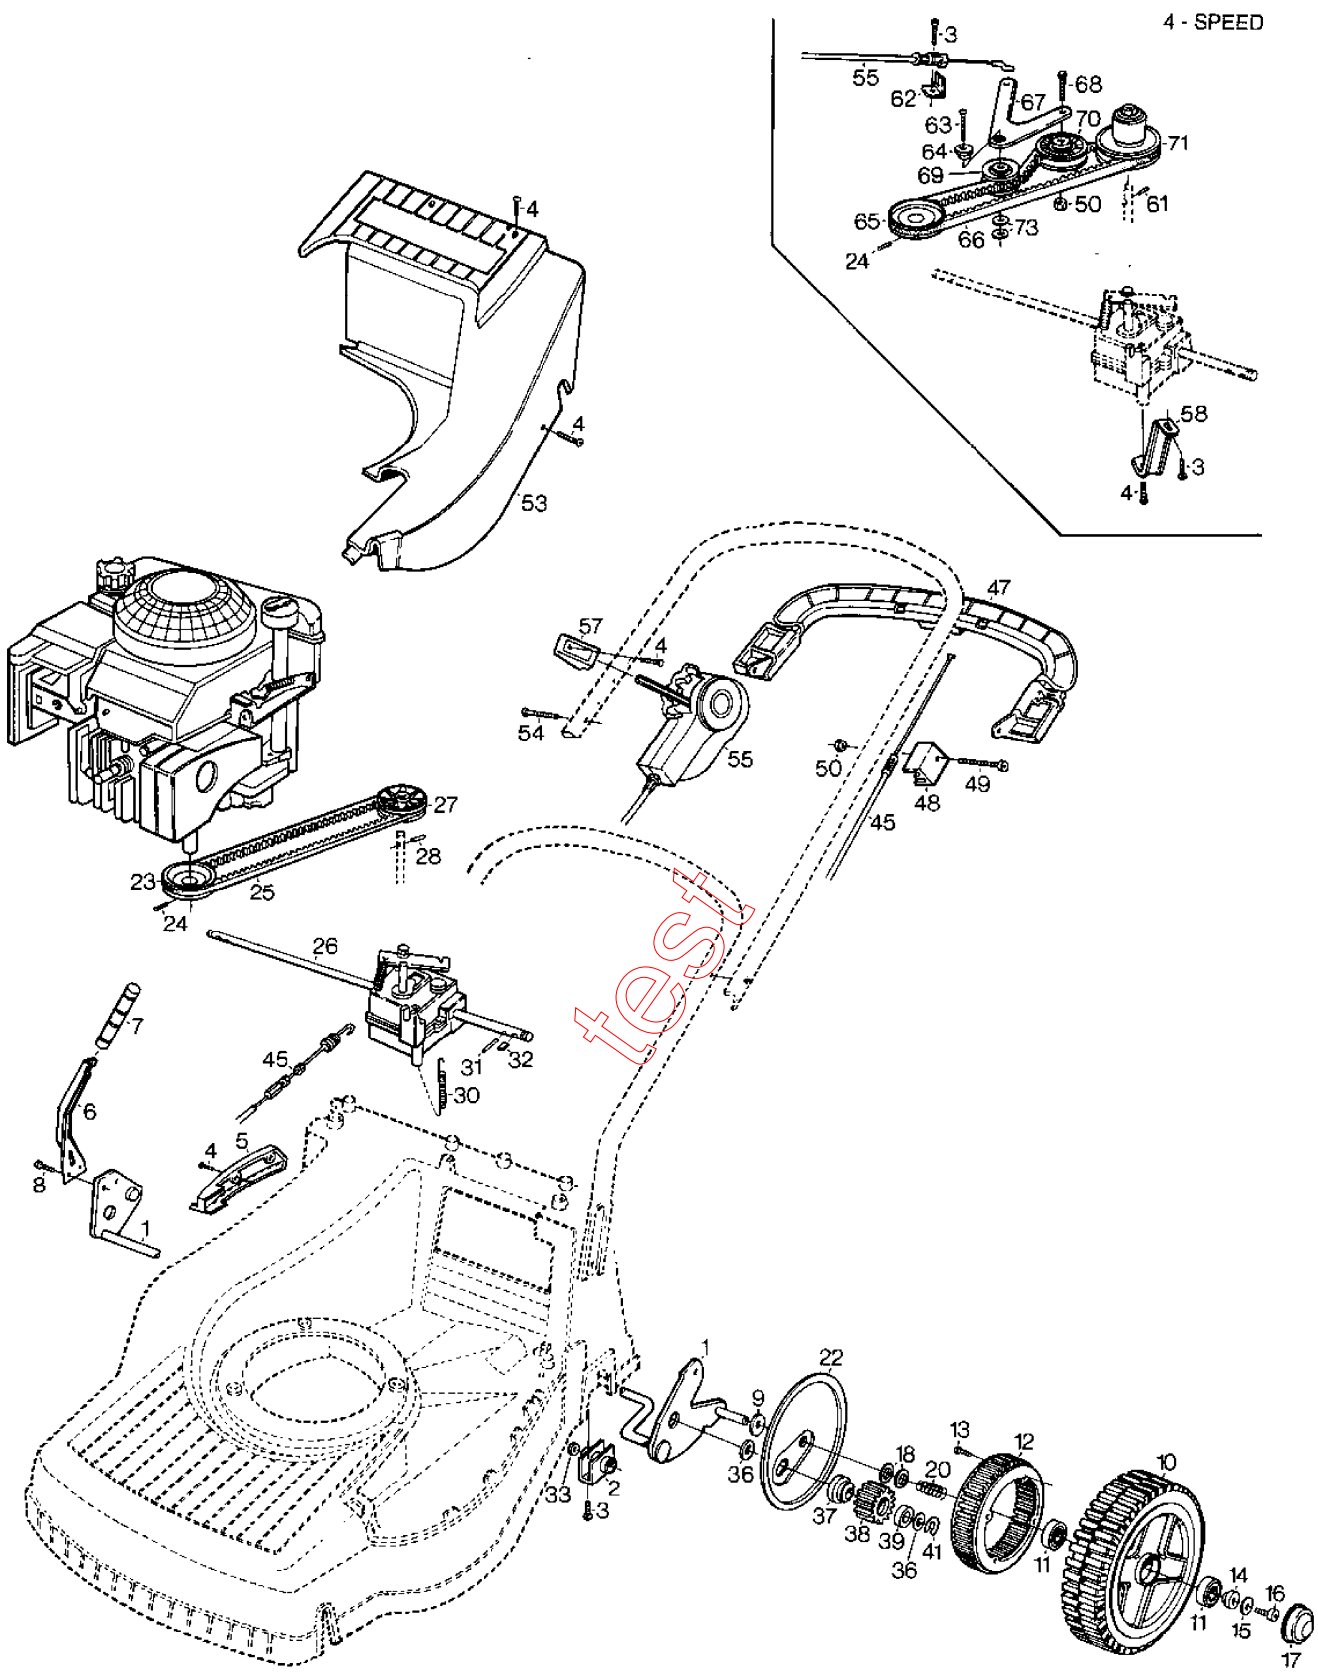

## Section: TURBO 48S DE LUXE TRANSMISSION REAR WHEELS

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	5204	5604				
1	1	1	1111-2808-01		Rear axle	
2	2	2	1111-2814-01		Bushing	
3	4	6	9947-0616-16		Screw	
4	5	7	9838-9522-12		Screw	
5	1	1	1111-2798-01		Height adj.quadrant	
6	1	1	1111-2816-01		Height adj.lever	
7	1	1	1111-2817-01		Lever knob	
8	2	2	9943-0612-16		Screw	
9	2	2	9699-0037-02		Washer	
10	2	2	1111-2346-01		Wheel w/o bearing	
11	4	4	9549-0001-00		Ball bearing	
12	2	2	1111-2109-01		Gear ring	
13	8	8	9841-0410-16		Screw	
14	2	2	1111-2423-01		Spacer	
15	2	2	9699-0100-02		Washer	
16	2	2	9943-0620-16		Screw	
17	2	2	1111-2077-01		Hub cap	
18	4	4	9699-0115-02		Washer	
20	2	2	1111-3060-01		Spring	
22	2	2	1111-3229-01		Cover plate	
23	1		1111-2915-01		Engine belt pulley	
24	1	1	9910-0612-16		Set screw	
25	1		1111-9061-01		V-belt	
26	1	1	1111-3046-01		Transmission	
27	1		1111-3047-01		Belt pulley	
28	1		9595-0235-00		Locating pin	
30	1		1111-2822-01		Tension spring	
31	2	2	1111-2382-01		Pin	
32	2	2	1111-3256-01		Drive key	
33	2	2	9404-0083-00		Seal ring	
36	4	4	9695-0013-00		Washer	
37	2	2	1111-2829-01		Lock washer	
38	2	2	1111-3230-01		Pinion-alum. wheel	
39	2	2	1111-2830-01		Support washer	
41	2	2	9652-0010-04		Snap ring	
45	1	1	1111-2967-01		Clutch cable	
47	1	1	1111-2954-01		Control handle	
48	1	1	1111-2969-01		Cable attachment	
49	1	1	9948-0660-16		Screw	L = 60 mm
50	1	2	9747-0631-02		Lock nut	
53	1		1111-2794-01		Cover-yellow	
53		1	1111-2794-12		Cover-grey	
54		2	9838-9540-12		Screw	
55		1	1111-2971-01		Variator control	
57		1	1111-2941-01		.Knob	
58		1	1111-2943-01		Bracket	
61		1	9594-0026-00		Locating pin	
62		1	1111-2469-01		Attachment	
63		1	9943-0650-16		Screw	
64		1	1111-2423-01		Spacer	
65		1	1111-2433-01		Engine belt pulley	
66		1	1111-9065-01		V-belt	
67		1	1111-2942-01		Tension arm	
68		1	9997-0630-12		Screw	
69		1	1111-2747-01		Tension roller	
70		1	1111-2746-01		Belt pulley	
71		1	1111-3001-01		Variator assy	
73		2	9699-0060-02		Flat washer	