



Section: MULTICLIP 46S-46SE TRANSMISSION

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	3690	3699	3603				
1	1	1	1	1111-2900-01		Wheel mounting-R.H.	
2	1	1	1	1111-2901-01		Wheel mounting-L.H.	
3	2	2	2	9548-0014-00		.Bronze bearing	
4	1	1	1	1111-2549-01		.Plastic knob	
5	2	2	2	1111-3065-01		Spacer	
6	2	2	2	1111-2561-01		Cover plate	
7	2	2	2	1111-2382-01		Pin	
8	2	2	2	1111-2635-02		Gear wheel	
9	2	2	2	9699-0100-02		Washer	
10	2	2	2	9943-0612-16		Screw	
16	2	2	2	9699-0069-02		Flat washer	
17	2	2	2	1111-3060-01		Spring	
18	2	2	2	1111-2665-01		Wheel assy	
19	1	1	1	1111-9047-01		.Ball bearing kit	
20	2	2	2	1111-1184-01		.Bearing cone	
21	2	2	2	9699-0100-02		Washer	
22	2	2	2	9943-0612-16		Screw	
23	2	2	2	1111-3085-01		Hub cap-yellow	
23	2	2		1111-3085-03		Hub cap-white	
23	2			1111-3085-06		Hub cap-black	
30	1	1	1	1111-2633-01		Front cover-yellow	
30	1	1		1111-2633-02		Front cover-black	
31	1	1	1	9943-0530-16		Screw	L = 30 mm
32	2	2	2	9943-0540-16		Screw	L = 40 mm
33	2	2	2	9739-0531-22		Nut	
40	1	1	1	1111-9062-01		V-belt	
41	1	1	1	1111-2915-01		Engine belt pulley	
42	1	1	1	9910-0612-16		Set screw	
45	1	1	1	1111-3055-01		Transmission assy	
46	1	1	1	1111-3047-01		.Belt pulley	För d:o
46	1	1	1	9594-0055-00		.Locating pin	För d:o
49	1	1	1	1111-3060-01		Spring	
54		2		9838-9540-12		Screw	
55		1		9838-9216-12		Screw	
56		1		9400-0186-00		Starting switch ass	
57		1		1134-2848-01		.Ignition key	
58		1		1111-2020-01		Housing	
59		1		1111-2021-01		Cover	
60		1		1111-2562-02		Harness	
61			1	9948-0660-16		Screw	L = 60 mm
61	1	1		9948-0640-16		Screw	L = 40 mm
62	1	1	1	1111-2969-01		Cable attachment	
63	1	1	1	1111-2954-01		Control handle	
64	1	1	1	1111-2967-03		Clutch cable	
66	1	1	2	9747-0631-02		Lock nut	
69		2		9865-0580-16		Screw	
70		2		9693-0004-02		Washer	
71		1		1111-2733-01		Cover	
72		1		9400-0218-00		Battery	
73		1		9400-0219-00		Charger	
74		2		9739-0531-22		Nut	
75		1	1	1111-2018-01		Cable holder	
76		1	1	9836-9216-12		Screw	
77	1	1	1	9579-0008-00		Cable holder	